


COMPRESSOR — MODELS YTJ 67, 76, 85 AND 95 AND MODELS YDTJ 67, 76, 85, AND 95 & YDTJ-CB

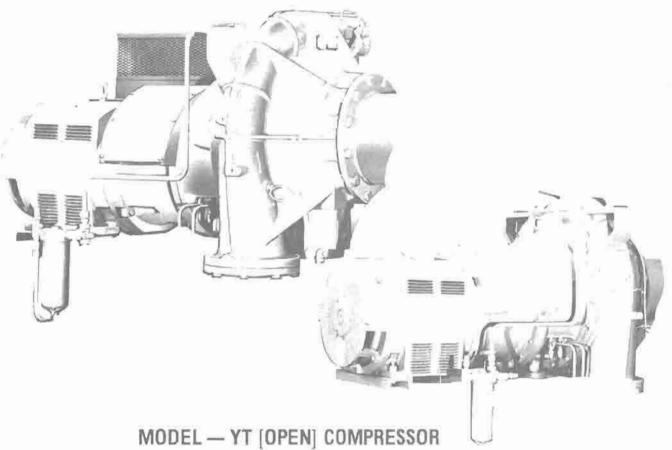

Compressor Code	The second se		
B1	YTJ - 67	364-46974-002	
B2	YTJ - 76	364-46974-003	
C1	YTJ - 85	364-46974-004	
C2	YTJ - 95	364-46974-005	
B1	YDTJ - 67	364-47329-002	
B2	YDTJ - 76	364-47329-003	
C1	YDTJ - 85	364-47329-004	
C2	YDTJ - 95	364-47329-005	
C3	YDTJ - CB	364-47329-018	


# CENTRIFUGAL COMPRESSOR PARTS LIST

## MODELS YTJ 67, 76, 85, 95 AND YDTJ 67, 76, 85 AND 95 & CB

ltem		N	ODEL YTJ	M	DDEL Y DTJ	Item		N	MODEL YTJ	M	ODEL YDTJ
No.	Dev. Jun	Qty.	Part No.	Qty.	Part No.	No.	Description	Qty.	Part No.	Qty.	Part No.
1	Scr., Cap 3/8 x 1-1/2 Lg.	3	021-01497	3	021-01497	56	Spring, Helical	1	029-06143	1	029-06143
2	Washer, Impeller Clam.	1	064-46146	1	064-46146	♦■57	Gasket, 13/16 O.D.	1	065-21657A	1	065-21657A
3	Scr., Set 1/2 x 3/4 Lg.	2	021-00825	2	021-00825	58	Cap, Seal	1	065-06394	-	-
4	Seal, O-Ring	1	028-10178	1	028-10178	59	Scr., Cap 3/8 x 1 Lg. Hex Soc.	3	021-02585	3	021-02585
♦∎5	Plug, Pipe 1/8	2	023-01970	2	023-01970	60	Control, Temp. (Discharge)	1	025-15381-002	1	025-25163
▲ 6	Scr., Cap 1/4 x 1/2 Lg. 12 Pt. Hd.	2	021-11970	2	021-11970	61	Plug, Pipe 1/2	2	023-01994	2	023-01994
▲ 7	Retainer, Bearing	2	064-46886	2	064-46886	62	Connr., Fla. Hyd 3/4 O.D. x3/4 P.T. 45 $^{ m o}$	1	023-10696	1	023-10696
▲ 8	Bearing, Pinion Gear	2	064-46885	2	064-46885	<b>▲</b> 63	Plug, Hex Hd.	1	064-46282	1	064-46282
9	Gear, Set	1	See Sales Order	1	See Sales Order	♦■ 64	Seal, O-Ring	1	028-12209	1	028-12209
<b>▲</b> 10	Bearing, Gear Rear	1	064-46729	1	064-46729	65	Sealant	A.R.	013-02023	A.R.	013-02023
▲ 11	Collar, L. S. Thrust	1	064-46623	1	064-46623	♦■ 66	Seal, O-Ring	1	028-11999	1	028-11999
▲ 12	Scr., Cap 5/16 x 1-3/4 Lg. 12 Pt. L.H.	1	021-11532	1	021-11532	67	Lockwasher, Spring	1	021-05271	1	021.05271
▲ 13	Pin, Slot Spring	2	029-04551	2	029-04551	68	Plug, Dot	2	029-13655	2	029-13655
14	Scr., Cap 3/8 x 1-1/4 Lg.	12	021-01485	12	021-01485	69	Pipe, Plug 3/4 NPTE	2	023-04208	2	023-04208
15	Lockwasher, Spg. 3/8	12	021-05269	-	-	• 70	Seal, O-Ring	2	028-04519	2	028-04519
♦∎16	Seal O-Ring	1	028-11997	1	028-11997	• 71	Collar, Shaft Seal	1	064-46755	1	064-46755
17	Flange, Special	1	064-46070	1	064-46070	• 72	Ring, Shaft Seal	1	029-08605-010		029-08605-010
♦∎18	Gasket	1	064-46629	1	064-46629	• 73	Spring, Helical	1	029-11568-003	1 1	029-11568-003
19	Cover	1	364-46626	1	364-46626	• 74	Cover, Seal	1	064-46634	1	064-47335
20	Washer, Plain	-	-	12	021-16841	75	Scr., Cap 3/8 x 1 Lg.	10	021-01477	10	021-01477
21	Seal, O-Ring 17, 772 I.D.	1	028-12213	1	028-12213	▲ 76	Key, 1/2 x 1/2 x 1-1/2 Lg.	1	064-46209	1	064-46209
▲ 22	Bearing, Thrust H.S. (Rear)	1	064-46127	1	064-46127	77	Coupting, Driven	1	064-46635	1	064-46635
23	Plug, Pipe 1/4	3	023-01973	3	023-01973	78	Washer, Coupling	1	064-46636	1	064-47374
▲ 24	Cover, Thrust H.S.	1	064-46122	1	064-46122	79	Scr., Cap 1/2 x 1-1/4 Lg.	1	021-16252	1	021-16252
♦▲25	Seal, O-Ring	1	028-11998	1	028-11998	80	Pin, Slot Spring 1/4 Oia. x 1 Lg.	2	029-06862	2	029-06862
♦▲26	Seal, O-Ring	1	028-12208	1	028-12208	81	Fill, Piece	1	064-46637	1	064-46637
▲ 27	Collar, Thrust H.S. (Rear)	1	064-46130	1	064-46130	▲● 82	Seal, O-Ring 4 I.D. x 1/8 Section	1	028-12210	1	028-12210
▲ 28	Pin, Slot Spring	2	029-03991	2	029-03991	83	Valve, Stop, Angle 1/4 NPTE x 1/4 Fla.		028-03836	1	028-03836
▲ 29	Scr., Cap 1/2 x 1-1/4 Lg.	1	021-01567	1	021-01567	84	Key, 5/8 x 5/8 x 2 Lg.	2	064-46517	-	
30	Nameplate, Data	1	029-13380	1	029-13380	85	Scr., Cap 3/8 x1-1/4 Lg. Hex Soc.	4	021-01486	4	021-01486
31	Washer, Plain	12	021-01274	12	021-16814	86	Support, Motor	1	See Sales Order		See Sales Order
32	Plug, Flais. 9/16	1	023-07158	1	023-07158	87	Scr., Cap 3/8 x 2 Lg.	28	021-01510	28	021-01510
33	Nameplate Pat.	1 8	029-13270-002	1	029-13270-002 021-03720	88	Guard, Coupling	1	064-46745	1	064-47418
34	Scr., Drive No. 4 x 1/4 Lg.	3	021-03720 021-01379	3	021-03720	89 90	Scr., Cap 1/4 x 1/2 Lg. Elbow, (90° Tube x 3/4 MPT		021-02438		-
35	Scr., Cap 1/4 x 3/4 Lg.	1	364-29573	1	364-29573	90 91	Tee, Screw 3/4F x 1/2F x 3/4F	1	023-10700 023-11330	1 2	023-10700 023-11330
36	Shaft, Control	2	028-12200	2	028-12200	92	Connr., Fla.Hyd 1/4 O.D. x1/8 NPTE	1	023-09669	1	023-09669
37	Seal, O-Ring	1		1	028-12200	93	Conn., Oil Orain	1	364-46448	1	364-46448
38 39	Seal, O-Ring Gasket, Bellows Cover		028-12201 028-00781	1	028-02781	94	Coupling, Driver		364-46448 064-46639	1	364-46448 064.46639
39 40	Cover, Shaft Control	1	028-00781	1	028-00787	94	Motor	1	See Sales Order	1 L	See Sales Order
40	Scr., Cap 12 Pt. Hd. 3/8 x 1-1/2 Lg.	2	021-11175	2	021-11175	96	Valve, Solenoid	1	025-25935	1	025-25935
41	Lever, Prv. External	1	364-28236	1	364-47108	97	Valve, Seal Oil Relief		-	$\left  \begin{array}{c} 1 \\ 1 \end{array} \right $	022-08700
42	Washer, Special	1	064-08815	1	064-08815	98	Bushing, Pipe 3/4 NPTE x1/2 NPTI	2	023-04010	2	023-04010
43	Scr., Cap 1/2 x6 Lg. 12 Pt. Hd.	i	021-11998	1	021-11998	99	Nipple, Pipe 1/2 x 1-1/8 Lg.	2	070-01284	2	070-01284
44	Bolt, Shid.	li	064-28262	1	064-28262	100	Tube, Steel 3/8 x .049 x11-7/16 Lg.	1	066-39369	1	066-39369
45	Nut, Hex 1/4	8	021-00450	8	021-00450	101	Conn. Fta. Hyd 3/8 x1/2 NPTE	2	023-10829	2	023-10829
40	Pin, Dowel 3/8 x 2	2	029-18459	2	029-18459	102	Scr., Cap Hex Hd. 3/8-16 x 3/4 Lg.	-	-	12	021-01467
48	Lockwasher, Spring 1/4	2	021-05267	2	021-05267	103	Coupling	_	_	1	029-20006
40	Washer, 9/32 I.D.	4	021-05165	4	021-05165	104	Key	_	_	1	064-47333
▲ 50	Ball, Steel	1	029-17369	1	029-17369	105	Scr., Cap Hex Hd. 3/4-10 x2-1/4 Lg.	-	_	8	021-01661
51	Comp. Sealer Gr. AVV	A.R.	013-01671	A.R	013-01671	106	Strip, Neoprene – 1/8 Thick		-	7.5 ft.	028-08091
52	Scr. Cap Hex Hd. 3/8 x 1 Lg.	14	021-01477	14	021-01477	107	Cover	-	_	2	064-47332
53	Sealer	A.R.	013-01678	A.R.	013-02825	108	Elbow, 90° 3/4 Tube x3/4 MPT	-	_	1	025-10700
54	Plunger, Valve	1	064-14790	1	064-14790	109	Scr., Cap Hex Hd. 3/8-16 x1/2 Lg.	_	_	1	021-14380
55	Washer, Plain 17/64	5	021-11973	_							

▲ YTJ and YDTJ 67 – 95	Bearing Kit Part No. 464-46887.
<ul> <li>YTJ and 67 – 95</li> </ul>	See Page 18.
YTJ and YDTJ 67 – 76	Gasket Kit Part No. 364-47164.
<ul> <li>YTJ, YDTJ 85 – 95 and YDTJ-CB</li> </ul>	Gasket Kit Part No. 364-47163.

\* For YDTJ-CB compressor parts see page 19B.

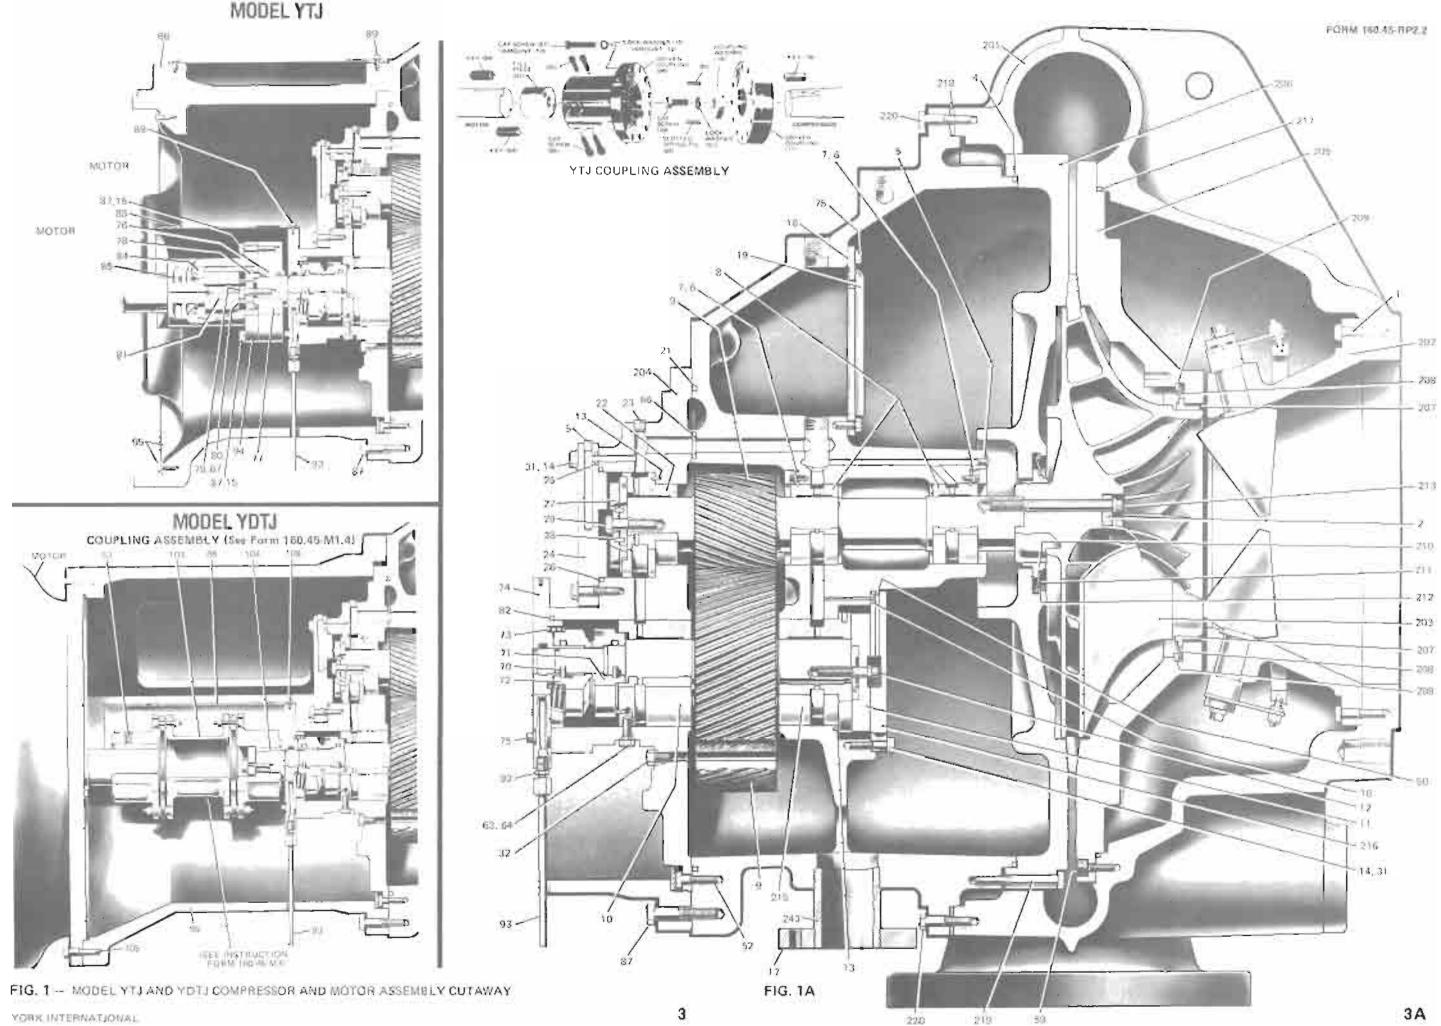

YORK INTERNATIONAL


219

### **CENTRIFUGAL COMPRESSOR VARIABLE COMPONENTS**

Refer to Fig's. 1 and 2

Refer to Fig's. 1A and 2A

			M	ODE	LS YTJ 67	, 76	6, <b>85 AND</b>	95			MODEL	S YI	DTJ 67, 76	, 85	AND 95 8	k CE	;
ltem	Deseries		YTJ-67		YTJ-76		YTJ-85		YTJ-95		YDTJ-67		YDTJ-76		YDTJ-85		Y
No.	Description	Qty.	*364-47091-002	Qty.	*364-47091-003	Qty.	*364-47091-004	Qty.	*364-47091-005	Qty.		Qty.	364-47329-003	Qty.	364-47329-004	Qty.	-
200*	Common Parts	1	*364-47091-001	1	*364-47091-001	1	*364-47091-001	1	*364-47091-001	1	364-47429-001	1	364-47429-001	1	364-47429-001	1	3
201	Scroll, Rotor	1	064-46976	1	064-46976	1	064-46977	1	064-46977	1	064-47107	1	064-47107	1	064-47083	1	0
202	Device, Prerotation	1	364-15250	1	364-15249	1	364-15255	1	364-15266	1	364-15250	1	364-15249	1	364-15255	1	3
203	Impeller	1	064-46612	1	064-46613	1	064-46614	1	064-46615	1	064-46612	1	064-46613	1	064-46614	1	0
204	Support, Rotor/Brg. Hsg.	1	364-46620	1	364-46620	1	364-46621	1	364-46621	1	364-46620	11	364-46620	1	364-46621	1	3
205	Plate, Nozzle Base	1	064-46566	1	064-46565	1	064-46563	1	064-46564	1	064-46566	1	064-46565	1	064-46563	1	0
206	Plate, Diffuser	1	064-46591	1	064-46592	1	064-46593	1	064-46594	1	064-46591	1	064-46592	1	064-46593	1	0
207	Ring, Seal Impeller	1	064-20430	1	064-20431	1	064-21418	1	064-21417	1	064-2:0430	1	064-20431	1	064-21418	1	0
208	Washer, Flat Spring	1	064-06242	1	064-05741	1	064-05683	1	064-05656	1	064-06242	1	064-05741	1	064-05683	1	0
209	Ring, Ret. Oil Seal	1	064-06243	1	064-05742	1	064-05680	1	064-05588	1	064-06243	1	064-05742	1	064-05680	1	0
210	Ring, Seal	1	064-20435	1	064-20435	1	064-46185	1	064-46185	1	064-20435	1	064-20435	1	064-46185	1	0
211	Washer, Flat Spring	1	064-12887	1	064-12887	1	064-21429	1	064-21429	1	064-12887	1	064-12887	1	064-21429	1	0
212	Ring, Retaining Int.	1	029-05601	1	029-05601	1	029-08600	1	029-08600	1	029-05601	1	029-05601	1	029-08600	1	0
213	Scr., Cap 1/2–20 12 Pt. Hd.	5	021-15804	5	021-15804	5	021-12165	5	021-12165	5	021-15804	5	021-15804	5	021-12165	5	0
214	Nut, Hex	3	021-00474	3	021-00474	4	021-10171	4	021-10171	3	021-00474	3	021-00474	4	021-10171	4	0
215	Bearing, Gear (Front)	1	064-46622	1	064-46622	1	064-46124	1	064-46124	1	064-46622	1	064-46622	1	064-46124	1	0
216	Cover, L.S. Thrust	1	064-46624	1	064-46624	1	064-46625	1	064-46625	1	064-46624	1	064-46624	1	064-46625	1	06
217	Seal, O-Ring	1	028-10176	1	028-10176	1	028-10177	1	028-10177	1	028-10176	1	028-10176	1	028-10177	1	02
218	Gasket	1	064-46959	1	064-46959	1	064-46960	1	064-46960	1	064-4 6959	1	064-46959	1	064-46960	1	0
219	Scr., Cap 3/8–16 Soc. Hd.	3	021-16082	3	021-16082	3	021-16083	3	021-16083	3	021-16082	3	021-16082	3	021-16083	3	0
220	Scr., Cap 3/8-16 x 1-3/4	20	021-11916	20	021-11916	24	021-11916	24	021-11916	20	021-1 1916	20	021-11916	24	012-11916	24	02
221	PRV. Motor	1	025-17174	1	025-17174	1	025-17175	1	025-17175	1	025-17174	1	025-17174	1	025-17175	1	02
222		—		—								_					
223	<u> </u>	—		—		—		—								—	
224	Lever, Prerotation Internal	1	364-20399	1	364-20399	1	364-21442	1	364-21442	1	364-20399	1	364-20399	1	364-21442	1	36
225	Arm, Motor	1	025-17073	1	025-17073	1	064-33690	1	064-33690	1	025-17073	1	025-17073	1	064-47075	1	06
226	Ring, Fill	1	064-28284	1	064-28284	1	064-29258	1	064-29258	1	064-2:8284	1	064-28284	1	064-29258	1	06
227	Link, Ext. PRV and Motor	2	064-28260	1	064-28260	1	064-32604	1	064-32604	2	064-2:8260	1	064-28260	1	064-32604	1	06
228	Link Ext. PRV and Motor	_	·			1	064-28260	1	064-28260	—		1-		1	064-28260	1	06
229	Scr., Set No. 10 x 3/8 Hex Soc.					1	021-03910	1	021-03910					1	021-03910	1 1	02
230	Rod, Adj. for PRV	1	064-12314	1	064-12314	1	064-09080	1	064-09080	1	064-1:2314	1	064-12314	1	064-09080	1	06
231	Brg. Rod End	2	029-08343	2	029-08343	2	029-07015	2	029-07015	2	029-08343	2	029-08343	2	029-07015	2	02
232	Scr., Cap	1	021-11742	1	021-11742	1	021-11517	1	021-11517	1	021-11742	1	021-11742	1	021-11517	1	02
233	Scr., Cap	1	021-11141	1	021-11141	1	064-09078	1	064-09078	1	021-11141	1	021-11141	1	064-09078	1	06
234	Fill, Piece	3	064-12328	3	064-12328	1	064-09069	1	064-09069	3	064-1:2328	3	064-12328	1	064-09069	1	06
	Fill, Piece	—				1	064-09070	1	064-09070			-		1	064-09070	1	06
236	Nipple, Pipe 3/4 sch. 40	1	070-01455	1	070-01455	1	070-01455	1	070-01455	1	023-14778	1	023-14778	1	023-14778	1	02
237	Lockwasher, Spring	1	021-10815	1	021-10815	1	021-05271	1	021-05271	1	021-10815	1	021-10815	1	021-05271	1	02
	Scr. Cap 1/4—20 x 1 Lg.	3	021-11914	3	021-11914	4	021-11914	4	021-11914	3	021-11914	3	021-11914	4	021-11914	4	02
	Scr., Cap 1/4-20 x 1-1/2 Lg.	1	021-02399	1	021-02399	<u> </u>		—		1	021-02399	1	021-02399	_			
	Bolt, Shoulder	1	064-28286	1	064-28286	1	064-33744	1	064-33744	1	064-28286	1	064-28286	1	064-33744	1	06
	Sealant	_				.001	013-01678	.001	013-01678	—			<u> </u>	.001	013-01678	.001	
	Tube, 3/4 O.D. x .049 wall	A. R.	003-00952	A.R.	003-00952	A.R.	003-00952	A.R.	003-00952	1	064-47412	1	064-47412	1	064-47412	1	06
	Nipple, Pipe 2	1	070-02092	1	070-02092	1	070-02094	1	070-02094	1	023-14530	1	025-14530	1	025-14530	1	02
	Elbow, Scr., St., 3/4 – 90°	—						-						—	<u> </u>	-	
245	Lockwasher	20	021-08296	20	021-08296	24	021-08296	24	021-08296	20	021-08296	20	021-08296	24	021-08296	24	02

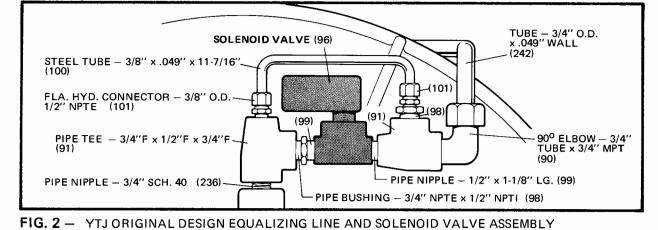

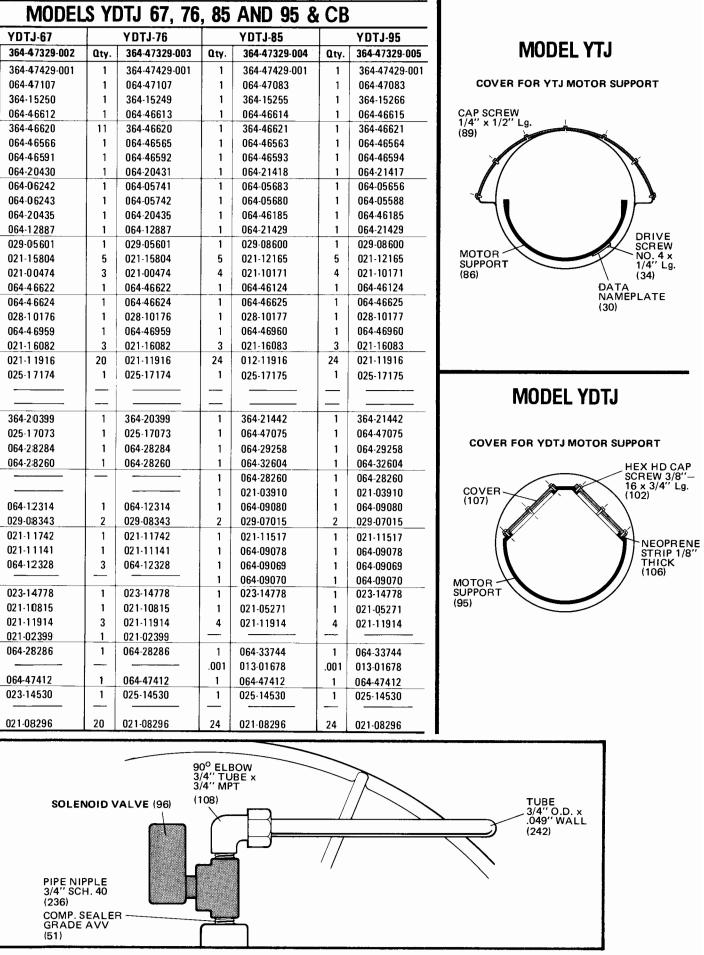


FIG. 2A - CURRENT DESIGN EQUALIZING LINE AND SOLENOID VALVE ASSEMBLY


4

\*NOTE: Part No. was 364-46794 and 364-46632 - To modify compressors - See Design History


3**B** 



FORM 160.45-RP2.2

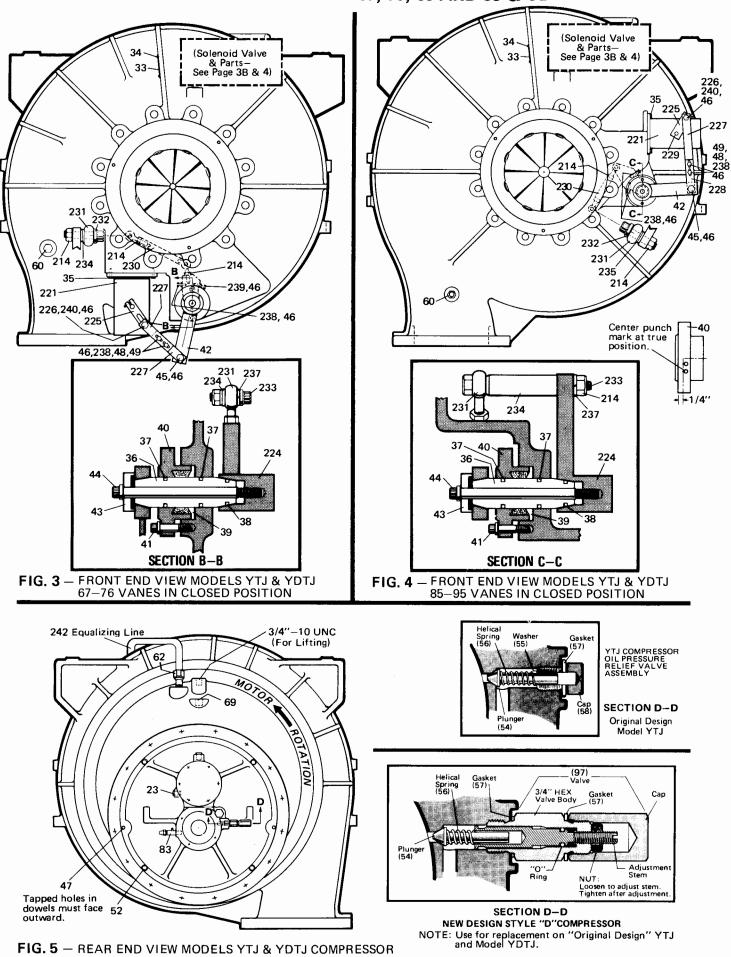

## COMPRESSOR — MODELS YTJ 67, 76, 85 AND 95 Prerotation Vane Housing Parts

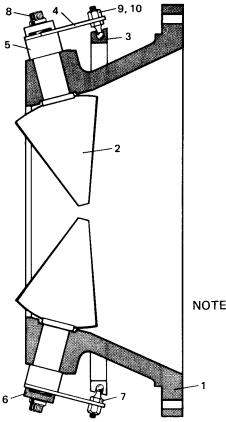

NOTE: For CB compressor PRV housing parts see page 19A.

		Models						
ltem	Part Description	YTJ or YD	TJ 67	YTJ or YDTJ 76				
		Part No.	Quan.	Part No.	Quan.			
1	Housing, Pre-Rotation	064-13486	1	064-13485	1			
2	Vane, Pre-Rotation	064-10618	9	064-10618	9			
3	Ring, Vane Driving	064-10815	1	064-10815	1			
4	A <b>r</b> m, Vane	064-10818	9	064-10818	9			
5	Washer	064-10819	9	064-10819	9			
6	Washer-Special	064-09289	9	064-09289	9			
7	Washer	021-11973	10	021-11973	10			
8	Screw, Cap 12 Pt. Hd. 3/8-24 UNF x 2 Lg.	021-11956	9	021-11956	9			
9	Screw, Ball	029-07017	9	029-07017	9			
10	Nut, Hex, 1/4-28 UNF 33	021-12943	9	021-12943	9			

		Models					
ltem	Part Description	YTJ or YD	TJ 85	YTJ or YDTJ 95			
		Part No.	Quan.	Part No.	Quan.		
1	Housing, Pre-Rotation	064-13481	1	064-13482	1		
2	Vane, Pre-Rotation	064-08822	8	064-08822	8		
3	Ring, Vane Driving	064-08813	1	064-08813	1		
4	Arm, Vane	064-08814	8	064-08814	8		
5	Washer	064-09061	8	064-09061	8		
6	Washer-Special	064-08815	8	064-08815	8		
7	Washer	021-11973	10	021-11973	10		
8	Screw, Cap 12 Pt. Hd. 3/8-24 UNF x 2 Lg.	021-11743	8	021-11743	8		
9	Screw, Ball	029-07017	8	029-07017	8		
10	Nut, Hex, 1/4-28 UNF 33	021-12943	8	021-12943	8		

FIG. 6 - PREROTATION VANE HOUSING PARTS

## MODEL YTJ 60 Hz Motor and Motor Support

	Voltage	MOT	FOR	MOTOR SUPPORT		
Motor Code	60 Hz Nameplate	Relian <b>c</b> e	Siemens	Reliance	Siemens	
	Maniepiate	Part No.	Part No.	Part No.	Part No.	
	200 O R 208	024-21269-201	024-21269-401	364-46643	364-4664	
	230 O R 240	024-21269-202	024-21269-402	364-46632	364-4664	
	380	024-21269-203	024-21269-403	364-46643	364-4664	
	416	024-21269-204	024-21269-404	364-46643	364-4664	
CF	440 OR 460 OR 480	024-21269-205	024-21269-405	364-46643	364-4664	
0.	575 OR 600	024-21269-206	024-21269-406	364-46643	364-4664	
	2300		024-21269-407		364-4664	
	3300		024-21269-408		364-4664	
	4000 OR 4160		024-21269-409		364-4664	
	200 O R 208	024-21269-210	024-21269-410	364-46643	364-4664	
	230 OR 240	024-21269-211	024-21269-411	364-46643	364-4664	
	380	024-21269-212	024-21269-412	364-46643	364-4664	
	416	024-21269-213	024-21269-413	364-46643	364-4664	
CG	440 OR 460 OR 480	024-21269-214	024-21269-414	364-46643	364-4664	
_	575 OR 600	024-21269-215	024-21269-415	364-46643	364-4664	
	2300		024-21269-416		364-4664	
	3300		024-21269-417		364-4664	
	4000 OR 4160		024-21269-418		364-4664	
	200 O R 208	024-21269-219	024-21269-419	364-46644	364-4664	
	230 OR 240	024-21269-220	024-21269-420	364-46644	364-4664	
	380	024-21269-221	024-21269-421	364-46644	364-4664	
	416	024-21269-222	024-21269-422	364-46644	364-4664	
CH	440 OR 460 OR 480	024-21269-223	024-21269-423	364-46644	364-4664	
	575 OR 600	024-21269-224	024-21269-424	364-46644	364-4664	
	2300		024-21269-425		364-4664	
	3300		024-21269-426		364-4664	
	4000 OR 4160		024-21269-427		364-4664	
	200 O R 208	024-21269-228	024-21269-428	364-46644	364-4664	
	230 OR 240	024-21269-229	024-21269-429	364-46644	364-4664	
	380	024-21269-230	024-21269-430	364-46644	364-4664	
	416	024-21269-231	024-21269-431	364-46644	364-4664	
CJ	440 OR 460 OR 480	024-21269-232	024-21269-432	364-46644	364-4664	
	575 OR 600	024-21269-233	024-21269-433	364-46644	364-4664	
	2300		024-21269-434		364-4664	
	3300		024-21269-435		364-4664	
	4000 OR 4160		024-21269-436		364-4664	
	200 O R 208	024-21269-237	024-21269-437	364-46644	364-4664	
	230 OR 240	024-21269-238	024-21269-438	364-46644	364-4664	
	380	024-21269-239	024-21269-439	364-46644	364-4664	
	416	024-21269-240	024-21269-440	364-46644	364-4664	
CK	440 OR 460 OR 480	024-21269-241	024-21269-441	364-46644	364-4664	
	575 OR 600	024-21269-242	024-21269-442	364-46644	364-4664	
	2300		024-21269-443		364-4664	
	3300		024-21269-444		364-4664	
	4000 OR 4160		024-21269-445		364-4664	

\* Maximum gear code for C2 and C3 Compressor with 60 Hz Turbo-Modulator.

\*\* Maximum gear code for C1 Compressor with 60 Hz Turbo-Modulator.

B1 and B2 Compressor 50 and 60 Hertz						
Speed Code	Part Number					
ĸw	029-14400-006					
КХ	029-14400-907					
KY	029-14400-908					
κz	029-14400-909					
LA	029-14400-910					
LB	029-14400-911					
LC	029-14400-912					
LD	029-14400-913					
LE	029-14400-914					
LF	029-14400-915					
LG	029-14400-916					
LH	029-14400-917					
LJ	029-14400-918					
LK	029-14400-919					
LL	029-14400-920					
LM	029-14400-921					
LN	029-14400-922					
LP	029-14400-923					
LQ	029-14400-924					
LR	029-14400-925					
LS	029-14400-926					
LT	029-14400-927					
C1, C2 a	and C3 Compressor					
50	and 60 Hertz					
<u>50</u> ка						
	and 60 Hertz					
κα	and 60 Hertz 029-14400-900					
KQ Kr	and 60 Hertz 029-14400-900 029-14400-901					
KQ KR KS KT KU	and 60 Hertz 029-14400-900 029-14400-901 029-14400-902					
KQ KR KS KT	and 60 Hertz 029-14400-900 029-14400-901 029-14400-902 029-14400-903					
KQ KR KS KT KU	and 60 Hertz 029-14400-900 029-14400-901 029-14400-902 029-14400-903 029-14400-904					
KQ KR KS KT KU KV	and 60 Hertz 029-14400-900 029-14400-901 029-14400-902 029-14400-903 029-14400-904 029-14400-905					
KQ KR KS KT KU KV KW	and 60 Hertz 029-14400-900 029-14400-901 029-14400-902 029-14400-903 029-14400-904 029-14400-905 029-14400-906					
KQ KR KS KT KU KV KW KX	and 60 Hertz 029-14400-900 029-14400-901 029-14400-902 029-14400-903 029-14400-904 029-14400-905 029-14400-906 029-14400-907					
KQ KR KS KT KU KV KW KX KY	and 60 Hertz 029-14400-900 029-14400-901 029-14400-902 029-14400-903 029-14400-904 029-14400-905 029-14400-906 029-14400-907 029-14400-908					
KQ KR KS KT KU KV KV KX KY KZ LA LB	and 60 Hertz 029-14400-900 029-14400-901 029-14400-902 029-14400-903 029-14400-904 029-14400-905 029-14400-906 029-14400-907 029-14400-908 029-14400-909					
KQ KR KS KT KU KV KW KX KZ LA LB LC	and 60 Hertz 029-14400-900 029-14400-901 029-14400-902 029-14400-903 029-14400-905 029-14400-905 029-14400-907 029-14400-907 029-14400-908 029-14400-909 029-14400-910 029-14400-911 029-14400-912					
KQ KR KS KT KU KV KW KX KY KZ LA LB LC LD*	and 60 Hertz 029-14400-900 029-14400-901 029-14400-902 029-14400-903 029-14400-904 029-14400-905 029-14400-906 029-14400-907 029-14400-908 029-14400-909 029-14400-910 029-14400-911 029-14400-913					
KQ KR KS KT KU KV KV KX KY KZ LA LB LC LD* LE	and 60 Hertz 029-14400-900 029-14400-901 029-14400-902 029-14400-903 029-14400-904 029-14400-905 029-14400-906 029-14400-907 029-14400-908 029-14400-909 029-14400-911 029-14400-912 029-14400-913 029-14400-914					
KQ KR KS KT KU KV KV KV KZ LA LA LB LC LD * LE LF	and 60 Hertz 029-14400-900 029-14400-901 029-14400-902 029-14400-903 029-14400-904 029-14400-905 029-14400-906 029-14400-907 029-14400-908 029-14400-909 029-14400-911 029-14400-912 029-14400-913 029-14400-914 029-14400-915					
KQ KR KS KT KU KV KV KV KZ LA LA LB LC LD LE LF LG	and 60 Hertz 029-14400-900 029-14400-901 029-14400-902 029-14400-903 029-14400-904 029-14400-905 029-14400-907 029-14400-907 029-14400-908 029-14400-909 029-14400-910 029-14400-911 029-14400-913 029-14400-913 029-14400-915 029-14400-916					
KQ KR KS KT KU KV KV KZ LA LA LB LC LD* LE LF LG LH**	and 60 Hertz           029-14400-900           029-14400-901           029-14400-902           029-14400-903           029-14400-904           029-14400-905           029-14400-906           029-14400-907           029-14400-908           029-14400-909           029-14400-901           029-14400-910           029-14400-911           029-14400-912           029-14400-913           029-14400-914           029-14400-915           029-14400-916           029-14400-917					
KQ KR KS KT KU KV KV KV KZ LA LA LB LC LD LC LD LE LF LG LH** LJ	and 60 Hertz 029-14400-900 029-14400-901 029-14400-902 029-14400-903 029-14400-904 029-14400-905 029-14400-906 029-14400-907 029-14400-908 029-14400-909 029-14400-910 029-14400-911 029-14400-913 029-14400-915 029-14400-916 029-14400-917 029-14400-918					
KQ KR KS KT KU KV KW KX KY KZ LA LB LC LD* LE LF LG LF LG LH** LJ LK	and 60 Hertz 029-14400-900 029-14400-901 029-14400-902 029-14400-903 029-14400-904 029-14400-905 029-14400-906 029-14400-907 029-14400-908 029-14400-908 029-14400-910 029-14400-911 029-14400-912 029-14400-913 029-14400-915 029-14400-915 029-14400-917 029-14400-918 029-14400-919					
KQ KR KS KT KU KV KV KZ LA LB LC LD* LE LF LF LG LH** LJ LK LL	and 60 Hertz           029-14400-900           029-14400-901           029-14400-902           029-14400-903           029-14400-904           029-14400-905           029-14400-906           029-14400-907           029-14400-908           029-14400-909           029-14400-901           029-14400-910           029-14400-911           029-14400-913           029-14400-914           029-14400-915           029-14400-916           029-14400-917           029-14400-918           029-14400-919           029-14400-918           029-14400-919					
KQ KR KS KT KU KV KV KW KX KY KZ LA LB LC LD LC LD LE LF LG LH** LI LK LL	and 60 Hertz           029-14400-900           029-14400-901           029-14400-902           029-14400-903           029-14400-904           029-14400-905           029-14400-906           029-14400-907           029-14400-908           029-14400-909           029-14400-901           029-14400-903           029-14400-904           029-14400-905           029-14400-910           029-14400-911           029-14400-912           029-14400-913           029-14400-914           029-14400-915           029-14400-916           029-14400-917           029-14400-918           029-14400-919           029-14400-918           029-14400-919           029-14400-918           029-14400-919           029-14400-919					
KQ KR KS KT KU KV KV KV KZ LA LB LC LD LC LD LC LD LC LD LE LF LG LH** LJ LK LN	and 60 Hertz           029-14400-900           029-14400-901           029-14400-902           029-14400-903           029-14400-904           029-14400-905           029-14400-906           029-14400-907           029-14400-908           029-14400-909           029-14400-901           029-14400-910           029-14400-911           029-14400-912           029-14400-913           029-14400-914           029-14400-915           029-14400-916           029-14400-917           029-14400-918           029-14400-920           029-14400-921           029-14400-921					
KQ KR KS KT KU KV KV KV KZ LA LA LB LC LD LD LD LD LD LF LG LH** LJ LK LN LN LP	and 60 Hertz           029-14400-900           029-14400-901           029-14400-902           029-14400-903           029-14400-904           029-14400-905           029-14400-906           029-14400-907           029-14400-908           029-14400-909           029-14400-909           029-14400-910           029-14400-911           029-14400-912           029-14400-913           029-14400-914           029-14400-915           029-14400-916           029-14400-917           029-14400-918           029-14400-920           029-14400-921           029-14400-921           029-14400-921           029-14400-923					
KQ KR KS KT KU KV KV KV KZ LA LB LC LD LC LD LC LD LC LD LE LF LG LH** LJ LK LN	and 60 Hertz           029-14400-900           029-14400-901           029-14400-902           029-14400-903           029-14400-904           029-14400-905           029-14400-906           029-14400-907           029-14400-908           029-14400-909           029-14400-901           029-14400-910           029-14400-911           029-14400-912           029-14400-913           029-14400-914           029-14400-915           029-14400-916           029-14400-917           029-14400-918           029-14400-920           029-14400-921           029-14400-921					

YORK INTERNATIONAL

## MODEL YTJ 60 Hz Motor and Motor Support

	Voltage	MOT	ror	MOTOR S	SUPPORT
Motor Code	60 Hz Nameplate	Reliance	Siemens	Reliance	Siemens
		Part No.	Part No.	Part No.	Part No.
	200 O R 208	024-21269-246	024-21269-446	364-46603	364-46601
	230 O R 240	024-21269-247	024-21269-447	364-46603	364-46601
	248	024-21269-248	024-21269-448	364-46603	364-46601
	416	024-21269-249	024-21269-449	364-46603	364-46601
CL	440 OR 460 OR 480	024-21269-250	024-21269-450	364-46603	364-46601
• -	575 OR 600	024-21269-251	024-21269-451	364-46603	364-46601
	2300	. —	024-21269-452		364-46605
	3300		024-21269-453		364-46605
	4000 OR 4160		024-21269-454		364-46605
	200 O R 208	024-21269-255	024-21269-455	364-46604	364-46605
	230 O R 240	024-21269-256	024-21269-456	364-46604	364-46605
	380	024-21269-257	024-21269-457	364-46604	364-46605
	416	024-21269-258	024-21269-458	364-46604	364-46605
СМ	440 OR 460 OR 480	024-21269-259	024-21269-459	364-46603	364-46605
	575 OR 600	024-21269-260	024-21269-460	364-46603	364-46605
	2300		024-21269-461		364-46605
	3300		024-21269-462		364-46605
	4000 OR 4160		024-21269-463		364-46605
	200 OR 208	024-21269-264	024-21269-464	364-46604	364-46605
	230 OR 240	024-21269-265	024-21269-465	364-46604	364-46605
	380	024-21269-266	024-21269-466	364-46604	364-46605
	416	024-21269-267	024-21269-467	364-46604	364-46605
CN	440 OR 460 OR 480	024-21269-268	024-21269-468	364-46604	364-46605
•••	575 OR 600	024-21269-269	024-21269-469	364-46604	364-46605
	2300		024-21269-470		364-46605
	3300		024-21269-471		364-46605
	4000 O R 4160		024-21269-472		364-46605
	200 OR 208	024-21269-273	024-21269-473	364-46604	364-46605
	230 OR 240	024-21269-274	024-21269-474	364-46604	364-46605
	380	024-21269-275	024-21269-475	364-46604	364-46605
	416	024-21269-276	024-21269-476	364-46604	364-46605
	440 OR 460 OR 480	024-21269-277	024-21269-477	364-46604	364-46605
	575 OR 600	024-21269-278		364-46604	364-46605
	2300		024-21269-479		364-46605
	3300		024-21269-480		364-46605
	4000 OR 4160		024-21269-481		364-46605

NOTE:<sup>1</sup> If a code CP motor is specified for a Turbomodulator Turbopak, a Reliance motor is used.

## MODELS YTJ 50 Hz Motor and Motor Support

	V-1	MO	TOR	MOTOR	SUPPORT
Motor Code	Voltage 50 Hz Nameplate	Reliance	Siemens	Reliance	Siemens
	Namepiate	Part No.	Part No.	Part No.	Part No.
	220	024-21269-301	024-21269-501	364-46643	364-46640
	346	024-21269-213	024-21269-413	364-46643	364-46640
	380 OR 400	024-21269-214	024-21269-414	364-46643	364-46640
	415	024-21269-304	024-21269-504	364-45543	364-46640
5CC	440	024-21269-305	024-21269-505	364-46643	364-46640
000	500	024-21269-215	024-21269-415	364-46643	364-46640
	2300		024-21269-507		364-46641
	3000		024-21269-508		364-46642
	3300		024-21269-418		364-46642
	220	024-21269-310		364-46644	364-46641
	346	024-21269-222	024-21269-422	364-46644	364-46641
	380 O R 400	024-21269-223	[	364-46644	364-46641
	415	024-21269-313	1	364-46644	364-46641
5C D	440	024-21269-314		364-46644	364-46641
000	500	024-21269-224	024-21269-424		364-46641
	2300		024-21269-516		364-46641
	3000		024-21269-517		364-46642
	3300		024-21269-427		364-46642
	220	024-21269-319	024-21269-519	364-46644	364-46641
	346	024-21269-231	[	364-46644	364-46641
	380 O R 400	024-21269-232			364-46641
	415	024-21269-322	024-21269-522	364-46644	364-46641
5C E	440	024-21269-323		364-46644	364-46641
UUL	500	024-21269-233		364-46644	364-46641
	2300		024-21269-525		364-46641
	3000		024-21269-526		364-46642
	3300		024-21269-436		364-46642
	220	024-21269-328	024-21269-528	364-46644	364-46641
	346	1	024-21269-440		364-46641
	380 OR 400	024-21269-241			364-46641
	415	024-21269-331		364-46644	364-46641
5CF	440	024-21269-332			364-46641
001	500	024-21269-242		364-46644	364-46641
	2300		024-21269-534		364-46641
	3000		024-21269-535		364-46642
	3300		024-21269-445		364-46642
	220	024-21269-337	024-21269-537	364-46644	364-46641
	346	024-21269-249			364-46641
	380 OR 400	024-21269-250		364-46644	364-46641
	415	024-21269-250	024-21269-540	364-46644	364-46641
5CG	415	024-21269-340	024-21269-540	364-46644	364-46641
JUU	500	024-21269-341	024-21269-541	364-46644 364-46644	364-46641
	2300	02421203-231	024-21269-451	304740044	
	3000				364-46641
			024-21269-544		364-46642
	3300		024-21269-454	—	364-46642

## MODELS YTJ 50 Hz Motor and Motor Support

Motor	Voltage	MO	FOR	MOTOR	SUPPORT
Code	50 Hz Nameplate	Reliance	Siemens	Reliance	Siemens
		Part No.	Part No.	Part No.	Part No.
	220	024-21269-346	024-21269-546	364-46644	364-46641
	346	024-21269-258	024-21269-458	364-46644	364-46641
	380 OR 400	024-21269-259	024-21269-459	364-46644	364-46641
	415	024-21269-349	024-21269-549	364-46644	364-46641
5CH	440	024-21269-350	024-21269-550	364-46644	364-46641
	500	024-21269-260	024-21269-460	364-46644	364-46641
	2300		024-21269-552		364-46641
	3000		024-21269-553		364-46642
	3300	I	024-21269-463		364-46642
	220	024-21269-355	024-21269-555	364-46644	364-46641
	346	024-21269-267	024-21269-467	364-46644	364-46641
	380 OR 400	024-21269-268	024-21269-468	364-46644	364-46641
	415	024-21269-358	024-21269-558	364-46644	364-46641
5CI	440	024-21269-359	024-21269-559	364-46644	364-46641
	500	024-21269-269	024-21269-469	364-46644	364-46641
	2300		024-21269-561		364-46642
	3000		024-21269-562		364-46642
	3300		024-21269-472		364-46642
	220	024-21269-364	024-21269-564	364-46644	364-46641
	346	024-21269-276	024-21269-476	364-46644	364-46641
	380 OR 400	024-21269-277	024-21269-477	364-46644	364-46641
	415	024-21269-367	024-21269-567	364-46644	364-46641
5CJ	440	024-21269-368	024-21269-568	364-46644	364-46641
	500	024-21269-278	024-21269-478	364-46644	364-46641
	2300		024-21269-570		364-46642
	3000		024-21269-571		364-46642
	3300		024-21269-481		364-46642
	220	024-21269-373	024-21269-573	364-46644	364-46642
	346	024-21269-374	024-21269-574	364-46644	364-46642
	380 OR 400	024-21269-375		364-46644	364-46642
	415	024-21269-376	024-21269-576	364-46644	364-46642
5CK	440	024-21269-377	024-21269-577	364-46644	364-46642
	500	024-21269-378	024-21269-578	364-46644	364-46642
	2300		024-21269-579		364-46642
	3000		024-21269-580		364-46642
	3300		024-21269-581		364-46642
	220	024-21269-382	024-21269-582	364-46644	364-46642
	346	024-21269-383	024-21269-583	364-46644	364-46642
	380 OR 400	024-21269-384	024-21269-584	364-46644	364-46642
	415	024-21269-385	024-21269-585	364-46644	364-46642
5CL	440	024-21269-386	024-21269-586	364-46644	364-46642
	500	024-21269-387	024-21269-587	364-46644	364-46642
	2300		024-21269-588		364-46642
	3000		024-21269-589		364-46642
	3300		024-21269-590		364-46642

## MODEL YDTJ 60 Hz Motor and Motor Support

	Voltage		MOTOR	MOTOR SUPPORT				
Motor Code	60 Hz Nameplate	Reliance	Siemens	Toshiba	Reliance	Siemens	Toshiba	
		Part No.	Part No.	Part No.		Part No.		
	200 OR 208	024-23992-001	024-23992-201	024-23992-601		064-47326		
	230 OR 240	024-23992-002	024-23992-202	024-23992-602				
	380	024-23992-003	024-23992-203	024-23992-603				
~ -	416	024-23992-004	024-23992-204	024-23992-604				
CF	440 OR 460 OR 480	024-23992-005	024-23992-205	024-23992-605				
	575 OR 600	024-23992-006	024-23992-206	024-23992-606				
	2300	024-23992-007	024-23992-207	-				
	3300	024-23992-008	024-23992-208	-				
	4000 OR 4160	024-23992-009	024-23992-209	-				
_	200 OR 208	024-23992-010	024-23992-210	024-23992-610				
	230 OR 240	024-23992-011	024-23992-211	024-23992-611				
	380	024-23992-012	024-23992-212	024-23992-612				
	416	024-23992-013	024-23992-213	024-23992-613				
CG	440 OR 460 OR 480	024-23992-014	024-23992-214	024-23992-614				
	575 OR 600	024-23992-015	024-23992-215	024-23992-615				
	2300	024-23992-016	024-23992-216	-				
	3300	024-23992-017	024-23992-217	-				
	4000 OR 4160	024-23992-018	024-23992-218	-				
	200 OR 208	024-23992-019	024-23992-219	024-23992-619	-			
	230 OR 240	024-23992-020	024-23992-220	024-23992-620				
	380	024-23992-021	024-23992-221	024-23992-621				
	416	024-23992-022	024-23992-222	024-23992-622				
CH	440 OR 460 OR 480	024-23992-023	024-23992-223	024-23992-623				
	575 OR 600	024-23992-024	024-23992-224	024-23992-624				
	2300	024-23992-025	024-23992-225	-				
	3300	024-23992-026	024-23992-226	-				
_	4000 OR 4160	024-23992-027	024-23992-227	-				
	200 OR 208	024-23992-028	024-23992-228	024-23992-628				
	230 OR 240	024-23992-029	024-23992-229	024-23992-629				
	380	024-23992-030	024-23992-230	024-23992-630				
	416	024-23992-031	024-23992-231	024-23992-631				
CJ	440 OR 460 OR 480	024-23992-032	024-23992-232	024-23992-632				
	575 OR 600	024-23992-033	024-23992-233	024-23992-633				
	2300	024-23992-034	024-23992-234					
	3300	024-23992-035	024-23992-235	—				
	4000 OR 4160	024-23992-036	024-23992-236	_				
	200 OR 208	024-23992-037	024-23992-237	024-23992-637				
	230 OR 240	024-23992-038	024-23992-238	024-23992-638				
	380	024-23992-039	024-23992-239	024-23992-639				
<b>-</b>	416	024-23992-040	024-23992-240	024-23992-640				
CK	440 OR 460 OR 480	024-23992-041	024-23992-241	024-23992-641				
	575 OR 600	024-23992-042	024-23992-242	024-23992-642				
	2300	024-23992-043	024-23992-243	-				
	3300	024-23992-044	024-23992-244	-		1		
	4000 OR 4160	024-23992-045	024-23992-245	-		Ţ		

### MODEL YDTJ 60 Hz Motor and Motor Support

	Voltage		MOTOR		м	OTOR SUPPO	RT
Motor Code	60 Hz Nameplate	Reliance	Siemens	Toshiba	Reliance	Siemens	Toshiba
	Namepiate	Part No.	Part No.	Part No.	Part No.	Part No.	Part No.
	200 OR 208	024-23992-046	024-23992-246	_		064-47326	
	230 OR 240	024-23992-047	024-23992-247	024-23992-647			
	380	024-23992-048	024-23992-248	024-23992-648			
<b>.</b> .	416	024-23992-049	024-23992-249	024-23992-649			
CL	440 OR 460 OR 480	024-23992-050	024-23992-250	024-23992-650			
	575 OR 600	024-23992-051	024-23992-251	024-23992-651			
	2300	024-23992-052	024-23992-252	-			
	3300	024-23992-053	024-23992-253	-			
	4000 OR 4160	024-23992-054	024-23992-254	-			
	200 OR 208	024-23992-055	024-23992-255	_			
	230 OR 240	024-23992-056	024-23992-256	024-23992-656			
	380	024-23992-057	024-23992-257	024-23992-657			
	416	024-23992-058	024-23992-258	024-23992-658			
CM	440 OR 460 OR 480	024-23992-059	024-23992-259	024-23992-659			
	575 OR 600	024-23992-060	024-23992-260	024-23992-660			
	2300	024-23992-061	024-23992-261	_			
	3300	024-23992-062	024-23992-262	-			
	4000 OR 4160	024-23992-063	024-23992-263	-			
	200 OR 208	024-23992-064	024-23992-264	-	_		
	230 OR 240	024-23992-065	024-23992-265	024-23992-665			
	380	024-23992-066	024-23992-266	024-23992-666			
	416	024-23992-067	024-23992-267	024-23992-667			
CN	440 OR 460 OR 480	024-23992-068	024-23992-268	024-23992-668			
	575 OR 600	024-23992-069	024-23992-269	024-23992-669			
	2300	024-23992-070	024-23992-270	-			
	3300	024-23992-071	024-23992-271	-			
	4000 OR 4160	024-23992-072	024-23992-272	_			_
	200 OR 208	024-23992-073		-			
	230 OR 240	024-23992-074		_			
	380	024-23992-075	024-23992-275	024-23992-675			
	416	024-23992-076	024-23992-276	024-23992-676			
CP <sup>1</sup>	440 OR 460 OR 480	024-23992-077	024-23992-277	024-23992-677			
	575 OR 600	024-23992-078	024-23992-278	024-23992-678			
	2300	024-23992-079	024-23992-279	-			
	3300	024-23992-080	024-23992-280	-			
	4000 OR 4160	024-23992-081	024-23992-281	-		<b>V</b>	


NOTE: <sup>1</sup> If a code CP motor is specified for a Turbomodulator Turbopak, a Reliance motor is used.

### MODEL YDTJ 50 Hz Motor and Motor Support (Standard Codepak Only)

	Voltage		MOTOR		м	OTOR SUPPO	RT
Motor Code	50 Hz Nameplate	Reliance Bort No.	Siemens Bost No	Toshiba Bort No	Reliance Part No.	Siemens Part No.	Toshiba Part No.
		Part No.	Part No.	Part No.	Part No.		Part No.
	220	024-23992-101	024-23992-301	024-23992-701		064-47326	
	346	024-23992-013	024-23992-213	024-23992-613			
	380 or 400	024-23992-014	024-23992-214	024-23992-614			
5CC	415	024-23992-104	024-23992-304	024-23992-704			
500	440	024-23992-105	024-23992-305	024-23992-705			
	500	024-23992-015	024-23992-215	024-23992-615			
	2300	024-23992-107	024-23992-307	-			
-	3000	024-23992-108	024-23992-308	-			
	3300	024-23992-018	024-23992-218	-			
	220	024-23992-110	024-23992-310	024-23992-710			
	346	024-23992-022	024-23992-222	024-23992-622			
	380 or 400	024-23992-023	024-23992-223	024-23992-623			
COD	415	024-23992-113	024-23992-313	024-23992-713			
5CD	440	024-23992-114	024-23992-314	024-23992-714			
	500	024-23992-024	024-23992-224	024-23992-624			
	2300	024-23992-116	024-23992-316	-			
	3000	024-23992-117	024-23992-317	-			
	3300	024-23992-027	024-23992-227	_			
	220	024-23992-119	024-23992-319	024-23992-719			
	346	024-23992-031	024-23992-231	024-23992-631			
	380 OR 400	024-23992-032	024-23992-232	024-23992-632			
	415	024-23992-122	024-23992-322	024-23992-722			
5CE	440	024-23992-123	024-23992-323	024-23992-723			
	500	024-23992-033	024-23992-233	024-23992-633			
	2300	024-23992-125	024-23992-325	_			
	3000	024-23992-126	024-23992-326	_			
	3300	024-23992-036	024-23992-236	_			
	220	024-23992-128	024-23992-328	024-23992-728			
	346	024-23992-040	024-23992-240	024-23992-640			
	380 OR 400	024-23992-041	024-23992-241	024-23992-641			
	415	024-23992-131	024-23992-331	024-23992-731			
5CF	440	024-23992-132	024-23992-332	024-23992-732			
	500	024-23992-042	024-23992-242	024-23992-642			
	2300	024-23992-134	024-23992-334	_			
	3000	024-23992-135	024-23992-335				
	3300	024-23992-045	024-23992-245	_			
	220	024-23992-137	024-23992-337	024-23992-737			
	346	024-23992-049	024-23992-249	024-23992-649			
5CG	380 OR 400	024-23992-050	024-23992-250	024-23992-650			
	415	024-23992-140	024-23992-340	024-23992-740			
	440	024-23992-141	024-23992-341	024-23992-741			
	500	024-23992-051	024-23992-251	024-23992-651			
-	2300	024-23992-143	024-23992-343	_			
	3000	024-23992-144	024-23992-344	_			
	3300	024-23992-054	024-23992-254	-			

## MODEL YDTJ 50 Hz Motor and Motor Support (Standard Codepak Only)

	Voltage		MOTOR		М	OTOR SUPPO	RT
Motor Code	50 Hz Nameplate	Reliance	Siemens	Toshiba	Reliance	Siemens	Toshiba
		Part No.	Part No.	Part No.	Part No.	Part No.	Part No
	220	024-23992-146	024-23992-346	024-23992-746		064-47326	
	346	024-23992-058	024-23992-258	024-23992-658		1	
	380 OR 400	024-23992-059	024-23992-259	024-23992-659			
	415	024-23992-149	024-23992-349	024-23392-749			
5CH	440	024-23992-150	024-23992-350	024-23392-750			
	500	024-23992-060	024-23992-260	024-23392-660			
	2300	024-23992-152	024-23992-352				
1	3000	024-23992-153	024-23992-353	-			
	3300	024-23992-063	024-23992-263	-			
	220	024-23992-155	024-23992-355	024-23992-755	-		
	346	024-23992-067	024-23992-267	024-23992-667			
	380 OR 400	024-23992-068	024-23992-268	024-23992-668			
	415	024-23992-158	024-23992-358	024-23992-758			
5CI	440	024-23992-159	024-23992-359	024-23992-759			
	500	024-23992-069	024-23992-269	024-23992-669			
	2300	024-23992-161	024-23992-361	_			
	3000	024-23992-162	024-23992-362	_			
	3300	024-23992-072	024-23992-272	_			
	220	024-23992-164	024-23992-364	024-23992-764			
	346	024-23992-076	024-23992-276	024-23992-676			
	380 OR 400	024-23992-077	024-23992-277	024-23992-677			
	415	024-23992-167	024-23992-367	024-23992-767			
5CJ	440	024-23992-168	024-23992-368	024-23992-768			
	500	024-23992-078	024-23992-278	024-23992-678			
	2300	024-23992-170	024-23992-370	_			
	3000	024-23992-171	024-23992-371	-			
	3300	024-23992-081	024-23992-281	_			
	220	024-23992-101	024-23992-301	_	-		
	346	024-23992-004	024-23992-204	024-23992-604			
	380 OR 400	024-23992-005	024-23992-205	024-23992-605			
	415	024-23992-104	024-23992-304	024-23992-754			
5CK	440	024-23992-105	024-23992-305	024-23992-755			
	500	024-23992-006	024-23992-206	024-23992-606			
	2300	024-23992-107	024-23992-307	-			
	3000	024-23992-108	024-23992-308	_			
	3300	024-23992-009	024-23992-209	_			
	220	024-23992-110	024-23992-310	_			
	346	024-23992-013	024-23992-213	024-23992-613			•
	380 OR 400	024-23992-014	024-23992-214	024-23992-614			
	415	024-23992-113	024-23992-313	024-23992-763			
5CL	440	024-23992-114	024-23992-314	024-23992-764			
	500	024-23992-015	024-23992-215	024-23992-615			
	2300	024-23992-116	024-23992-316				
	3000	024-23992-117	024-23992-317				
	3300	024-23992-018	024-23992-218	_		+	

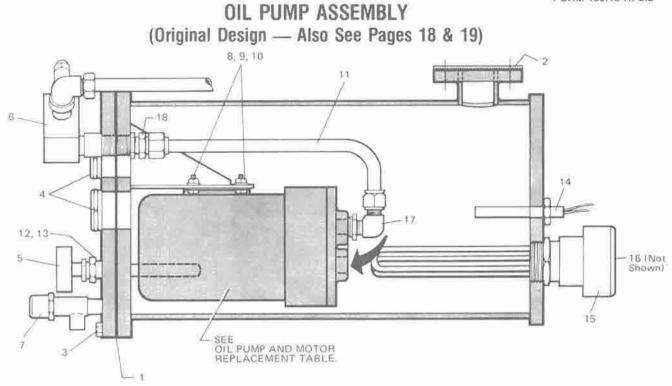

#### FIG. 7 - OIL SUMP CUTAWAY VIEW

OIL SLIMP

Item	Description	Part No.	Quan
1	Gasket	066-82923	1
2	Gasket	066-84786	1
3	Screw, Cap Hex Hd. 3/8-16 x 1-1/2" Lg.	021-01497	12
4	Sight Glass, 1" Drameter	026-16556	1
	Sight Glass, 1-1/4" Diameter	026-17581	1
5	Thermometer	026-21975	ĩ
6	Valve Relief, 3/4	022-06801	1
7	Valve Stop	022-03835	1
8	Screw, Cap Hex Hd. 5/16-18 x 3/4	021-01418	4
9	Nut, Hex 5/16-18	021-00461	4
10	Washer, Plain, 11/32 I.D. x .065 Thk.	021-05166	4
11	Connection	366-82918	3
12	Swivel Adaptor	D23-12978	, T
13	Copper Gasket	064-46250	1
14	Temperature Sensor (see page 17)	025-20798	ï
15	Oil Heater (see page 17)	025-09445	1
16	Thermostat (see page 17)	024-23990	1
17	Elbow, 90°	023-11348	i
18	Connector	023-10166	1

OIL	PUMP	&	MOTOR	REPL	ACEMENT

Oil Pumps -1	With Motor	3433333033	<b>1</b>	
Voltage	oltage Part No. Motor Dnly		Pump Kit	
208, 220, 230, 240, 416, 440, 460, 480 3.60	026-28153	024-23153	026-28166	
550, 575, 600 3-60	026-28154	N/A	026-28166	
380,400, 415-3-50	026-28158	024-23154	026-28166	
346-3-50	026-28156	N/A	026-28166	
380-3-60	026-28155	N/A	026-28166	
220, 440-3-50	026 28157	N/A	026-28166	

Replacement pump for the above is 026-28166 (3G8330).

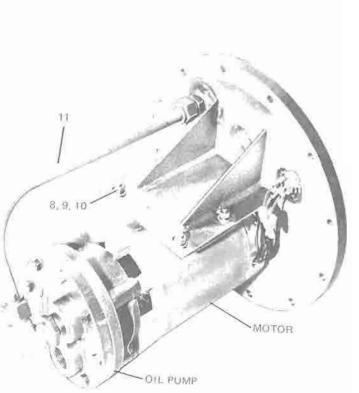


FIG. 8 - OIL PUMP MOUNTED ON COVER







VIEW FROM TOP

#### PRV-ELECTRIC-MOTOR ACTUATORS PRV ACTUATORS-ELECTRIC

Model	Quan.	Part No.
YTJ - YDTJ 67 & LTJ 67	1	00F 17174
YTJ - YDTJ 76 & LTJ 76	1	025-17174
YTJ - YDTJ 85 & LTJ 85	1	005 17175
YTJ – YDTJ 95 & LTJ 95	1	025-17175

### SPECIAL TOOLS AND SUPPLIES

#### COMPRESSOR TOOL KIT (Part No. 364-46557)

ltem	Description	Quan.	Part No.
1	Bar, Rd. 3/8" x 7" Lg.	1	064-46402
2	Pin Guide =10-24 UNC x 6-1/2" Lg.	2	064-46488
3	Stud, Spl. 1/2" - 20 UNF x 9" Lg.	1	064-14500
4	Nut, Hex Hvy, 1/2" - 20 UNF	2	021-00483
5	Pin, Guide 3/8" - 16 UNC x 7-1/2" Lg.	3	064-18716
6	Bolt, Eye 7/8"	1	021-07703
7	Oil Pump	1	470-10654
8	Pin, Guide 1/4" - 20 UNC x 8" Lg.	2	064-46499
9	Nut, Hex 1/4" - 20 UNC	4	021-00450
10	Bar, Tool	1	064-4661
11	Hook, Tool	2	064-4661
12	Bolt, Eye 3/4"	1	021-0030
13	Bar, Cplg.	1	064-4625
14	Scr., Cap Hex 5/8" - 11 x 1-3/4" Lg.	1	021-0162
15	Scr., Cap Hex 3/8"-16 x 2" Lg.	2	021-0151
16	Tool, Cplg. Drive Half	1	064-4674
17	Strap	1	064-4665
18	Spacer	1	064-4665
19	Scr., Cap Hex 3/8"-16 UNC x 5/8" Lg.	1	021-0146
20	Nut, Hex 3/8" - 16 UNC	4	021-0046
21	Rod, Threaded 3/8" - 16 UNC x 3" Lg.	2	021-1484
22	Pin, Guide 1/2" - 13 UNC x 7-1/2" Lg.	2	064-4624
23	Bolt, Eye 5/8"	1	021-1236
24	Bolt, Eye 1/2"	3	021-1462
25	Bolt, Eye 3/8"	3	021-1349

#### TOOLS

Description	Part No.
Pliers, Waldles Truarc. No. 5	029 08590
Pliers, Waldles Truarc. No. 7	029-07934
Hand Oil Pump	070 10654
Hand Oil Pump Seal	028-03292

#### SEALERS, ADHESIVES & INSULATION TAPE

Item	Description	Part No.
1	Varnish, Scotch Cast Resin No. 2	013-01016
2	Sealant	044-00892
3	Sealer CR CV	013-01673
4	Adhesive	013-00852
5	Adhesive Sealing	013-02065
6	Tape Motor Terminal Insul.	010-04101

#### LUBRICANTS, OILS & COMPOUNDS

Description	Part No.
Thread Compound, ARI High Pressure-1/4 Pt. Can	464-14934
Coating Lubricant-Molykote, Type Z-2 Oz. Can	364-21508
Oil, York Refrigeration-Type C-5 Gal. Can	011-00312
YT Oil Bottle Kit	366-89520

#### YTJ-YDTJ / LTJ 67 - 76 Part No. 364-46997

Gasket Conversion Kit (to modify compressors with Part No. 064-46632).

Item	Description	Quan.	Part No.
1	Gasket Rot, Sup.	1	064-46995
2	Gasket, Noz. Base Plt.	Ť	064-46961
3	Lk. Washer 3/8"	20	021-08296
4	Scr. Cap 3/8" - 16 UNC x 1-3/4	20	021-11916
5	Instruction	1	035-06478

#### YTJ-YDTJ / LTJ 85 - 95 Part No. 364-46998

Gasket Conversion Kit Ito modify compressors with Part No. 464-4663

Item	Description	Quan.	Part No.
1	Gasket Rot, Sup.	1	064-46996
2	Gasket, Noz. Base Plt.	1	064-46962
3	Lk. Washer 3/8"	24	021-08296
4	Scr. Cap 3/8" - 16 UNC x 1-3/4	24	021-11916
5	Instruction	1	035-06479

### OIL TEMPERATURE SENSOR (See Item 14, Page 15)

The Oil Temperature Sensor, listed as Item 14, Page 15, is for use with chillers equipped with electromechanical control panels.

For chillers equipped with the later design microprocessor control panels, the Oil Temperature Sensor should be ordered from the table below:

MICROPROCESSOR			
Part No.	Style	Sensor Part No.	
031-00846	KEY TYPE	025-25163 <sup>1</sup>	
031-00954 OR 371-01200-00X	KEYLESS	025-28936 <sup>2</sup>	

<sup>1</sup> Has white nylon connector

<sup>2</sup> Has black waterproof connector

### THERMOSTATIC SWITCH FOR IMMERSION HEATERS (See Items 15 & 16, Page 15)

York immersion heater part number 025-9445-000 has been sourced from as many as four different vendors. Each vendor utilized a different thermostatic switch in the heater. New part numbers have been created for the different types of replacement switches.

The part numbers and vendor information to determine which switch is required are as follows:

PART NUMBER	VENDOR	BULB SIZE
024-23990-000	Electro-Therm	% inch bulb with 3% inch length
024-25291-000	Chromalox	1/4 inch bulb with 55/4 inch length
024-25292-000	Watlow	1/4 inch bulb with 31/4 inch length

Some Chromalox heaters were provided with a riveted switch which cannot be replaced. In these instances, new heaters will have to be purchased.

### SHAFT SEALS (See Pages 2 & 3)

Since we started using the Family IV (131 & 144) Shaft Seal with six (6) springs our leak problems in that family have all but ceased. Therefore, Engineering has put together several kits that can be retro-fitted to previous style units across the board (Family I-II & III & IV).

If you have a particular unit(s) that have a history of Shaft Seal leaks it is recommended that you use one of the new kits when you need to change one out. This is, of course, once you've eliminated other causes, i.e., mis-alignment, etc., etc.

The new kits have been set up in two (2) categories. They are:

- 1. **Replacement.** This kit is needed to make the initial changeout to the new style seal. It will contain a new cover plate.
- 2. Maintenance. This kit is used after the initial changeout and does not contain the cover plate.


DESCRIPTION	REPLACEMENT	MAINTENANCE
Family 11 YDTJ 67–95 & CB	464-47821-000	
LTJ & YTJ	464-47822-000	464-47823-000

### **OIL SUMP ASSEMBLY**

There has been a change made to the oil sump assemblies. You will now see two (2) different oil reservoirs; one (1) will have a bolted-on cover plate (original design - see page 15) and one (1) will have welded studs with nuts (new design - see page 19) to install the cover plate.

The original design had a cover plate gasket that fit inside the bolts. The new design has a cover plate gasket that fits around the stud circle and over the bolts.

The other change is the 2" oil drain line connection gasket (item 18). In both cases the new gaskets are compatible with HCFC123.

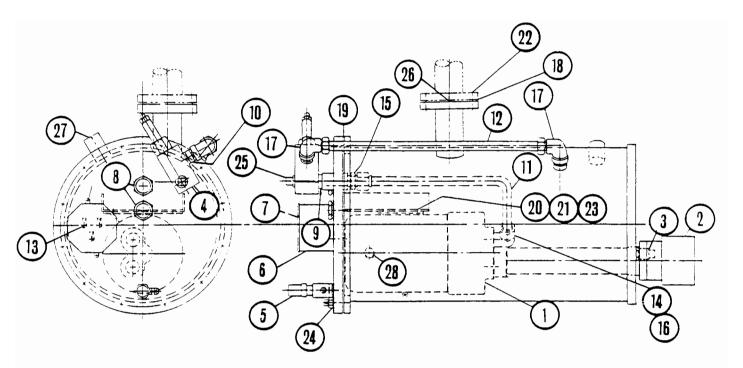

ltem	Description	Quan.	Part No.	ltem	Description	Quan.	Part No.
1	Pump	1	See Table Below	15	Conn., Flare	1	023-10166
2	Heater	1	025-09445	16	Elbow, Flare	1	023-11348
3	Sensor, Temp.	1	025-2 <b>893</b> 6	17	Elbow, Flare	2	023-11364
4	Vaive, Relief	1	022-06801	18	Gasket	1	075-02359
5	Valve, Stop	1	022-01582	19	Gasket, Cover Plate	1	075-02360
6	Box, Elec.	1	025-10290	20	Washer, Plain	8	021-05166
7	Cover, Elec. Box	1	025-10291	21	Screw, Cap — 5/16"	4	021-01418
8	Sight Glass	2	026-17581	22	Screw, Cap — 1/2″	4	021-01573
9	Nipple, Pipe - 3/4"	1	023-14775	23	Nut, Hex – 5/16"	4	021-00461
10	Nipple, Pipe - 3/4"	1	023-14464	24	Nut, Hex - 1/2"	12	021-00482
11	Conn., Tube	1	366-82918	25	Plug, Pipe — 3/4"	1	023-04053
12	Conn., Tube	1	066-90971	26	Cap, Sealing	1	028-04656
13	Terminał	3	025-15923	27	Plug, Pipe — 3/4"	1	023-04053
14	Bushing, Pipe	1	023-04045	28	Bushing, Snap	1	025-09848


#### \*OIL PUMP & MOTOR REPLACEMENT (1140 RPM)

Voltage	Part No.	Pump Only	
200, 208, 220, 230			
240, 416, 440, 460	026-28153	026-28166	
480-3-60			
550, 575	026-28154	026 29100	
600-3-60	020-20134	026-28166	
380-3-60	026-28155	026-28166	
346-3-50	026-28156	026-28166	
220, 440-3-50	026-28157	026-28166	
380, 400	020 20100	020 29160	
415-3-50	026-28158	026-28166	

#### 1140 RPM MOTOR

Part No.	Voitage
024-23153	2 <b>20/440 60 Hz</b>
024-23154	380/400, 416 50 Hz

FIG. 9 - OIL SUMP ASSEMBLY (NEW DESIGN - ALSO SEE PAGES 15 & 18)

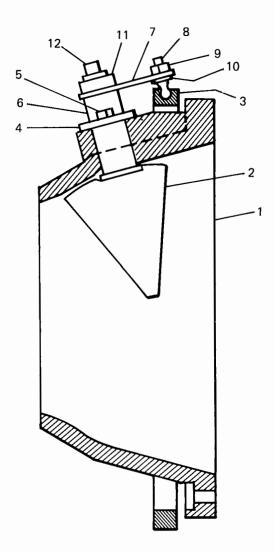


ltem	Description	Mode	Model YDTJ-CB		
No.	Description	Qty.	Part No.		
1	Housing, Pre-rotation	1	064-47476		
2	Vane, PRV	9	064-47481		
3	Ring, PRV Drive	1	064-47510		
4	Retainer, PRV Vane	9	064-47505		
5	Screw, Cap	18	021-01372		
6	Washer, Spl.	9	064-47506		
7	Arm, PRV	9	064-47508		
8	Screw, Ball	9	029-07017		
9	Nut, Hex .250-28 UNF	9	021-12943		
10	Washer	18	021-11973		
11	Washer, Spl.	9	064-47516		
12	Screw, Cap 12 pt. Hd.	9	021-17244		

FIG. 10 - PRE-ROTATION HOUSING ASSEMBLY - CB COMPRESSOR

Item		MODEL YDTJ-CB		ltem	Description		MODEL YDTJ-CB	
No.	Description	Qty.	Part No.	No.	Description		Part No.	
1	Scr., Cap 3/8 x 1-1/2 Lg.	3	021-01497	72	Ring, Shaft Seal	1	029-20886	
2	Washer, Impeller Clamp	1	064-46146	73	Spring, Helical	6	029-13770-004	
3	Scr., Set 1/2 x 3/4 Lg.	2	021-00825	74	Cover, Shaft Seal	1	064-47816	
5	Plug, Pipe 1/8	2	023-01970	75	Washer, Shaft Seal	1	064-47833	
6	Scr., Cap 1/4 x 1/2 Lg. 12 Pt. Hd.	2	021-11970	201	Scroll, Rotor	1	064-47474	
7	Retainer, Bearing	2	064-46886	202	Device, Prerotation	1	364-47522	
				203	Impeller	1	064-47465	
				204	Support, Rotor/Brg. Hsg.	1	364-46621	
11	Collar, L. S. Thrust	1	064-46623	205	Plate, Nozzle Base	1	064-47480	
12	Scr., Cap 5/16 12 Pt. Hd.	1	021-11532	206	Plate, Diffuser	1	064-47478	
13	Pin, Slot Spring	2	029-04551	207	Ring, Impeller Eye Seal	1	064-47492	
14	Scr., Cap 3/8 x 1-1/4 Lg.	12	021-01485	209	Retainer, Implr. Eye Seal	1	064-47497	
17	Flange, Special	1	064-46070	210	Ring, Seal (High Pressure)	1	064-47495	
19	Cover, Oil Reservoir	1	364-46626	212	Retainer, Seal	1	064-47499	
22	Bearing, Thrust H.S. (Rear)	1	064-46127	213	Scr., Cap 12 Pt. Hd. 1/2	5	021-16501	
23	Plug, Pipe 1/4	3	023-01973	215	Bearing, Gear Front	1	064-46124	
24	Cover, Thrust H.S. (Rear)	1	064-46122	216	Cover, L.S. Thrust	1	064-46625	
27	Coller, Thrust H.S. (Rear)	1	064-46130	218	Spring, Hel. Comp.	28	029-10757	
28	Pin, Slot Spring	2	029-03991	219	Screw, Cap Hex Soc. Hd. 3/8	3	021-16083	
29	Scr., Cap 1/2 x 1-1/4 Lg.	1	021-01567	220	Scr., Cap 12 Pt. Hd. 3/8	24	021-11916	
31	Washer, Plain	12	021-16814	245	Lockwasher, Hel. Spg. 3/8	24	021-08296	
32	Plug, Flals. 9/16	1	023-07158	246	Kit, Gasket Complete	1	364-47163	
50	Ball, Steel	1	021-17369	246A	Seal, O-Ring 25.17 ID	1	028-10178	
52	Scr., Cap Hex Hd. 3/8 x 1 Lg.	14	021-01471	246B	Seal, O-Ring 3/16 ID	1	028-11997	
59	Scr., Cap 3/8 x 1 Lg. Hex Soc.	3	021-02585	246C	Gasket, Oil Reservoir	1	064-46629	
63	Plug, Hex Hd.	1	064-46282	246D	Seal, O-Ring 17.722 ID	1	028-12213	
70	Seal, O-Ring	2	028-04519	246E	Seal, O-Ring 3/8 ID	1	028-11998	
71	Collar, Shaft Seal	1	064-46755	246F		1	028-12208	
				246H	-	1	065-21657	
				246 i	O-Ring .301 ID	1	028-12209	
				246J	O-Ring 5/8ID	1	028-11999	
				246L		1	028-10177	
				246M	Gasket, Rotor Supt.	1	064-46960	
					Gasket, Suction Flange	1	075-03294	
					Gasket, Discharge Flange	1	075-02352	

NOTE: Parts not shown above are common to C1 and C2 compressors. See applicable Figures on preceding pages.

### FIG. 11 - CENTRIFUGAL COMPRESSOR PARTS LIST - MODEL YDTJ-CB

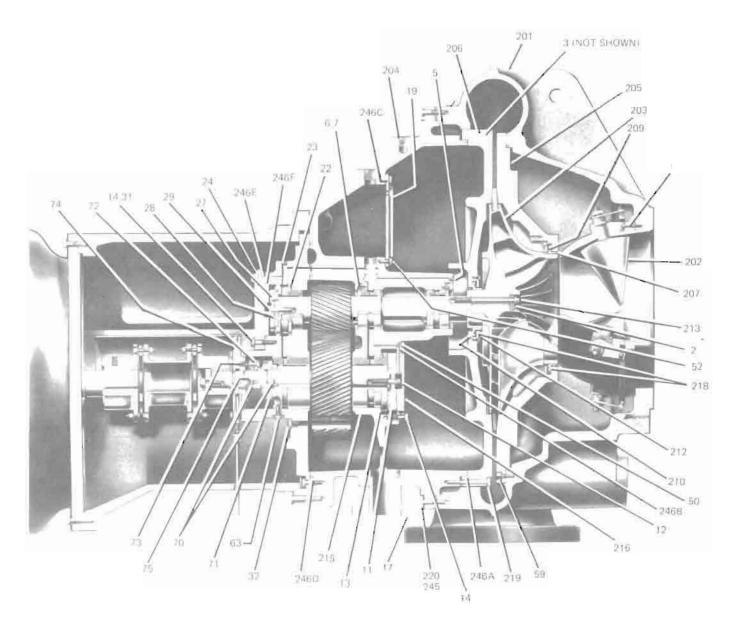



P.O. Box 1592 York: Pennsylvania USA 17405 1592 Gopyright El by York International Corporation 1996

Sum MC-45 002 2 (194)
 Supervises (160:45) 002 2 (493)
 FED 48 004 (092)