



THE NC-QUIET BY DESIGN

The NC is the result of extensive design studies focused on cooling tower sound control. These studies were complicated by the fact that the cooling tower market is typically driven by one of two powerful, yet often conflicting requirements. The most common is for a cooling tower that provides the required heat rejection capacity with a high level of reliability at low cost. Sound control, while important, is not the primary consideration for this application.

The other requirement, which is becoming ever more important in our crowded, fast-paced society, is driven by conditions that demand the lowest practical sound level. Energy efficiency, reliability, ease of maintenance and reasonable cost, while still extremely important, are not the highest priorities

In the first case, sound is important, while in the second case it is extremely important. To best satisfy these two competing market requirements we created a multi-tiered approach, through key mechanical equipment selections, to sound control. The result is more options than any other cooling tower on the market today.

The result is a line of towers capable of meeting all but the most restrictive noise limitations—and that will react favorably to natural attenuation. Where the tower has been sized to operate within an enclosure, the enclosure itself will have a damping effect on sound. Sound also declines with distance—by about 6 dBA each time the distance doubles.

All standard NC cooling towers are equipped with low sound fans. This in combination with zero-splash crossflow film-fill results in a line of towers capable of meeting most noise limitations. Where noise at a critical point is likely to exceed an acceptable limit, several other options are available—listed below in ascending order of cost impact:

- The Marley "Quiet Package" includes the affordable Quiet Fan mechanical option, optimized to achieve the lowest possible sound levels while maintaining efficiency.
- A Marley Variable Speed Drive automatically minimizes the tower's noise level during periods of reduced load and/or reduced ambient temperature without sacrificing the system's ability to maintain a constant cold water temperature. This is a relatively inexpensive solution, and can pay for itself quickly in reduced energy costs. The natural nighttime reduction in wetbulb temperature makes this a very feasible solution in most areas of the world. It also eliminates fan cycling. In combination with a Marley Quiet Package, the Marley Variable Speed Drive is capable of meeting all but the most restrictive noise limitations.
- The most extreme cases may require inlet and discharge sound attenuator sections—however, the static pressure loss imposed by discharge attenuators may necessitate an increase in tower size. Two stages of inlet or discharge attenuators supported by the tower and designed and tested for the most stringent requirements are available as an option. See page 24.
- For more severe cases requiring the lowest possible fan sound levels the Marley "Ultra Quiet" fan option is now available on most NC models. Tower height will increase—obtain current sales drawings from your Marley sales representative for accurate dimensions.

The advantage is yours. You now have the choices you need to balance your project's performance, space and cost requirements with your sound level needs for a win-win solution to your cooling system design.

ENCLOSURES

Occasionally, cooling towers are located inside architectural enclosures for aesthetic reasons. Although NC towers adapt well to enclosures, the designer must realize the potential impact of a poorly arranged enclosure on the tower's performance and operation. The designer must take care to provide generous air inlet paths, and the tower's fan cylinder discharge height should not be lower than the elevation of the top of the enclosure. *Marley Technical Report #H-004* "External Influences on Cooling Tower Performance" is available at spxcooling.com or from your Marley sales representative.

As suggested in the aforementioned Technical Report, it may also be advisable to specify a design wet-bulb temperature 1°F higher than normal to compensate for potential recirculation initiated by the enclosure. You'll benefit from discussing your project with your Marley sales representative.



Marley "Ultra Quiet" fan

SYSTEM CLEANLINESS

Cooling towers are very effective air washers. Atmospheric dust able to pass through the relatively small louver openings will enter the circulating water system. Increased concentrations can intensify system maintenance by clogging screens and strainers—and smaller particulates can coat system heat transfer surfaces. In areas of low flow velocity—such as the cold water basin—sedimentary deposits can provide a breeding ground for bacteria.

In areas prone to dust and sedimentation, you should consider installing some means for keeping the cold water basin clean. Typical devices include side stream filters and a variety of filtration media.

WATER TREATMENT

To control the buildup of dissolved solids resulting from water evaporation, as well as airborne impurities and biological contaminants including Legionella, an effective consistent water treatment program is required. Simple blowdown may be adequate to control corrosion and scale, but biological contamination can only be controlled with biocides.

An acceptable water treatment program must be compatible with the variety of materials incorporated in a cooling tower—ideally the pH of the circulating water should fall between 6.5 and 8.0. Batch feeding of chemicals directly into the cooling tower is not a good practice since localized damage to the tower is possible. Specific startup instructions and additional water quality recommendations can be found in the NC User Manual which accompanies the tower and also is available from your local Marley sales representative. For complete water treatment recommendations, consult a competent, qualified water treatment supplier.

⚠ CAUTION

The cooling tower must be located at such distance and direction to avoid the possibility of contaminated discharge air being drawn into building fresh air intake ducts. The purchaser should obtain the services of a Licensed Professional Engineer or Registered Architect to certify that the location of the cooling tower is in compliance with applicable air pollution, fire and clean air codes.

TYPICAL APPLICATIONS

The NC tower is an excellent choice for normal applications requiring cold water for the dissipation of heat. This includes condenser water cooling for air conditioning, refrigeration, and thermal storage systems, as well as their utilization for free-cooling in all of those systems. The NC can also be used in the cooling of jacket water for engines and air compressors, and are widely applied to dissipate waste heat in a variety of industrial, power and manufacturing processes.

Choosing the all stainless steel construction option, the NC can be confidently applied in unusually corrosive processes and operating environments. However, no single product line can answer all problems, and selective judgement should be exercised in the following situations





APPLICATIONS REQUIRING ALTERNATIVE COOLING TOWER SELECTIONS

Certain types of applications are incompatible with any cooling tower with film fill—whether NC or a competitive tower of similar manufacture. Film fill is subject to distortion in high water temperatures, and the narrow passages are easily clogged by turbid or debris-laden water. Some of the applications, which call for alternative tower designs are:


- Ethylene glycol content—can plug fill passages as slime and algae accumulate to feed on the available organic materials.
- Fatty acid content—found in processes such as soap and detergent manufacturing and some food processing—fatty acids pose a serious threat for plugging fill passages.
- Particulate carry over—often found in steel mills and cement plants—can both cause fill plugging, and can build up to potentially damaging levels on tower structure.
- Pulp carry over—typical of the paper industry and food processing where vacuum pumps or barometric condensers are used. Causes fill plugging which may be intensified by algae.

ALTERNATIVE SELECTIONS

In addition to the NC, SPX Cooling Technologies offers a full scope of products in various designs and capacities to meet the special demands of specific applications.

spxcooling.com—visit us on the web for a complete list of products, services, publications and to find your nearest sales representative.

NC8401 NC8402 NC8403 NC8405

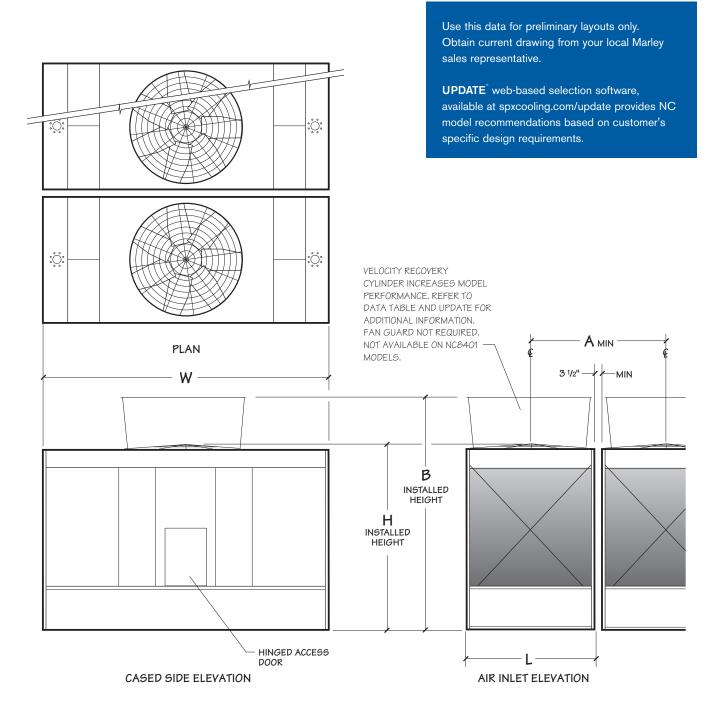


NC8401 NC8402 NC8403 NC8405

Model	Nominal Tons	Nominal Tons with	Motor	Design Operating	Shipping Weight			Dimensions		
note 2	note 3	VR Cylinder	hp	Weight lb	lb	L	W	Н	В	Α
NC8401G-1	101	_	2							
NC8401H-1	117	-	3							
NC8401K-1	139	_	5	- 7810	3983	6'-61/4"	12'-10"	10'-21/2"	_	6'-93/4"
NC8401M-1	159	-	7.5	7610	3903	0 -0 74	12-10	10 -272		0-9-74
NC8401N-1	175	_	10							
NC8401P-1	198	-	15							
NC8402H-1	156	168	3							
NC8402K-1	186	199	5	-					14'-9"	
NC8402M-1	212	228	7.5	10151	4540	8'-43/4"	4.41.011	401.011		01.01/11
NC8402N-1	236	252	10	10171	4748		14'-2"	10'-3"		8'-81/4"
NC8402P-1	265	283	15	-						
NC8402Q-1	288	308	20	-						
NC8403H-1	196	214	3							8'-81/4"
NC8403K-1	237	256	5	-						
NC8403M-1	269	291	7.5	-	7411					
NC8403N-1	297	320	10	-		8'-43/4"				
NC8403P-1	329	363	15	15812			18'-2"	11'-11'/4"	16'-51/4"	
NC8403Q-1	370	398	20	-						
NC8403R-1	391	422	25	-						
NC8403S-1	420	453	30	-						
NC8403T-1	448	489	40	-						
NC8405H-1	242	246	3							
NC8405K-1	280	292	5							
NC8405M-1	318	332	7.5							
NC8405N-1	354	369	10							
NC8405P-1	403	420	15	10001	0000	01.4037	101.111	441.441/"	101 51/11	101.01/17
NC8405Q-1	442	461	20	19691	8896	9'-10³¼"	19'-11"	11'-11'/4"	16'-51/4"	10'-21/4"
NC8405R-1	469	491	25							
NC8405S-1	491	513	30							
NC8405T-1	539	565	40							
NC8405U-1	566	591	50							

- 1 Use this bulletin for preliminary layouts only. Obtain current drawings from your Marley sales representative. All table data is per cell.
- 2 Last numeral of model number indicates number of cells. Change as appropriate for your selection.
- 3 Nominal tons are based upon 95°F HW, 85°F CW, 78°F WB, 3 gpm/ton and standard low sound fans. The UPDATE web-based selection software provides NC model recommendations based on specific design requirements.
- 4 Standard overflow is a 4" dia. standpipe in the collection basin floor. The standpipe removes for flush-out and draining. See page 20 for side overflow option.
- 5 Outlet sizes vary according to gpm and arrangement. See pages 20 and 21 for outlet sizes and details.
- 6 Makeup water connection may be 1" or 2" dia., depending upon tower heat load, water pressure, and desired connections. See page 15 for additional information.

NC8407 NC8409

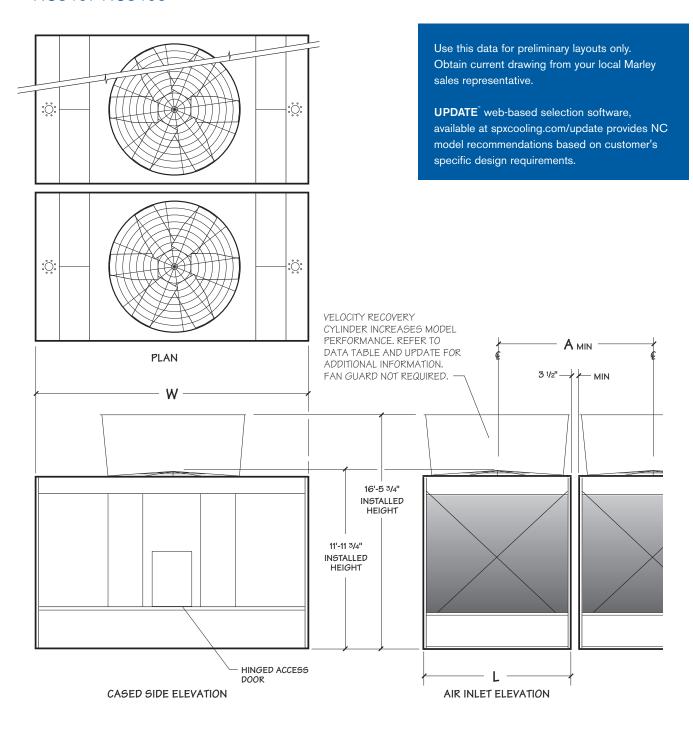


NC8407 NC8409

Model	Nominal Tons	Nominal Tons with	Motor	Design Operating	Shipping	Dimensions				
note 2	note 3	VR Cylinder note 3	hp	Weight lb	Weight lb	L	W	Α		
NC8407K-1	320	330	5							
NC8407M-1	365	380	7.5							
NC8407N-1	401	418	10		11156					
NC8407P-1	458	476	15							
NC8407Q-1	500	524	20	24824		111 103/11	21'-0"	12'-2'/4"		
NC8407R-1	540	564	25			11'-10³¼"				
NC8407S-1	571	598	30							
NC8407T-1	623	652	40							
NC8407U-1	670	700	50							
NC8407V-1	703	736	60							
NC8409M-1	417	427	7.5							
NC8409N-1	459	472	10							
NC8409P-1	524	538	15							
NC8409Q-1	575	591	20							
NC8409R-1	617	634	25	30129	13176	13'-103/4"	22'-5"	4.41.01/11		
NC8409S-1	650	673	30	30129	13170	13 -10%	22-5	14'-2'/4"		
NC8409T-1	715	736	40							
NC8409U-1	768	790	50							
NC8409V-1	808	832	60							
NC8409W-1	841	865	75							

- 1 Use this bulletin for preliminary layouts only. Obtain current drawings from your Marley sales representative. All table data is per cell
- 2 Last numeral of model number indicates number of cells. Change as appropriate for your selection.
- 3 Nominal tons are based upon 95°F HW, 85°F CW, 78°F WB, 3 gpm/ton and standard low sound fans. The UPDATE web-based selection software provides NC model recommendations based on specific design requirements.
- 4 Standard overflow is a 4" dia. standpipe in the collection basin floor. The standpipe removes for flush-out and draining. See page 20 for side overflow option.
- 5 Outlet sizes vary according to gpm and arrangement. See pages 20 and 21 for outlet sizes and details.
- 6 Makeup water connection may be 1" or 2" dia., depending upon tower heat load, water pressure, and desired connections. See page 15 for additional information.

NC8410 NC8411 NC8412

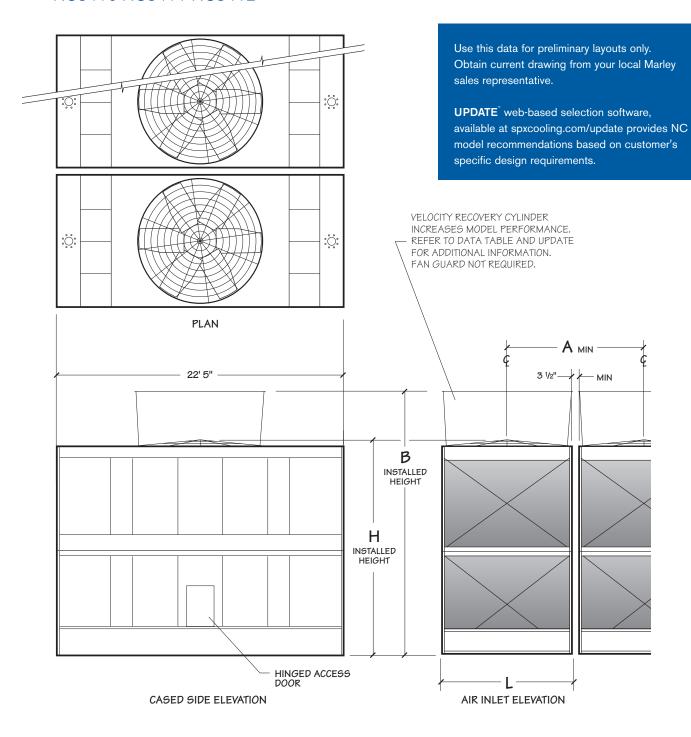


NC8410 NC8411 NC8412

Model	Nominal Tons	Nominal Tons with	Motor	Design Operating	Shipping		Dimensions					
note 2	note 3	VR Cylinder note 3	hp	Weight Ib	Weight lb	L	Н	В	А			
NC8410N-1	498	522	10									
NC8410P-1	566	593	15	_								
NC8410Q-1	620	654	20	_								
NC8410R-1	667	701	25	-		11'-10³/₄"		20'-6"				
NC8410S-1	708	744	30	33594	16311		16'-0"		12'-21/4"			
NC8410T-1	773	812	40	_								
NC8410U-1	828	872	50									
NC8410V-1	873	922	60	_								
NC8410W-1	927	966	75									
NC8411N-1	546	575	10									
NC8411P-1	615	651	15									
NC8411Q-1	672	710	20	_	17608							
NC8411R-1	717	761	25									
NC8411S-1	756	797	30	37334		11'-10³/₄"	18'-10"	23'-4"	12'-2'/4"			
NC8411T-1	822	864	40									
NC8411U-1	875	920	50	-								
NC8411V-1	920	973	60									
NC8411W-1	975	1032	75	-								
NC8412P-1	693	730	15									
NC8412Q-1	757	793	20	_								
NC8412R-1	807	847	25									
NC8412S-1	852	893	30									
NC8412T-1	926	971	40	42915	19757	13'-103/4"	18'-10"	23'-4"	14'-21/4"			
NC8412U-1	988	1032	50									
NC8412V-1	1038	1085	60									
NC8412W-1	1107	1156	75									
NC8412X-1	1185	1240	100									

- 1 Use this bulletin for preliminary layouts only. Obtain current drawings from your Marley sales representative. All table data is per cell
- 2 Last numeral of model number indicates number of cells. Change as appropriate for your selection.
- 3 Nominal tons are based upon 95°F HW, 85°F CW, 78°F WB, 3 gpm/ton and standard low sound fans. The UPDATE web-based selection software provides NC model recommendations based on specific design requirements.
- 4 Standard overflow is a 4" dia. standpipe in the collection basin floor. The standpipe removes for flush-out and draining. See page 20 for side overflow option.
- 5 Outlet sizes vary according to gpm and arrangement. See pages 20 and 21 for outlet sizes and details.
- 6 Makeup water connection may be 1" or 2" dia., depending upon tower heat load, water pressure, and desired connections. See page 15 for additional information.


NC8413 NC8414

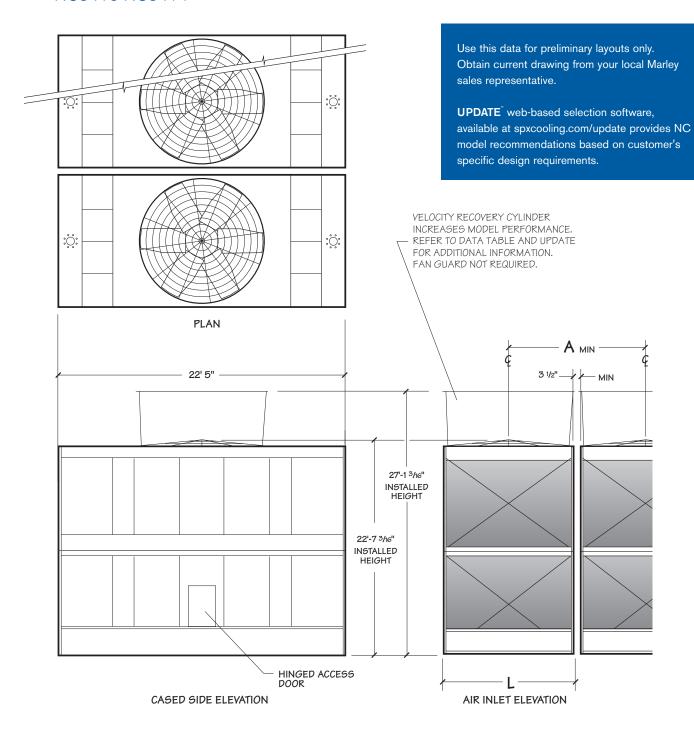

NC8413 NC8414

Model	Nominal Tons	Nominal Tons with	Motor	Design Operating	Shipping	Dimensions		
note 2	note 3	VR Cylinder note 3	hp	Weight lb	Weight lb	L	А	
NC8413N-1	598	640	10					
NC8413P-1	674	728	15					
NC8413Q-1	732	781	20					
NC8413R-1	782	835	25					
NC8413S-1	823	878	30	- - 41955	10596	11'-103/4"	12'-2'/4"	
NC8413T-1	893	957	40	41900	19586	11'-10°/4''	12-24	
NC8413U-1	951	1013	50					
NC8413V-1	1001	1065	60					
NC8413W-1	1063	1130	75					
NC8413X-1	1144	1214	100					
NC8414P-1	761	806	15					
NC8414Q-1	827	876	20					
NC8414R-1	883	933	25					
NC8414S-1	927	980	30					
NC8414T-1	1009	1066	40	- - 48355	22096	13'-10³/₄"	14'-21/4"	
NC8414U-1	1074	1133	50	40300	22096	15-10-74	14 -21/4	
NC8414V-1	1126	1185	60					
NC8414W-1	1201	1264	75					
NC8414X-1	1288	1358	100					
NC8414Y-1	1370	1455	125					

- 1 Use this bulletin for preliminary layouts only. Obtain current drawings from your Marley sales representative. All table data is per cell
- 2 Last numeral of model number indicates number of cells. Change as appropriate for your selection.
- 3 Nominal tons are based upon 95°F HW, 85°F CW, 78°F WB, 3 gpm/ton and standard low sound fans. The UPDATE web-based selection software provides NC model recommendations based on specific design requirements.
- 4 Standard overflow is a 4" dia. standpipe in the collection basin floor. The standpipe removes for flush-out and draining. See page 20 for side overflow option.
- 5 Outlet sizes vary according to gpm and arrangement. See pages 20 and 21 for outlet sizes and details.
- 6 Makeup water connection may be 1" or 2" dia, depending upon tower heat load, water pressure, and desired connections. See page 15 for additional information.

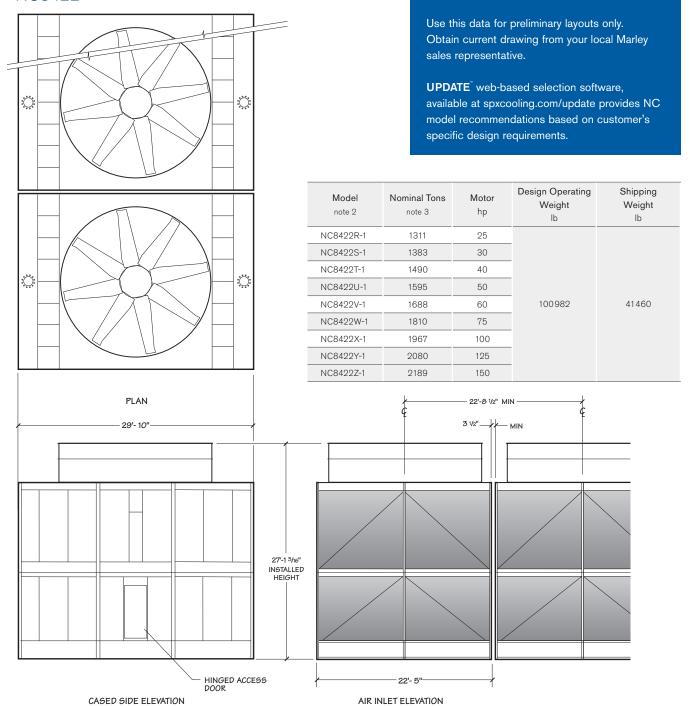

- 1 Use this bulletin for preliminary layouts only. Obtain current drawings from your Marley sales representative. All table data is per cell.
- 2 Last numeral of model number indicates number of cells. Change as appropriate for your selection.
- 3 Nominal tons are based upon 95°F HW, 85°F CW, 78°F WB, 3 gpm/ton and standard low sound fans. The UPDATE web-based selection software provides NC model recommendations based on specific design requirements.
- 4 Standard overflow is a 4" dia. standpipe in the collection basin floor. The standpipe removes for flush-out and draining.
- 5 Outlet sizes vary according to gpm and arrangement. See pages 23 for outlet sizes and details.
- 6 Makeup water connection may be 1" or 2" dia, depending upon tower heat load, water pressure, and desired connections. See page 15 for additional information.

When the ambient air temperature falls below 32°F, the water in a cooling tower can freeze. *Marley Technical Report #H-003* "Cooling Towers and Freezing Weather" describes how to prevent freezing during operation. Available at spxcooling.com or ask your Marley sales representative for a copy.

During shutdown, water collects in the cold water basin and may freeze solid. You can prevent freezing by adding heat to the water left in the tower—or, you can drain the tower and all exposed pipework at shutdown.

ELECTRIC BASIN HEATERS

An automatic basin water heater system is available consisting of the following components:

- Stainless steel electric immersion heater(s).
- -Threaded couplings are provided in the side of the collection basin.
- · NEMA 4 enclosure containing:
- -Magnetic contactor to energize heater.
- -Transformer to convert power supply to 24 volts for control circuit.
- -Solid state circuit board for temperature and lowwater cutoff.

Enclosure may be mounted on the side of the tower.

 Control probe in the collection basin to monitor water temperature and level.

Heater components are normally shipped separately for installation by others.

Note: any exposed piping that is still filled with water at shutdown—including the makeup water line—should be electrically traced and insulated (by others).

STEAM JET BASIN HEATERS

Penberthy Houdaille bronze steam jet heaters (1/4" to 3/4") are available for freeze protection (installation by others). Injectors install in a coupling provided in the side of the collection basin. Live steam, as required, is injected directly into the water. Condensed steam adds water to the basin, and the excess will exit the overflow of the tower.

INDOOR STORAGE TANK

With this type of system, water flows from an indoor tank, through the load system, and back to the tower, where it is cooled. The cooled water flows by gravity from the tower to the tank located in a heated space. At shutdown, all exposed water drains into the tank, where it is safe from freezing. Although we do not produce tanks, many of our representatives offer tanks supplied by reputable manufacturers.

The amount of water needed to successfully operate the system depends on the tower size and gpm and on the volume of water contained in the piping system to and from the tower. You must select a tank large enough to contain those combined volumes—plus a level sufficient to maintain a flooded suction on your pump. Control makeup water according to the level where the tank stabilizes during operation.

Tired of having to design your piping and tower layout to accommodate the standards of cooling tower manufacturers? Marley's multiple variety of piping systems accommodates your design intentions to make your layout of the NC both expedient and economical.

- Single or dual hot water inlet connections.
- · Side inlet, bottom inlet or top inlet connections.
- Side cold water outlet connections. NC8401-NC8414.
- · Bottom cold water outlet connections.
- · A variety of makeup, overflow and drain options.


For the single inlet connection all piping to the distribution basins is part of the tower package. Installation and design costs are reduced and the need for extra piping and supports are eliminated. The single bottom inlet connection is perfect for multicell applications-keeping all the inlet piping below the tower.

Unless otherwise specified, single-cell towers - NC8401 through NC8414 - normally have a cased-face outlet appropriate for the design water flow rate-see pages 20 and 21. This usually assures the lowest possible installed tower elevation. Cased-face outlet connection pipes extend approximately 3" outside the basin, and are beveled for weld connection and also grooved for a mechanical coupling.


Outlet piping can be kept below the cold water basin level by choosing either a depressed sump or a bottom outlet connection in lieu of the cased-face outlets. Both outlet designs conform to standard class 125 ANSI pipe flange specifications. Easily removable debris screens are optional on bottom outlets and are standard on all other outlet arrangements.

Depressed sumps are made of inert fire-retardant FRP or heavy-gauge welded stainless steel. Unless otherwise specified towers with galvanized steel collection basins are supplied with FRP sumps and towers with stainless steel basins are supplied with stainless sumps.


Multicell towers, intended to operate together as a common unit, are joined by steel flumes between the collection basins or piping below the tower basins. These connectors equalize the operating water level between basins and also provide a flow passage from cells not equipped with outlets or makeup valves, often eliminating the need to specify an outlet and makeup valve for each cell on a multicell installation.

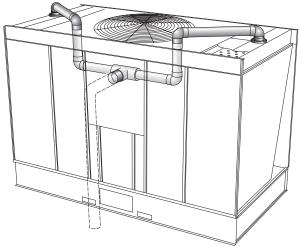

SIDE INLET PIPING

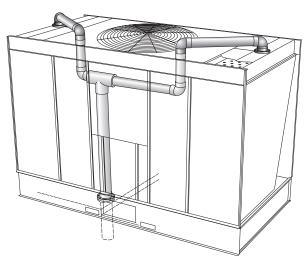

BOTTOM INLET PIPING

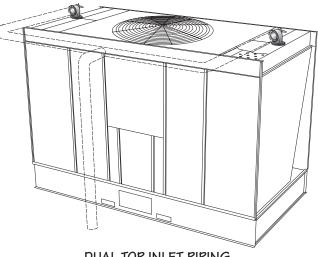

DUAL TOP INLET PIPING

If each cell is to be equipped with an outlet, cased-face outlet — NC8401 through NC8414 — can be used on end cells of multicell towers, but not on interior cells. For direct outlet from each cell on installations of three or more cells, use either the depressed sump or bottom outlet on interior cells.

The best choice for a tower used with a remote or indoor storage tank—see page 13—or on a concrete cold water basin is usually a bottom outlet.

A cased-face outlet equipped tower - NC8401 through NC8414 - can be installed on a flat concrete slab if a side drain and overflow are also specified—see page 20. Consult your Marley sales representative for complete information.

MAKEUP

The amount of water constantly evaporated from a cooling tower varies directly with the heat load applied. In addition to evaporation, water is normally lost to the blowdown (bleed-off) necessary to maintain dissolved solids concentration at an acceptable level in the circulating water system.

The NC is equipped with one or more float-operated, mechanical makeup valves to automatically replenish this lost water. The tables on this page, calculated for a concentration of 3 times normal, indicate the rate of water loss—and the size of valve(s) required. If your installation's cold water basin will drain by gravity to a remote storage tank—or if you plan a separate means of controlling makeup water—a price reduction is available for deleting the Marley valve(s). We also offer an optional electronic liquid-level control.

In most instances cooling towers will see the highest water usage at design heat load. Off design conditions (99% of the time) water usage will be less. For a better understanding of how much water your application will use throughout the year, consult our water usage calculator at:

spxcooling.com/watercalc

If too much water is still being consumed consult your Marley sales representative for water saving alternatives.


	Makeup Water Flow Required-gpm to Maintain Three (3) Concentrations									
T		Coo	ling "Rang	je" (HW -	CW)					
Tower gpm	5°F	10°F	15°F	20°F	30°F	40°F				
200	2	3	4	5	8	10				
400	3	5	8	10	15	20				
600	4	8	12	15	23	30				
800	5	10	15	20	30	40				
1000	7	13	19	25	38	50				
1500	10	19	29	38	57	75				
2000	13	25	38	50	75	100				
3000	19	38	57	75	113	150				
4000	25	50	75	100	150	200				
5000	32	63	94	125	188	250				
6000	38	75	113	150	225	300				
8000	50	100	150	200	300	400				

NOTE

 If circulating water is to be maintained at 2 concentrations instead of 3, multiply table gpm values by 1.36 before sizing makeup valve.


Make	up Valve Flow Capacities	-gpm
Pressure at Valve Inlet while flowing-psig	1" Diameter Valve	2" Diameter Valve
10	56	90
20	78	120
30	92	143
40	106	160
50	117	167

- If makeup water pressure exceeds 50 psig, use pressure reducer ahead of valve.
- For flow requirements exceeding the above limitations, use multiples of the same size valve.

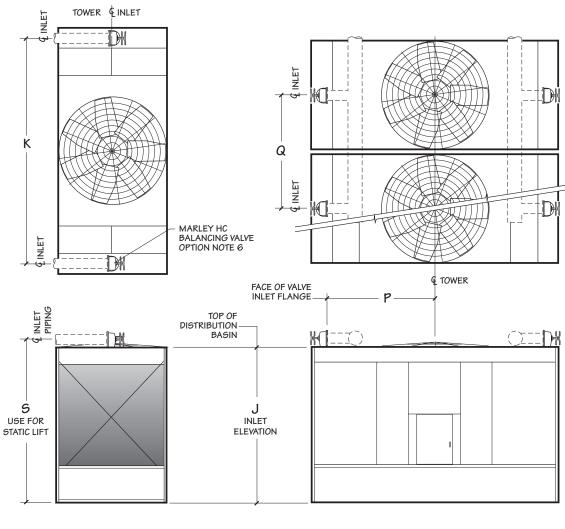


SINGLE CELL MULTICELL

Model				- Fan Diameter	Inlet Diameter		
wodei	J	K	S	Р	Q	ran Diameter	miet Diameter
NC8401	9'-9"	11'-1"	10'-53/16"	5'-3"	6'-93/4"	72"	2 at 6"
NC8402	9'-9"	12'-5"	10'-53/16"	5'-11"	8'-81/4"	84"	2 at 6"
NC8403	11'-55/16"	16'-01/2"	12'-27/16"	7'-8 3/4"	8'-81/4"	84"	2 at 8"
NC8405	11'-55/16"	17'-91/2"	12'-27/16"	8'-71/4"	10'-21/4"	108"	2 at 8"
NC8407	11'-55/16"	19'-07/8"	12'-2 ⁷ /16"	9'-215/16"	12'-21/4"	120"	2 at 8"
NC8409	11'-55/16"	20'-31/2"	12'-47/16"	9'-91/2"	14'-21/4"	144"	2 at 10"

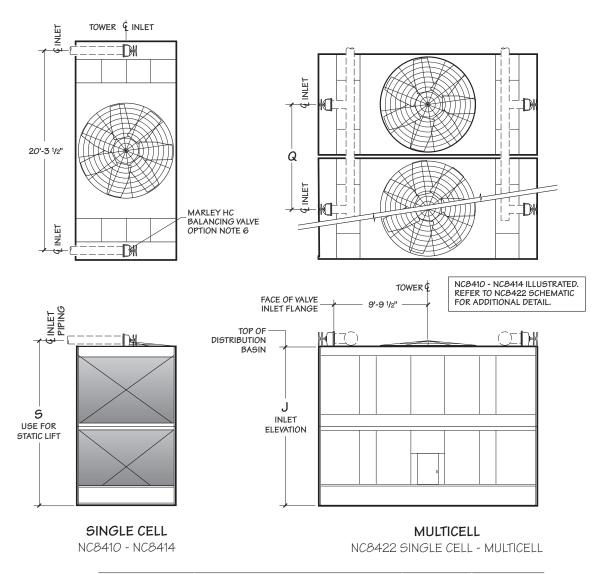


Model		Dimensions		Fam Diameter	Inlet Diameter	
Model	J	S	Q	Fan Diameter		
NC8410	15'-6"	16'-5"	12'-21/4"	132"	2 at 10"	
NC8411	18'-35/8"	19'-23/4"	12'-21/4"	132"	2 at 10"	
NC8412	18'-35/8"	19'-2³/₄"	14'-21/4"	144"	2 at 10"	
NC8413	22'-03/4"	22'-113/8"	12'-21/4"	132"	2 at 10"	
NC8414	22'-03/4"	22'-113/8"	14'-21/4"	144"	2 at 10"	
NC8422	22'-03/4"	23'-17/8"	22'-81/2"	228"	2 at 14"	

- 1 Use this bulletin for preliminary layouts only. Obtain current drawings from your Marley sales representative.
- 2 Pumping head contributed by the tower is static lift "S". Add your system dynamic pipe losses for total.
- 3 The tower will support the vertical weight of piping shown within the plan area of the tower only. All piping loads, including thrust and lateral loads of riser and horizontal piping must be supported independent of the tower. See inlet piping drawings for details.
- 4 All piping and supports—and their design—are by others.
- 5 Allow adequate clearance for entry to tower access doors and safe use of optional ladder. Refer to appropriate Marley drawings.
- 6 You may choose to use 90° short radius flanged elbows in place of HC balancing valves on single-cell towers where inlet piping is balanced for equal flow. Pipe elevation remains as shown.

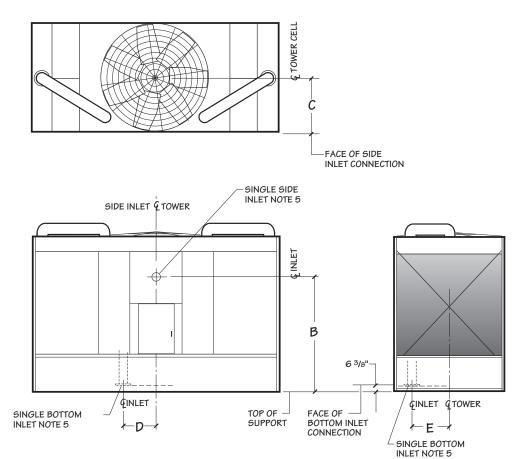


Model		Dimens	ions		Inlet Diameter	
Wodei	В	В С		Е	met Diameter	
NC8401	7'-67/16"	3'-31/16"	na	na	6"	
NC8402	7'-65/8"	5'-0'3/16"	2'-41/8"	2'-0"	8"	
NC8403	9'-39/16"	5'-011/16"	2'-43/16"	2'-5"	8"	
NC8405	9'-29/16"	5'-117/8"	2'-711/16"	3'-01/4"	10"	
NC8407	9'-111/16"	7'-01/16"	2'-105/8"	4'-2"	10"	
NC8409	9'-21/8"	8'-0"	2'-107/8"	4'-8"	10"	

- 1 Use this bulletin for preliminary layouts only. Obtain current drawings from your Marley sales representative.
- 2 All external piping loads, including weight, thrust and lateral loads of riser and horizontal piping plus the weight of water in the internal riser must be supported independent of the tower. Internal riser adds additional vertical operating loads to external piping at the bottom inlet flange.
- 3 All piping and supports beyond the inlet connection—and their design—are by others.
- 4 Allow adequate clearance for entry to tower access doors and safe use of optional ladder. Refer to appropriate Marley drawings.
- 5 You may choose either a bottom inlet connection or a side inlet connection. The bottom inlet connects at the tower collection basin floor. Refer to appropriate Marley drawings.
- 6 Contact your Marley sales representative for the required pump head for single-inlet applications.
- Weight of internal piping must be added to tower weights. Contact your Marley sales representative for combined tower weight information.

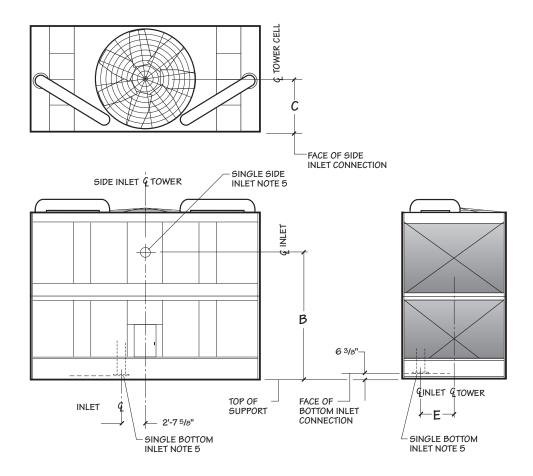

Model		Inlet Diameter		
Model	В	С	E	met Diameter
NC8410	13'-31/2"	7'-37/16"	4'-6"	10"
NC8411	16'-11/2"	7'-37/16"	4'-6"	12"
NC8412	16'-11/2"	8'-21/2"	5'-515/16"	12"
NC8413	19'-105/8"	7'-37/16"	4'-6"	12"
NC8414	19'-105/8"	8'-21/2"	5'-515/16"	12"

- 1 Use this bulletin for preliminary layouts only. Obtain current drawings from your Marley sales representative.
- 2 All external piping loads, including weight, thrust and lateral loads of riser and horizontal piping plus the weight of water in the internal riser must be supported independent of the tower. Internal riser adds additional vertical operating loads to external piping at the bottom inlet flange.
- 3 All piping and supports beyond the inlet connection—and their design—are by others.
- 4 Allow adequate clearance for entry to tower access doors and safe use of optional ladder. Refer to appropriate Marley drawings.
- 5 You may choose either a bottom inlet connection or a side inlet connection. The bottom inlet connects at the tower collection basin floor. Refer to appropriate Marley drawings.
- 6 Contact your Marley sales representative for the required pump head for single-inlet applications.
- Weight of internal piping must be added to tower weights. Contact your Marley sales representative for combined tower weight information.

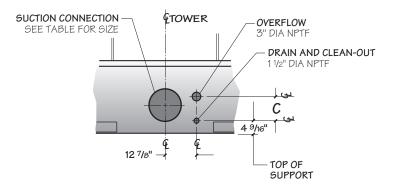


DRAIN AND OVERFLOW CONNECTIONOPTION


NOTE -

• Standard overflow is a 4" dia. standpipe in the collection basin floor. The standpipe removes for flush-out and draining.

Model		Dimensions	
wodei	А	В	С
NC8401	10"	3'-41/8"	81/8"
NC8402	10"	4'-33/8"	81/8"
NC8403	111/4"	4'-33/8"	815/16"
NC8405	111/4"	5'-03/8"	815/16"
NC8407	111/4"	6'-03/8"	815/16"
NC8409	111/4"	7'-03/8"	815/16"
NC8410	111/4"	6'-03/8"	111/2"
NC8411	111/4"	6'-03/8"	135/16"
NC8412	111/4"	7'-03/8"	135/16"
NC8413	111/4"	6'-03/8"	135/16"
NC8414	111/4"	7'-03/8"	135/16"

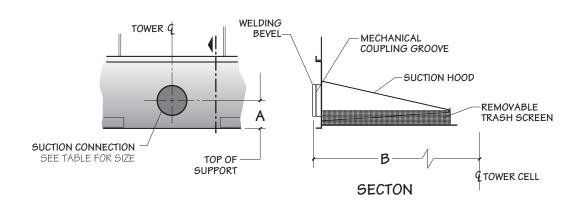

CASED-FACE OUTLET CONNECTION

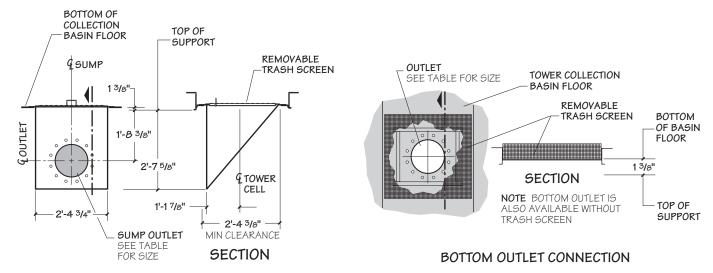



DEPRESSED SIDE-OUTLET SUMP CONNECTION

STAINLESS STEEL OR FRP


	Maximum gpm Per Outlet Diameter											
O41 - 4 T	Fla T	Model					Outlet	Diameter				
Outlet Type	Flow Type	Wodei	4"	6"	8"	10"	12"	14"	16"	18"	20"	24"
	pump flow w/ anti-vortex plate or	NC8401 thru NC8405	157	355	630	993	1413	1729	2285	2509	3322	4019
	gravity flow w/ or w/o anti-vortex plate	NC8407 thru NC8414	167	380	673	1061	1510	1848	2442	3164	3829	4896
	pump flow w/o anti-vortex plate	NC8401 thru NC8414	71	162	287	453	644	788	1042	1349	1676	2433
	pump flow w/ anti-vortex plate or	NC8401 thru NC8405		900	1595	2515	3578	4284				
Sump	gravity flow w/ or w/o anti-vortex plate	NC8407 thru NC8414		900	1595	2515	3578	4379				
	pump flow w/o anti-vortex plate	NC8401 thru NC8414		630	1116	1761	2505	3065				
Cased-Face	G I	NC8401 thru NC8405		900	1595	2515	3578					
Outlet	pump flow only	NC8407 thru NC8414		900	1595	2515	3578	4379				

- Flow rate may be limited by the maximum gpm for unit size.
- For gravity-flow situations (as to an indoor tank), use bottom outlet or depressed side outlet sump. Cased-face outlet is not recommended for gravity flow.
- gpm limits are the outlet capacities per outlet based on the design operating water level—81/2" above the top of support on models NC8401 through NC8405—91/w2" on NC8407 thru NC8414.

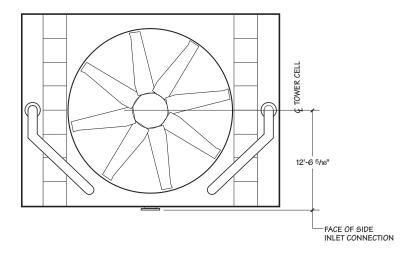

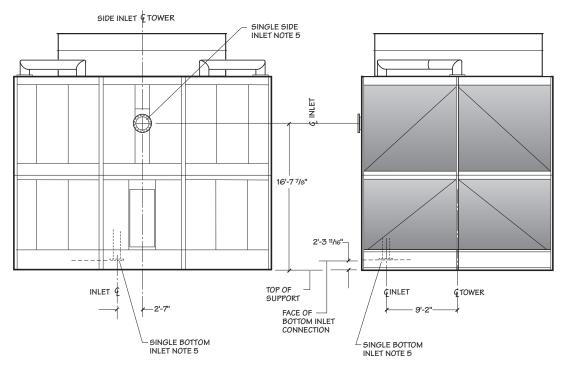


- 1 Use this bulletin for preliminary layouts only. Obtain current drawings from your Marley sales representative.
- 2 All external piping loads, including weight, thrust and lateral loads of riser and horizontal piping plus the weight of water in the internal riser must be supported independent of the tower. Internal riser adds additional vertical operating loads to external piping at the bottom inlet flange.
- 3 All piping and supports beyond the inlet connection—and their design—are by others.
- 4 Allow adequate clearance for entry to tower access doors and safe use of optional ladder. Refer to appropriate Marley drawings.
- 5 You may choose either a bottom inlet connection or a side inlet connection. The bottom inlet connects at the tower collection basin floor. Refer to appropriate Marley drawings.
- 6 Contact your Marley sales representative for the required pump head for single-inlet applications.
- Weight of internal piping must be added to tower weights. Contact your Marley sales representative for combined tower weight information.

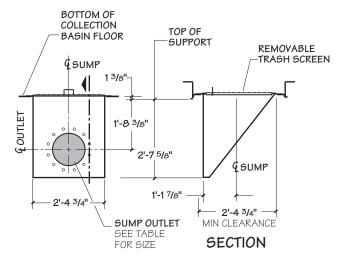


DEPRESSED SIDE-OUTLET SUMP CONNECTION

STAINLESS STEEL OR FRP UP TO 14" DIAMETER

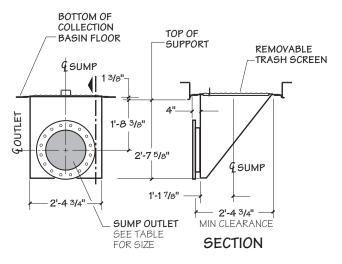

DEPRESSED SIDE-OUTLET FLANGED SUMP CONNECTION

16" AND 18" DIAMETER

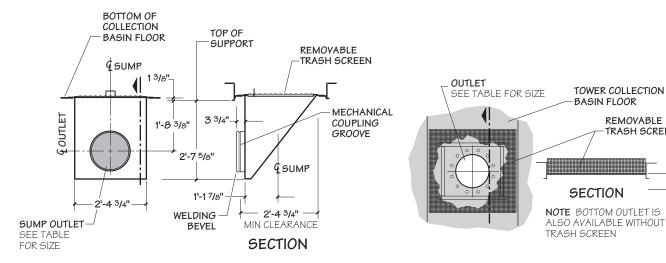

DEPRESSED SIDE-OUTLET BEYEL - GROOVED CONNECTION

16" AND 18" DIAMETER

BOTTOM OUTLET CONNECTION

REMOVABLE

TRASH SCREEN

воттом

OF BASIN FLOOR


TOP OF


SUPPORT

1 1/2"

Maximum gpm Per Outlet Diameter										
Outlet Type	Flour Times		Outlet Diameter							
	Flow Type	6"	8"	10"	12"	14"	16"	18"	20"	24"
Bottom	pump flow w/ anti-vortex plate or gravity flow w/ or w/o anti-vortex plate		757	1194	1699	2079	2748	3560	4420	6419
Sump	pump flow with anti-vortex plate		1595	2515	3578	4379	5787	7746		

- Flow rate may be limited by the maximum gpm for unit size.
- 16" and 18" sumps are only available in stainless steel.
- For gravity-flow situations (as to an indoor tank), use bottom outlet.
- Flow limits are the outlet capacities per outlet based on 115%" design operating water level.

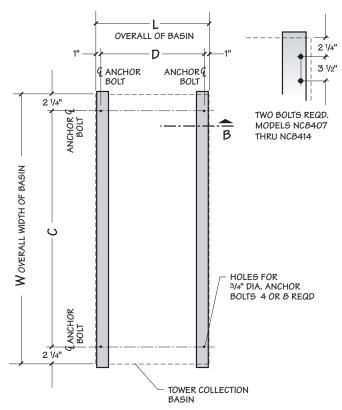

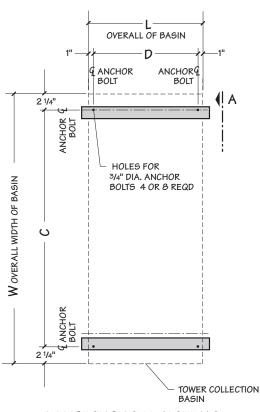

SUPPORTING STEEL


SINGLE CELL

SUPPORTING STEEL ALTERNATE

SINGLE CELL


		Dimer	Design	Design			
Model	W	L	С	D	Operating Weight/Cell lb	Operating Load at Anchor lb	
NC8401	12'-10"	6'-61/4"	12'-51/2"	6'-41/4"	7810	1952	
NC8402	14'-2"	8'-43/4"	13'-91/2"	8'-23/4"	10171	2543	
NC8403	18'-2"	8'-43/4"	17'-91/2"	8'-23/4"	15812	3953	
NC8405	19'-11"	9'-10³/₄"	19'-61/2"	9'-83/4"	19691	4923	
NC8407	21'-0"	11'-103/4"	20'-71/2"	11'-83/4"	24824	6206	
NC8409	22'-5"	13'-103/4"	22'-01/2"	13'-8³/₄"	30013	7503	
NC8410	22'-5"	11'-103/4"	22'-01/2"	11'-83/4"	33594	8399	
NC8411	22'-5"	11'-103/4"	22'-01/2"	11'-83/4"	37334	9334	
NC8412	22'-5"	13'-103/4"	22'-01/2"	13'-8³/₄"	42915	10729	
NC8413	22'-5"	11'-103/4"	22'-01/2"	11'-83/4"	41995	10489	
NC8414	22'-5"	13'-103/4"	22'-01/2"	13'-8³⁄₄"	48355	12089	

- 1 Use this bulletin for preliminary layouts only. Obtain current drawings from your Marley sales representative for final design.
- 2 Purchaser to provide tower support complete with holes and anchor bolts. Do not use studs! Anchor points must be framed flush and level at too.
- 3 Design operating weight occurs with collection basin full to overflow level. Actual operating weight varies with gpm and piping scheme.
- 4 Tower may be placed on a flat concrete slab. Side outlet and optional side drain and overflow must be specified. See pages 13 and 18 and consult your Marley sales representative.
- 5 Tower may be supported from piers at each anchor bolt location, as a support alternative.
- 6. Dimensions between anchor bolts may vary depending on the number of cells and options. Dimensions shown are for a standard two cell arrangement. Obtain current drawings from your Marley sales representative for final dimension.

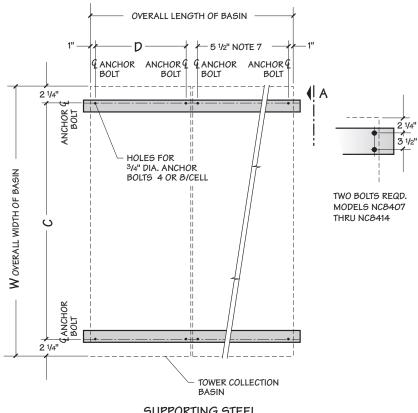


SUPPORTING STEEL

MULTICELL

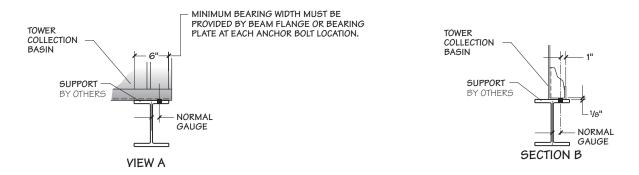



- 1 Use this bulletin for preliminary layouts only. Obtain current drawings from your Marley sales representative for final design.
- 2 Purchaser to provide tower support complete with holes and anchor bolts. Do not use studs! Anchor points must be framed flush and level at top.
- 3 Design operating weight occurs with collection basin full to overflow level. Actual operating weight varies with gpm and piping scheme.
- 4 Tower may be placed on a flat concrete slab. Side outlet and optional side drain and overflow must be specified. See pages 13 and 18 and consult your Marley sales representative.
- 5 Tower may be supported from piers at each anchor bolt location, as a support alternative.
- 6. Dimensions between anchor bolts may vary depending on the number of cells and options. Dimensions shown are for a standard two cell arrangement. Obtain current drawings from your Marley sales representative for final dimension.

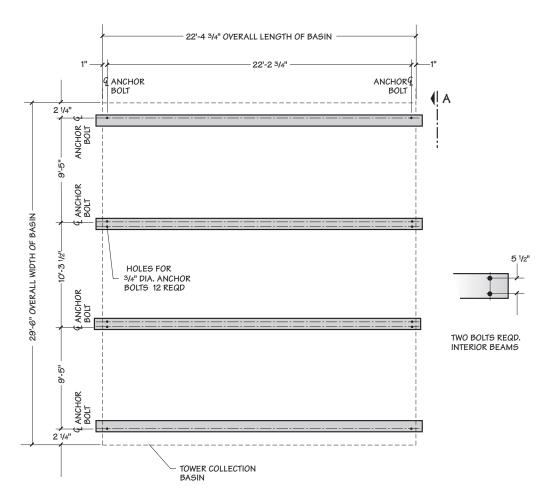

SUPPORTING STEEL


SINGLE CELL

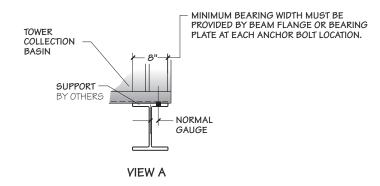

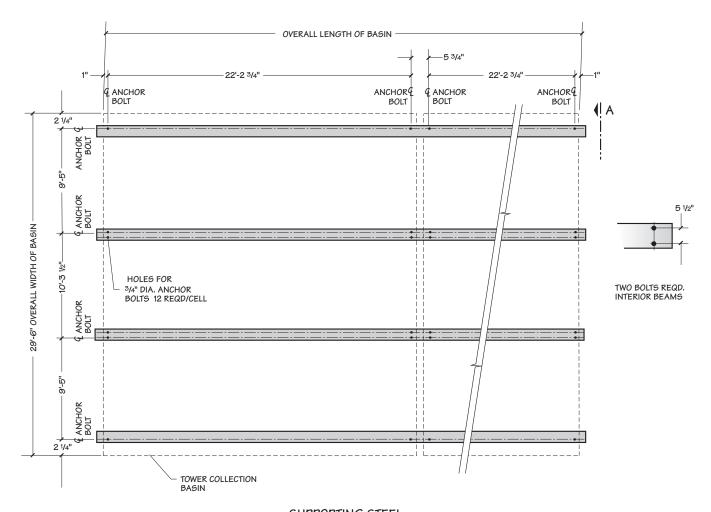


SUPPORTING STEEL
MULTICELL

- 1 Use this bulletin for preliminary layouts only. Obtain current drawings from your Marley sales representative for final design.
- Purchaser to provide tower support complete with holes and anchor bolts. Do not use studs! Anchor points must be framed flush and level at top.
- 3 Design operating weight occurs with collection basin full to overflow level. Actual operating weight varies with gpm and piping scheme.
- 4 Tower may be supported from piers at each anchor bolt location, as a support alternative. Consult your Marley sales representative for additional details.
- 5. Dimensions between anchor bolts may vary depending on the number of cells and options. Dimensions shown are for a standard two cell arrangement. Obtain current drawings from your Marley sales representative for final dimension.

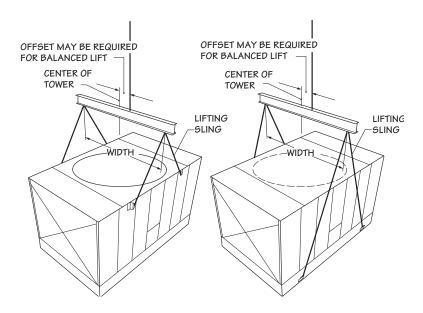


Model	Width	Minimum Sling Length
NC8401	6'-7"	6'-0"
NC8402	8'-6"	6'-0"
NC8403	8'-6"	8-0"
NC8405	10'-0"	8'-0"
NC8407	12'-0"	9'-0"
NC8409	14-0"	18'-0"
NC8410 Top	12'-0"	9'-0"
NC8410 Bottom	12'-0"	16'-6"
NC8411 Top	12'-0"	9'-0"
NC8411 Bottom	12'-0"	18'-0"
NC8412 Top	14'-0"	9'-0"
NC8412 Bottom	14'-0"	18'-0"
NC8413 Top	12'-0"	9'-0"
NC8413 Bottom	12'-0"	18'-0"
NC8414 Top	14'-0"	9'-0"
NC8414 Bottom	14'-0"	18'-0"

- All hoisting clip holes are 11/4".
- On multicell tower installations, overall length of shackle pins should not exceed 5%".
- For overhead lifts or where additional safety is required, add slings beneath the tower unit.

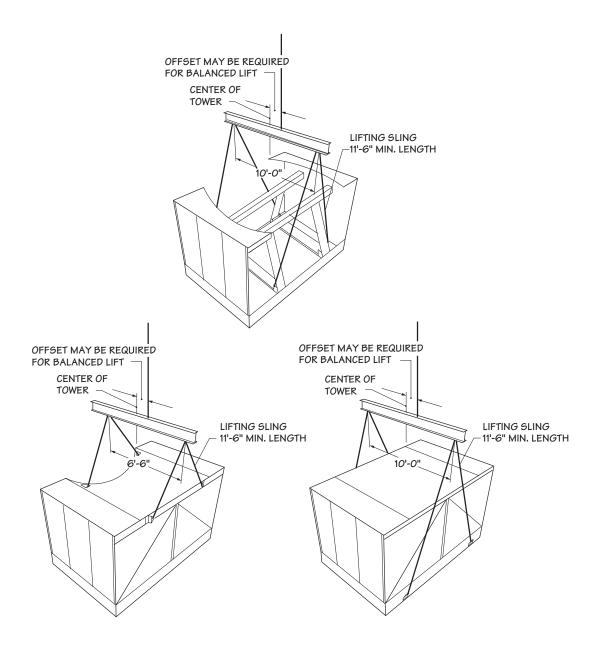

- All hoisting clip holes are 11/4".
- Overall length of shackle pins should not exceed 2½".
 For overhead lifts or where additional safety is required, add slings beneath the tower unit.

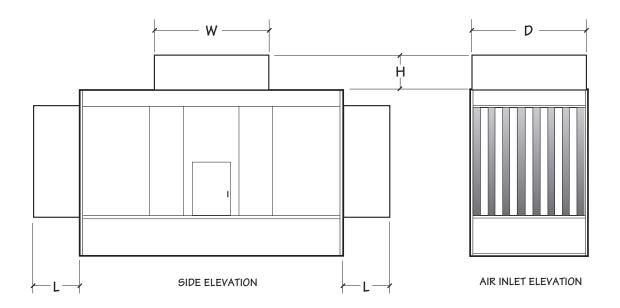

Model	Dimensions				Add To Design Operating Weight lb		
	L	W	D	Н	Discharge Attenuator	Inlet Attenuators	
1100101	2'-31/4"	6'-10"	6'-11/2"	2'-3"	620	1523	
NC8401	4'-61/2"	6'-10"	6'-11/2"	4'-6"	1241	3045	
1100100	2'-31/4"	7'-101/4"	8'-0"	2'-3"	774	1869	
NC8402	4'-61/2"	7'-101/4"	8'-0"	4'-6"	1547	3738	
1100100	2'-31/4"	7'-101/4"	8'-0"	2'-3"	774	2101	
NC8403	4'-61/2"	7'-101/4"	8'-0"	4'-6"	1547	4201	
1100405	2'-31/4"	9'-9"	9'-6"	2'-3"	1051	2460	
NC8405	4'-61/2"	9'-9"	9'-6"	4'-6"	2102	4920	
1100405	2'-31/4"	10'-83/8"	11'-6"	2'-3"	1395	3115	
NC8407	4'-61/2"	10'-8³/ ₈ "	11'-6"	4'-6"	2791	6231	
1100100	2'-31/4"	12'-93/8"	13'-6"	2'-3"	1616	3508	
NC8409	4'-61/2"	12'-93/8"	13'-6"	4'-6"	3233	7016	
1100440	2'-31/4"	11'-87/8"	11'-6"	2'-3"	1564	5042	
NC8410	4'-61/2"	11'-87/8"	11'-6"	4'-6"	3128	10083	
1100444	2'-31/4"	11'-87/8"	11'-6"	2'-3"	1564	5562	
NC8411	4'-61/2"	11'-87/8"	11'-6"	4'-6"	3128	11125	
NC8412	2'-31/4"	12'-93/8"	13'-6"	2'-3"	1616	6272	
	4'-61/2"	12'-93/8"	13'-6"	4'-6"	3233	12545	
NIOO 440	2'-31/4"	11'-87/8"	11'-6"	2'-3"	1564	6417	
NC8413	4'-61/2"	11'-87/8"	11'-6"	4'-6"	3128	12834	
NIOO 44.4	2'-31/4"	12'-93/8"	13'-6"	2'-3"	1616	7051	
NC8414	4'-61/2"	12'-93/8"	13'-6"	4'-6"	3233	14103	

- 1 Use this bulletin for preliminary layouts only. Obtain current drawings from your Marley sales representative. All table data is per cell.
- 2 Attenuators are field installed by others with hardware provided by Marley
- 3 Attenuators are supported by the tower. Additional support not required.
- 4 Discharge attenuators are not available for NC models with velocity recovery cylinders.

 5 Attenuators are not available for NC8422 model.





7401 WEST 129 STREET

OVERLAND PARK, KS 66213 USA
913 664 7400 | spxcooling@spx.com

spxcooling.com

TECH-NC-18 | ISSUED 5/2018
© 2001-2018 SPX COOLING TECHNOLOGIES, INC | ALL RIGHTS RESERVED
In the interest of technological progress, all products are subject to design and/or material change without notice.

