



BY JOHNSON CONTROLS

AIR-COOLED LIQUID CHILLERS HERMETIC SCROLL

INSTALLATION, OPERATION, MAINTENANCE

Replaces 150.72-NM1 (908)

Form 150.72-NM1 (110)

035-21911-000

YLAA0070 - YLAA0175 AIR-COOLED SCROLL CHILLERS WITH MICROCHANNEL CONDENSER COILS STYLE A (60 Hz) 70 - 175 TON 246-613 KW



Interim



GS560418.jpg

R-410A



Products are produced at a facility whose quality-management systems are ISO9001 certified.

IMPORTANT!

READ BEFORE PROCEEDING!

GENERAL SAFETY GUIDELINES

This equipment is a relatively complicated apparatus. During installation, operation, maintenance or service, individuals may be exposed to certain components or conditions including, but not limited to: refrigerants, oils, materials under pressure, rotating components, and both high and low voltage. Each of these items has the potential, if misused or handled improperly, to cause bodily injury or death. It is the obligation and responsibility of operating/service personnel to identify and recognize these inherent hazards, protect themselves, and proceed safely in completing their tasks. Failure to comply with any of these requirements could result in serious damage to the equipment and the property in

which it is situated, as well as severe personal injury or death to themselves and people at the site.

This document is intended for use by owner-authorized operating/service personnel. It is expected that this individual possesses independent training that will enable them to perform their assigned tasks properly and safely. It is essential that, prior to performing any task on this equipment, this individual shall have read and understood this document and any referenced materials. This individual shall also be familiar with and comply with all applicable governmental standards and regulations pertaining to the task in question.

SAFETY SYMBOLS

The following symbols are used in this document to alert the reader to areas of potential hazard:




DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



CAUTION identifies a hazard which could lead to damage to the machine, damage to other equipment and/or environmental pollution. Usually an instruction will be given, together with a brief explanation.



WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

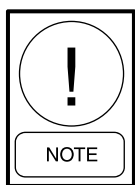

NOTE is used to highlight additional information which may be helpful to you.



External wiring, unless specified as an optional connection in the manufacturer's product line, is NOT to be connected inside the micro panel cabinet. Devices such as relays, switches, transducers and controls may NOT be installed inside the panel. NO external wiring is allowed to be run through the micro panel. All wiring must be in accordance with Johnson Controls published specifications and must be performed ONLY by qualified Johnson Controls personnel. Johnson Controls will not be responsible for damages/problems resulting from improper connections to the controls or application of improper control signals. Failure to follow this will void the manufacturer's warranty and cause serious damage to property or injury to persons.

CHANGEABILITY OF THIS DOCUMENT

In complying with Johnson Controls policy for continuous product improvement, the information contained in this document is subject to change without notice. While Johnson Controls makes no commitment to update or provide current information automatically to the manual owner, that information, if applicable, can be obtained by contacting the nearest Johnson Controls Engineered Systems Service office.

It is the responsibility of operating/service personnel to verify the applicability of these documents to the equipment in question. If there is any question in the mind of operating/service personnel as to the applicability of these documents, then prior to working on the equipment, they should verify with the owner whether the equipment has been modified and if current literature is available.

THIS PAGE INTENTIONALLY LEFT BLANK

TABLE OF CONTENTS

SECTION 1 – GENERAL CHILLER INFORMATION AND SAFETY	15
INTRODUCTION	15
WARRANTY	15
SAFETY AND QUALITY	15
Standards for Safety and Quality	15
Responsibility for Safety	16
ABOUT THIS MANUAL	16
MISUSE OF EQUIPMENT	16
Suitability for Application	16
Structural Support	16
Mechanical Strength	16
General Access	16
Pressure Systems	17
Electrical	17
Rotating Parts	17
Sharp Edges	17
Refrigerants and Oils	17
High Temperature and Pressure Cleaning	17
Emergency Shutdown	17
SECTION 2 – PRODUCT DESCRIPTION	19
INTRODUCTION	19
GENERAL SYSTEM DESCRIPTION	19
Compressors	19
Cooler (Evaporator)	19
Condenser	20
Millennium Control Center	20
COMMUNICATIONS	21
HIGH AMBIENT KIT	21
BUILDING AUTOMATION SYSTEM INTERFACE	21
POWER PANEL	21
ACCESSORIES AND OPTIONS	22
Power Options	22
Control Options	22
Compressor, Piping, Evaporator Options	22
Condenser and Cabinet Options	23
UNIT COMPONENTS	25
CONTROL / POWER PANEL COMPONENTS	27
PRODUCT IDENTIFICATION NUMBER (PIN)	29
BASIC UNIT NOMENCLATURE	29
PROCESS AND INSTRUMENTATION DIAGRAM	35

TABLE OF CONTENTS (CONT'D)

SECTION 3 – HANDLING AND STORAGE	37
DELIVERY AND STORAGE	37
INSPECTION	37
MOVING THE CHILLER	37
Lifting Weights	37
Rigging Instructions	38
SECTION 4 – INSTALLATION	39
INSTALLATION CHECKLIST	39
HANDLING	39
INSPECTION	39
LOCATION AND CLEARANCES	39
Foundation	39
Ground Level Locations	40
Rooftop Locations	40
Noise Sensitive Locations	40
SPRING ISOLATORS (OPTIONAL)	40
COMPRESSOR MOUNTING	40
REMOTE COOLER OPTION	40
CHILLED LIQUID PIPING	40
PIPEWORK ARRANGEMENT	41
DUCT WORK CONNECTION	42
General Requirements	42
WIRING	42
Evaporator Pump Start Contacts	42
System Run Contacts	42
Alarm Status Contacts	43
Remote Start/Stop Contacts	43
Remote Emergency Cutoff	43
Remote Temp Reset Input	43
Load Limit Input	43
Flow Switch Input	43
COMPRESSOR HEATERS	43
RELIEF VALVES	43
HIGH PRESSURE CUTOUT	43
SINGLE-POINT SUPPLY CONNECTION – TERMINAL BLOCK, NON-FUSED DISCONNECT	
SWITCH OR CIRCUIT BREAKER	44
USER CONTROL WIRING INPUTS	45
USER CONTROL WIRING OUTPUTS	46

TABLE OF CONTENTS (CONT'D)

SECTION 5 – TECHNICAL DATA	47
OPERATIONAL LIMITATIONS (ENGLISH)	47
Temperatures and Flows	47
Voltage Limitations.....	47
HEAT EXCHANGER FLOW, GPM.....	48
Ethylene & Propylene Glycol Correction Factors	48
PHYSICAL DATA (ENGLISH)	50
ELECTRICAL DATA.....	52
ELECTRICAL NOTES.....	53
ELECTRICAL DATA W/O PUMPS.....	54
Wiring Lugs.....	58
ELECTRICAL DATA W/ PUMPS.....	60
ELECTRICAL NOTES AND LEGEND	68
WIRING DIAGRAMS	72
Elementary Wiring Diagrams.....	72
Connection Diagrams	80
DIMENSIONS (ENGLISH).....	96
TECHNICAL DATA – CLEARANCES	101
WEIGHT DISTRIBUTION AND ISOLATOR MOUNTING POSITIONS	102
General	102
Sample Isolator Location Drawing.....	102
Isolator Locations.....	103
ISOLATOR INFORMATION (For units shipped on or after June 15, 2008).....	106
One Inch Deflection Spring Isolator Cross-reference.....	106
One Inch Deflection Spring Isolators Installation Instructions.....	107
Seismic Isolator Cross-reference	108
SEISMIC ISOLATOR INSTALLATION AND ADJUSTMENT.....	109
Duralene Isolator Cross-reference.....	110
Installation of Durulene Vibration Isolators	111
ISOLATOR INFORMATION (For units shipped before June 15, 2008).....	112
SLRS Seismic Isolator Specifications	112
SLRS Seismic Isolator Installation and Adjustment	113
One Inch Deflection Spring Isolator Cross-reference.....	114
Installation of 1” Deflection Mounts	115
Neoprene Isolator Cross-reference	116
Two Inch Deflection, Seismic Spring Isolator Cross-reference - SLRS	117
SLRS Seismic Isolator Installation and Adjustment	118

TABLE OF CONTENTS (CONT'D)

SECTION 6 – COMMISSIONING.....	119
PREPARATION – POWER OFF.....	119
Inspection	119
Refrigerant Charge	119
Service and Oil Line Valves	119
Compressor Oil.....	119
Fans	119
Isolation / Protection	119
Control Panel	119
Power Connections	119
Grounding	119
Supply Voltage.....	119
PREPARATION – POWER ON	120
Switch Settings.....	120
Compressor Heaters	120
Water System	120
Flow Switch.....	120
Temperature Sensor(s)	120
EQUIPMENT PRE-STARTUP AND STARTUP CHECKLIST	121
Pre-Startup	121
Startup	121
SETPOINTS ENTRY LIST	122
CHECKING SUPERHEAT AND SUBCOOLING.....	123
LEAK CHECKING	123
UNIT OPERATING SEQUENCE	124
SECTION 7 – UNIT CONTROLS.....	125
INTRODUCTION	125
IPU II and I/O Boards	125
Unit Switch	126
Display	126
Keypad.....	126
Battery Back-up	126
Transformer	126
Programming # of Compressors.....	126
STATUS KEY	127
Unit Status.....	127
General Status Messages	127
Fault Safety Status Messages	129
System Safeties	129
Unit Safeties	131
Unit Warning	131
Status Key Messages.....	132

TABLE OF CONTENTS (CONT'D)

DISPLAY/PRINT KEYS	133
Oper Data Key.....	133
Oper Data Quick Reference List.....	136
Print Key.....	137
Operating Data Printout	137
History Printout	138
History Displays	138
Software Version	140
ENTRY KEYS	141
Up and Down Arrow Keys.....	141
Enter/Adv Key	141
SETPOINTS KEYS.....	142
Cooling Setpoints.....	142
Leaving Chilled Liquid Control	142
Return Chilled Liquid Control	143
Remote Setpoint Control	143
Schedule/Advance Day Key	143
PROGRAM KEY.....	145
PROGRAM KEY LIMITS AND DEFAULT	147
SETPOINTS QUICK REFERENCE LIST	148
UNIT KEYS	149
Options Key	149
CLOCK	153
UNIT KEYS OPTIONS PROGRAMMING QUICK REFERENCE LIST	154
SECTION 8 – UNIT OPERATION	155
CAPACITY CONTROL	155
SUCTION PRESSURE LIMIT CONTROLS	155
DISCHARGE PRESSURE LIMIT CONTROLS	155
LEAVING CHILLED LIQUID CONTROL.....	155
LEAVING CHILLED LIQUID CONTROL/OVERRIDE TO REDUCE CYCLING.....	156
LEAVING CHILLED LIQUID SYSTEM LEAD/LAG AND COMPRESSOR SEQUENCING	156
RETURN CHILLED LIQUID CONTROL.....	157
RETURN CHILLED LIQUID SYSTEM LEAD/LAG AND COMPRESSOR SEQUENCING	158
ANTI-RECYCLE TIMER	159
ANTI-COINCIDENCE TIMER	159
EVAPORATOR PUMP CONTROL AND YORK HYDRO KIT PUMP CONTROL	159
EVAPORATOR HEATER CONTROL.....	159
PUMPDOWN CONTROL.....	159
STANDARD CONDENSER FAN CONTROL	159
LOAD LIMITING	163
COMPRESSOR RUN STATUS	163
ALARM STATUS	163
BAS/EMS TEMPERATURE RESET USING A VOLTAGE OR CURRENT SIGNAL	164

TABLE OF CONTENTS (CONT'D)

SECTION 9 – SERVICE AND TROUBLESHOOTING.....	165
CLEARING HISTORY BUFFERS.....	165
SERVICE MODE.....	165
SERVICE MODE – OUTPUTS	165
SERVICE MODE – CHILLER CONFIGURATION	166
SERVICE MODE – ANALOG AND DIGITAL INPUTS	166
CONTROL INPUTS/OUTPUTS	167
MICROBOARD LAYOUT	168
CHECKING INPUTS AND OUTPUTS.....	169
Digital Inputs.....	169
Analog Inputs – Temperature	169
Outside Air Sensor	169
Liquid & Refrigerant Sensor Test Points	170
Analog Inputs – Pressure	171
Digital Outputs.....	172
OPTIONAL PRINTER INSTALLATION	173
Parts.....	173
Assembly and Wiring.....	173
Obtaining a Printout	173
TROUBLESHOOTING	174
SECTION 10 – MAINTENANCE	177
IMPORTANT	177
COMPRESSORS.....	177
Oil Level Check.....	177
Oil Analysis	177
CONDENSER FAN MOTORS	177
CONDENSER COILS	177
OPERATING PARAMETERS	177
ON-BOARD BATTERY BACK-UP	177
EVAPORATOR HEATER.....	177
OVERALL UNIT INSPECTION.....	177
BACNET, MODBUS AND YORKTALK 2 COMMUNICATIONS.....	178
BACnet and Modbus Communications	181
Communications Data Map Notes	181
Yorktalk 2 Communications	185
TEMPERATURE CONVERSION CHART	189
R410A PRESSURE TEMPERATURE CHART	190

LIST OF FIGURES

FIG. 1 – UNIT COMPONENTS FRONT	25
FIG. 2 – UNIT COMPONENTS SIDE	26
FIG. 3 – POWER PANEL COMPONENTS	27
FIG. 4 – POWER PANEL / CONTROL COMPONENTS	28
FIG. 5 – REFRIGERANT FLOW DIAGRAM	34
FIG. 6 – PROCESS AND INSTRUMENTATION DIAGRAM	35
FIG. 7 – UNIT RIGGING/LIFTING	38
FIG. 8 – CHILLED LIQUID SYSTEM	41
FIG. 9 – SINGLE-POINT SUPPLY CONNECTION – TERMINAL BLOCK, NON-FUSED DISCONNECT SWITCH OR CIRCUIT BREAKER	44
FIG. 10 – CONTROL WIRING INPUTS	45
FIG. 11 – CONTROL WIRING OUTPUTS	46
FIG. 12 – ELEMENTARY WIRING DIAGRAM, SHT 1	72
FIG. 13 – ELEMENTARY WIRING DIAGRAM, SHT 2	74
FIG. 14 – ELEMENTARY WIRING DIAGRAM, SHT 3	76
FIG. 15 – ELEMENTARY WIRING DIAGRAM, SHT 4	78
FIG. 16 – CONNECTION DIAGRAM, SHT 1	80
FIG. 17 – CONNECTION DIAGRAM, SHT 2	82
FIG. 18 – CONNECTION DIAGRAM, SHT 3	84
FIG. 19 – CONNECTION DIAGRAM, SHT 6	86
FIG. 20 – CONNECTION DIAGRAM, SHT 7	88
FIG. 21 – DUAL PUMP WIRING	90
FIG. 22 – WIRING	92
FIG. 23 – WIRING DIAGRAM, SINGLE POINT WIRING OPTIONS	94
FIG. 24 – LAYOUT - POWER BLOCKS AND TRANSFORMERS	95
FIG. 25 – UNIT CLEARANCES – ALL MODELS	101
FIG. 26 – LEAVING WATER TEMPERATURE CONTROL EXAMPLE	155
FIG. 27 – SETPOINT ADJUST	156
FIG. 28 – CONDENSER FAN LOCATION WIRING DIAGRAMS	160
FIG. 29 – MICROBOARD LAYOUT	168
FIG. 30 – I/O BOARD RELAY CONTACT ARCHITECTURE	172
FIG. 31 – PRINTER TO MICROBOARD ELECTRICAL CONNECTIONS	173
FIG. 32 – MICRO PANEL CONNECTIONS	179

THIS PAGE INTENTIONALLY LEFT BLANK

LIST OF TABLES

TABLE 1 – TEMPERATURES AND FLOWS	47
TABLE 2 – VOLTAGE LIMITATIONS	47
TABLE 3 – ETHYLENE AND PROPYLENE GLYCOL CORRECTION FACTORS	48
TABLE 4 – PHYSICAL DATA (ENGLISH)	50
TABLE 5 – MICRO PANEL POWER SUPPLY	52
TABLE 6 – VOLTAGE RANGE	52
TABLE 7 – SETPOINTS ENTRY LIST	122
TABLE 8 – STATUS KEY MESSAGES QUICK REFERENCE LIST	132
TABLE 9 – OPERATION DATA	136
TABLE 10 – COOLING SETPOINTS, PROGRAMMABLE LIMITS AND DEFAULTS	144
TABLE 11 – PROGRAM KEY LIMITS AND DEFAULT	147
TABLE 12 – SETPOINTS QUICK REFERENCE LIST	148
TABLE 13 – UNIT KEYS OPTIONS PROGRAMMING QUICK REFERENCE LIST	154
TABLE 14 – SAMPLE COMPRESSOR STAGING FOR RETURN WATER CONTROL	157
TABLE 15 – RETURN CHILLED LIQUID CONTROL FOR 4 COMPRESSORS (6 STEPS).....	158
TABLE 16 – RETURN CHILLED LIQUID CONTROL FOR 4 COMPRESSORS (6 STEPS).....	158
TABLE 17 – YLAA STANDARD CONDENSER FAN CONTROL USING DISCHARGE PRESSURE ONLY (2, 3, OR 4 FANS PER SYSTEM)	161
TABLE 18 – YLAA STANDARD CONDENSER FAN CONTROL USING DISCHARGE PRESSURE ONLY (5 OR 6 FANS PER SYSTEM)	162
TABLE 19 – COMPRESSOR OPERATION – LOAD LIMITING	163
TABLE 20 – I/O DIGITAL INPUTS	167
TABLE 21 – I/O DIGITAL OUTPUTS	167
TABLE 22 – I/O ANALOG INPUTS	167
TABLE 23 – I/O ANALOG OUTPUTS	167
TABLE 24 – OUTDOOR AIR SENSOR.....	169
TABLE 25 – ENTERING/LEAVING CHILLED LIQUID TEMP. SENSOR, TEMPERATURE/VOLTAGE CORRELATION	170
TABLE 26 – PRESSURE TRANSDUCERS	171
TABLE 27 – TROUBLESHOOTING.....	174
TABLE 28 – MINIMUM, MAXIMUM AND DEFAULT VALUES	179
TABLE 29 – VALUES REQUIRED FOR BAS COMMUNICATION.....	180
TABLE 30 – REAL TIME ERROR NUMBERS.....	180
TABLE 31 - BACNET AND MODBUS COMMUNICATIONS DATA MAP.....	182
TABLE 32 - YORKTALK 2 COMMUNICATIONS DATA MAP.....	186

THIS PAGE INTENTIONALLY LEFT BLANK

SECTION 1 – GENERAL CHILLER INFORMATION AND SAFETY

INTRODUCTION

YORK YLAA0070 - 0175 (70 -175 ton, 246 - 613kW) chillers are manufactured to the highest design and construction standards to ensure high performance, reliability and adaptability to all types of air conditioning installations.

The unit is intended for cooling water or glycol solutions and is not suitable for purposes other than those specified in this manual.

This manual contains all the information required for correct installation and commissioning of the unit, together with operating and maintenance instructions. The manuals should be read thoroughly before attempting to operate or service the unit.

All procedures detailed in the manuals, including installation, commissioning and maintenance tasks must only be performed by suitably trained and qualified personnel.

The manufacturer will not be liable for any injury or damage caused by incorrect installation, commissioning, operation or maintenance resulting from a failure to follow the procedures and instructions detailed in the manuals.

WARRANTY

Johnson Controls warrants all equipment and materials against defects in workmanship and materials for a period of eighteen months from date of shipment, or 12 months from date of shipment, whichever occurs first, unless labor or extended warranty has been purchased as part of the contract.

The warranty is limited to parts only replacement and shipping of any faulty part, or sub-assembly, which has failed due to poor quality or manufacturing errors. All claims must be supported by evidence that the failure has occurred within the warranty period, and that the unit has been operated within the designed parameters specified.

All warranty claims must specify the unit model, serial number, order number and run hours/starts. Model and serial number information is printed on the unit identification plate.

The unit warranty will be void if any modification to the unit is carried out without prior written approval from Johnson Controls.

JOHNSON CONTROLS

For warranty purposes, the following conditions must be satisfied:

- The initial start of the unit must be carried out by trained personnel from an Authorized Johnson Controls Service Center (*see Commissioning Page 119*).
- Only genuine YORK approved spare parts, oils, coolants, and refrigerants must be used.
- All the scheduled maintenance operations detailed in this manual must be performed at the specified times by suitably trained and qualified personnel (*see Maintenance Section, Page 177*).
- Failure to satisfy any of these conditions will automatically void the warranty (*see Warranty Policy*).

SAFETY AND QUALITY

Standards for Safety and Quality

YLAA chillers are designed and built within an ISO 9002 accredited design and manufacturing organization. The chillers comply with the applicable sections of the following Standards and Codes:

- ANSI/ASHRAE Standard 15- Safety Code for Mechanical Refrigeration.
- ANSI/NFPA Standard 70- National Electrical Code (N.E.C.).
- ASME Boiler and Pressure Vessel Code- Section VIII Division 1.
- ARI Standard 550/590 - Positive Displacement Compressors and Air Cooled Rotary Screw Water Chilling Packages.
- ASHRAE 90.1- Energy Efficiency compliance.
- Conform to Intertek Testing Services, formerly ETL, for construction of chillers and provide ETL/cETL listing label.
- Manufactured in facility registered to ISO 9002.
- OSHA – Occupational Safety and Health Act.

In addition, the chillers conform to Underwriters Laboratories (U.L.) for construction of chillers and provide U.L./cU.L. Listing Label.

Responsibility for Safety

Every care has been taken in the design and manufacture of the unit to ensure compliance with the safety requirements listed above. However, the individual operating or working on any machinery is primarily responsible for:


- Personal safety, safety of other personnel, and the machinery.
- Correct utilization of the machinery in accordance with the procedures detailed in the manuals.

ABOUT THIS MANUAL


The following terms are used in this document to alert the reader to areas of potential hazard.



A **WARNING** is given in this document to identify a hazard, which could lead to personal injury. Usually an instruction will be given, together with a brief explanation and the possible result of ignoring the instruction.

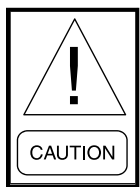

A **CAUTION** identifies a hazard which could lead to damage to the machine, damage to other equipment and/or environmental pollution. Usually an instruction will be given, together with a brief explanation and the possible result of ignoring the instruction.

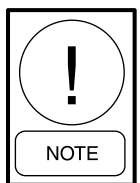

A **NOTE** is used to highlight additional information, which may be helpful to you but where there are no special safety implications.

The contents of this manual include suggested best working practices and procedures. These are issued for guidance only, and they do not take precedence over the above stated individual responsibility and/or local safety regulations.

This manual and any other document supplied with the unit are the property of Johnson Controls which reserves all rights. They may not be reproduced, in whole or in part, without prior written authorization from an authorized Johnson Controls representative.

MISUSE OF EQUIPMENT

Suitability for Application

The unit is intended for cooling water or glycol solutions and is not suitable for purposes other than those specified in these instructions. Any use of the equipment other than its intended use, or operation of the equipment contrary to the relevant procedures may result in injury to the operator, or damage to the equipment.

The unit must not be operated outside the design parameters specified in this manual.

Structural Support

Structural support of the unit must be provided as indicated in these instructions. Failure to provide proper support may result in injury to the operator, or damage to the equipment and/or building.

Mechanical Strength

The unit is not designed to withstand loads or stresses from adjacent equipment, pipework or structures. Additional components must not be mounted on the unit. Any such extraneous loads may cause structural failure and may result in injury to the operator, or damage to the equipment.

General Access

There are a number of areas and features, which may be a hazard and potentially cause injury when working on the unit unless suitable safety precautions are taken. It is important to ensure access to the unit is restricted to suitably qualified persons who are familiar with the potential hazards and precautions necessary for safe operation and maintenance of equipment containing high temperatures, pressures and voltages.

Pressure Systems

The unit contains refrigerant vapor and liquid under pressure, release of which can be a danger and cause injury. The user should ensure that care is taken during installation, operation and maintenance to avoid damage to the pressure system. No attempt should be made to gain access to the component parts of the pressure system other than by suitably trained and qualified personnel.

Electrical

The unit must be grounded. No installation or maintenance work should be attempted on the electrical equipment without first switching power OFF, isolating and locking-off the power supply. Servicing and maintenance on live equipment must only be performed by suitably trained and qualified personnel. No attempt should be made to gain access to the control panel or electrical enclosures during normal operation of the unit.

Rotating Parts

Fan guards must be fitted at all times and not removed unless the power supply has been isolated. If ductwork is to be fitted, requiring the wire fan guards to be removed, alternative safety measures must be taken to protect against the risk of injury from rotating fans.

Sharp Edges

The fins on the air-cooled condenser coils have sharp metal edges. Reasonable care should be taken when working in contact with the coils to avoid the risk of minor abrasions and lacerations. The use of gloves is recommended.

Frame rails, brakes, and other components may also have sharp edges. Reasonable care should be taken when working in contact with any components to avoid risk of minor abrasions and lacerations.

Refrigerants and Oils

Refrigerants and oils used in the unit are generally nontoxic, non-flammable and non-corrosive, and pose no special safety hazards. Use of gloves and safety glasses is, however, recommended when working on the unit. The build up of refrigerant vapor, from a leak for example, does pose a risk of asphyxiation in confined or enclosed spaces and attention should be given to good ventilation.

High Temperature and Pressure Cleaning

High temperature and pressure cleaning methods (e.g. steam cleaning) should not be used on any part of the pressure system as this may cause operation of the pressure relief device(s). Detergents and solvents, which may cause corrosion, should also be avoided.

Emergency Shutdown

In case of emergency, the control panel is fitted with a Unit Switch to stop the unit in an emergency. When operated, it removes the low voltage 120 VAC electrical supply from the inverter system, thus shutting down the unit.

THIS PAGE INTENTIONALLY LEFT BLANK

SECTION 2 – PRODUCT DESCRIPTION



GS560418.JPG

INTRODUCTION

YORK YLAA Air-Cooled Scroll Chillers provide chilled water for all air conditioning applications using central station air handling or terminal units. They are completely self-contained and are designed for outdoor (roof or ground level) installation. Each complete packaged unit includes hermetic scroll compressors, a liquid cooler, air cooled condenser, a charge of Zero Ozone Depletion Potential Refrigerant R-410A and a weather resistant microprocessor control center, all mounted on a pressed steel base.

The units are completely assembled with all interconnecting refrigerant piping and internal wiring, ready for field installation.

Prior to delivery, the packaged unit is pressure-tested, evacuated, and fully charged with Refrigerant-R410A and oil. After assembly, a complete operational test is performed with water flowing through the cooler to assure that the refrigeration circuit operates correctly.

The unit structure is heavy-gauge, galvanized steel. This galvanized steel is coated with baked-on powder paint, which, when subjected to ASTM B117 1000 hour, salt spray testing, yields a minimum ASTM 1654 rating of "6". Units are designed in accordance with NFPA 70 (National Electric Code), ASHRAE/ANSI 15 Safety code for mechanical refrigeration, ASME, and rated in accordance with ARI Standard 550/590.

GENERAL SYSTEM DESCRIPTION

Compressors

The chiller has suction-gas cooled, hermetic, scroll compressors. The YLAA compressors incorporate a compliant scroll design in both the axial and radial direction. All rotating parts are statically and dynamically balanced. A large internal volume and oil reservoir provides greater liquid tolerance. Compressor crankcase heaters are also included for extra protection against liquid migration.

Cooler (Evaporator)

The cooler is a direct expansion type with refrigerant inside high efficiency copper tubes. The liquid flowing through the cooler is forced over the tubes by water baffles.

The Water baffles are constructed of brass to resist corrosion. The removable heads allow access to the internally enhanced, seamless copper tubes. Vent and drain connections are included.

Water inlet and outlet connections are grooved for compatibility with field supplied ANSI/AWWA C-606 couplings.

The cooler is equipped with a heater controlled by a separate thermostat. The heater provides freeze protection for the cooler down to -20° F (-29° C) ambient. The cooler is covered with ¾" flexible, closed cell, foam insulation (K = 0.25).

The evaporator is constructed, tested and stamped in accordance with applicable sections of ASME pressure vessel code for minimum 450 PSIG (3103 kPa) refrigerant side design working pressure and 150 PSIG (1034 kPa) water side design working pressure

A strainer with a mesh size between .5 and 1.5 mm (40 mesh) is recommended upstream of the heat exchanger to prevent clogging from water system debris.

Condenser

Coils

Condenser coils are Microchannel type and made of a single material to avoid galvanic corrosion due to dissimilar metals. Coils and headers are brazed as one piece. Integral sub cooling is included. The design working pressure of the coil is 650 PSIG (45 bar).

Low Sound Fans

The condenser fans are composed of corrosion resistant aluminum hub and glass-fiber reinforced polypropylene composite blades molded into a low noise airfoil section. They are designed for maximum efficiency and are statically and dynamically balanced for vibration free operation. They are directly driven by independent motors, and positioned for vertical air discharge. The fan guards are constructed of heavy gauge, rust resistant, coated steel. All blades are statically and dynamically balanced for vibration free operation.

Motors

The fan motors are Totally Enclosed Air-Over, squirrel cage type, current protected. They feature ball bearings that are double sealed and permanently lubricated.

Ambient Kit (High)

Required if units are to operate when the ambient temperature is above 115°F (46°C). Includes discharge pressure transducers.

Millennium Control Center

All controls are contained in a NEMA 3R/12 cabinet with hinged outer door and includes Liquid Crystal Display with Light Emitting Diode backlighting for outdoor viewing:

- Two display lines
- Twenty characters per line

Display/Print

Color coded 12-button non-tactile keypad with sections for display and print of typical information:

- Chilled liquid temperatures
- Ambient temperature
- System pressures (each circuit)
- Operating hours and starts (each compressor)
- Print calls up to the liquid crystal display
- Operating data for the systems
- History of fault shutdown data for up to the last six fault shutdown conditions.
- An RS-232 port, in conjunction with this press-to-print button, is provided to permit the capability of hard copy print-outs via a separate printer (by others).

Entry

This section is used to enter setpoints or modify system values.

Setpoints

Updating can be performed to:

- Chilled liquid temperature setpoint and range
- Remote reset temperature range
- Set daily schedule/holiday for start/stop
- Manual override for servicing
- Low and high ambient cutouts
- Number of compressors
- Low liquid temperature cutout
- Low suction pressure cutout
- High discharge pressure cutout
- Anti-recycle timer (compressor start cycle time)
- Anti-coincident timer (delay compressor starts)

Unit

This section is used to:

- Set time
- Set unit options

Unit On/Off

The microprocessor control center is capable of displaying the following:

- Return and leaving liquid temperature
- Low leaving liquid temperature cutout setting
- Low ambient temperature cutout setting
- Outdoor air temperature
- English or Metric data
- Suction pressure cutout setting
- Each system suction pressure
- Discharge pressure (optional)
- Liquid Temperature Reset via a Johnson Controls ISN DDC or Building Automation System (by others) via a 4 to 20 milliamp or 0 to 10 VDC input.
- Anti-recycle timer status for each system
- Anti-coincident system start timer condition
- Compressor run status
- No cooling load condition
- Day, date and time
- Daily start/stop times
- Holiday status
- Automatic or manual system lead/lag control
- Lead system definition
- Compressor starts and operating hours (each compressor)
- Status of hot gas valves, evaporator heater and fan operation
- Run permissive status
- Number of compressors running
- Liquid solenoid valve status
- Load and unload timer status
- Water pump status

Provisions are included for: pumpdown at shutdown; optional remote chilled water temperature reset and two steps of demand load limiting from an external building automation system. Unit alarm contacts are standard.

* Intensity of Protection European Standard

** International Electrotechnical Commission

The operating program is stored in non-volatile memory battery backed RAM to eliminate chiller failure due to AC powered failure/battery discharge. Programmed setpoints are retained in lithium battery-backed RTC memory for 5 years minimum.

COMMUNICATIONS

- Native communication capability for BACnet (MS/TP) and Modbus
- Optional communication available for N2 and LON via eLink option

HIGH AMBIENT KIT

Allows units to operate when the ambient temperature is above 115°F (46°C). Includes sun shield panels and discharge pressure transducers.

BUILDING AUTOMATION SYSTEM INTERFACE

The Microprocessor Board can accept a 4 to 20 milliamp, 0 to 10VDC input to reset the leaving chiller liquid temperature from a Building Automation System.

- The standard unit capabilities include remote start-stop, remote water temperature reset via a PWM 4 to 20 milliamp or 0 to 10VDC input signal or up to two stages of demand (load) limiting depending on model.
- The standard control panel can be directly connected to a Johnson Controls Building Automated System.

POWER PANEL

Each panel contains:

- Compressor power terminals
- Compressor motor starting contactors per I.E.C.**
- Control power terminals to accept incoming for 115-1-60 control power
- Fan contactors and overload current protection

The power wiring is routed through liquid-tight conduit to the compressors and fans.

ACCESSORIES AND OPTIONS

Power Options

Compressor Power Connections

Single-point terminal block connection(s) are provided as standard. The following power connections are available as options. *(See electrical data for specific voltage and options availability.)* **(Factory-mounted)**

Single-Point Supply Terminal Block

Includes enclosure, terminal-block and interconnecting wiring to the compressors. Separate external protection must be supplied, by others, in the incoming compressor-power wiring. (Do not include this option if either the Single-Point Non-Fused Disconnect Switch or Single-Point Circuit Breaker options have been included.)

Single-Point Non-Fused Disconnect Switch Or Multiple-Point Non-Fused Disconnect Switches

Unit-mounted disconnect switch (es) with external, lockable handle (in compliance with Article 440-14 of N.E.C.), can be supplied to isolate the unit power voltage for servicing. Separate external fusing must be supplied, by others in the power wiring, which must comply with the National Electrical Code and/or local codes.

Single-Point Non-Fused Disconnect Switch With Individual System Breakers

Includes unit-mounted disconnect switch with external, lockable handles (in compliance with Article 440-14 of N.E.C.) to isolate unit power voltage for servicing. Factory interconnecting wiring is provided from the disconnect switch to factory supplied system circuit breakers.

Single-Point Circuit Breaker

A unit mounted circuit breaker with external, lockable handle (in compliance with N.E.C. Article 440-14); can be supplied to isolate the power voltage for servicing. (This option includes the Single-Point Power connection.)

Control Transformer

Converts unit power voltage to 115-1-60 (2.0 or 3.0 KVA capacity). Factory mounting includes primary and secondary wiring between the transformer and the control panel. **(Factory-mounted)**

Power Factor Correction Capacitors

Will correct unit compressor power factors to between 0.90-0.95. **(Factory-mounted)**

Control Options

Ambient Kit (Low)

Units will operate to 25.0°F (-3.9°C). This accessory includes all necessary components to permit chiller operation to 0°F (-18°C). (This option includes the Discharge Pressure Transducer / Readout Capability option.) For proper head pressure control in applications below 30°F (-1°C) where wind gusts may exceed 5 mph, it is recommended that Optional Condenser Louvered Enclosure Panels also be included. **(Factory-mounted)**

Ambient Kit (High)

Required if units are to operate when the ambient temperature is above 115°F (46°C). Includes discharge pressure transducers.

Language LCD And Keypad Display

Spanish, French, German, and Italian unit LCD controls and keypad display available. Standard language is English.

Compressor, Piping, Evaporator Options

Low Temperature Brine

Required for brine chilling below 30°F (-1°C) leaving brine temperature. Option includes resized thermal expansion valve.

Chicago Code Relief Valves

Unit will be provided with relief valves to meet Chicago code requirements. **(Factory-mounted)**

Service Isolation Valve

Service suction and discharge (ball type) isolation valves are added to unit per system. This option also includes a system high pressure relief valve in compliance with ASHRAE 15. **(Factory-mounted)**

Hot Gas By-Pass

Permits continuous, stable operation at capacities below the minimum step of compressor unloading to as low as 5% capacity (depending on both the unit and operating conditions) by introducing an artificial load on the cooler. Hot gas by-pass is installed on only refrigerant system #1 on two-circuited units. **(Factory-mounted)**

Flanges (ANSI/AWWA C-606 Couplings Type)

Consists of (2) flange adapters for grooved end pipe (standard 150 psi [10.5 bar] cooler). (Not available on optional DX cooler 300 PSIG DWP waterside.) (**Field-mounted**)

Flow Switch

The flow switch or its equivalent must be furnished with each unit.

150 Psig (10.5 Bar) DWP

For standard units. Johnson Controls model F61MG-1C Vapor-proof SPDT, NEMA 3R switch (150 PSIG [10.5 bar] DWP), - 20°F to 250°F (- 29°C to 121°C), with 1" NPT connection for upright mounting in horizontal pipe. (**Field-mounted**)

Differential Pressure Switch

Alternative to an above mentioned flow switch. Pretempco model DPS300AP40PF-82582-5 (300 psi max. working pressure), SPDT 5 amp 125/250VAC switch, Range 3 to 40 PSID, deadband 0.5 to 0.8 psi, with 1/4" NPTE Pressure Connections.

Hydro-Kit

Factory installed Hydro-Kit suitable for water glycol systems with up to 35% glycol at leaving temperatures down to 20° F. The Hydro-kit option is available in a single or dual configuration (dual as standby duty only), with totally enclosed permanently lubricated pump motors.

The hydro-kit option comes standard with a balancing valve, flow switch, pressure ports, suction guide, strainer, bleed and drain valves and frost protection.

Expansion tanks are optional within the Hydro-Kit option.

Condenser and Cabinet Options

Condenser coil protection against corrosive environments is available by choosing any of the following options. For additional application recommendations, refer to *FORM 150.1 -ES1*. (**Factory-mounted**)

Post-Coated Dipped Condenser Coils

The unit is built with dipped-cured condenser coils. This is the choice for corrosive applications (with the exception of strong alkalis, oxidizers and wet bromine, chlorine and fluorine in concentrations greater than 100 ppm).

Enclosure Panels (Unit)

Tamperproof Enclosure Panels prevent unauthorized access to units. Enclosure Panels can provide an aesthetically pleasing alternative to expensive fencing. Additionally, for proper head pressure control, Johnson Controls recommends the use of Condenser Louvered Panels for winter applications where wind gusts may exceed five miles per hour. The following types of enclosure panels are available:

- **Wire Panels (Full Unit)** - Consists of welded wire-mesh guards mounted on the exterior of the unit. Prevents unauthorized access, yet provides free air flow. (**Factory-mounted**)
- **Wire/Louvered Panels** - Consists of welded wiremesh panels on the bottom part of unit and louvered panels on the condenser section of the unit. (**Factory-mounted**).
- **Louvered Panels (Condenser Coil Only)** - Louvered panels are mounted on the sides and ends of the condenser coils for protection. (**Factory-mounted**)
- **Louvered Panels (Full Unit)** - Louvered panels surround the front, back, and sides of the unit. They prevent unauthorized access and visually screen unit components. Unrestricted air flow is permitted through generously sized louvered openings. This option is applicable for any outdoor design ambient temperature up to 115°F (46°). (**Factory-mounted**)

Coil End Hail Guard

Louvered panel attached to exposed coil end. (**Factory-mounted**)

Sound Attenuation

One or both of the following sound attenuation options are recommended for residential or other similar sound sensitive locations:

- **Compressor Acoustic Sound Blanket** - Each compressor is individually enclosed by an acoustic sound blanket. The sound blankets are made with one layer of acoustical absorbent textile fiber of 5/8" (15mm) thickness; one layer of anti-vibrating heavy material thickness of 1/8" (3 mm). Both are closed by two sheets of welded PVC, reinforced for temperature and UV resistance. (Factory-mounted)
- **Ultra Quiet Fans** - Lower RPM, 8-pole fan motors are used with steeper-pitch fans. (Factory-mounted)

Vibration Isolators

Level adjusting, spring type 1" (25.4mm) or seismic deflection or neoprene pad isolators for mounting under unit base rails. (**Field-mounted**)

UNIT COMPONENTS


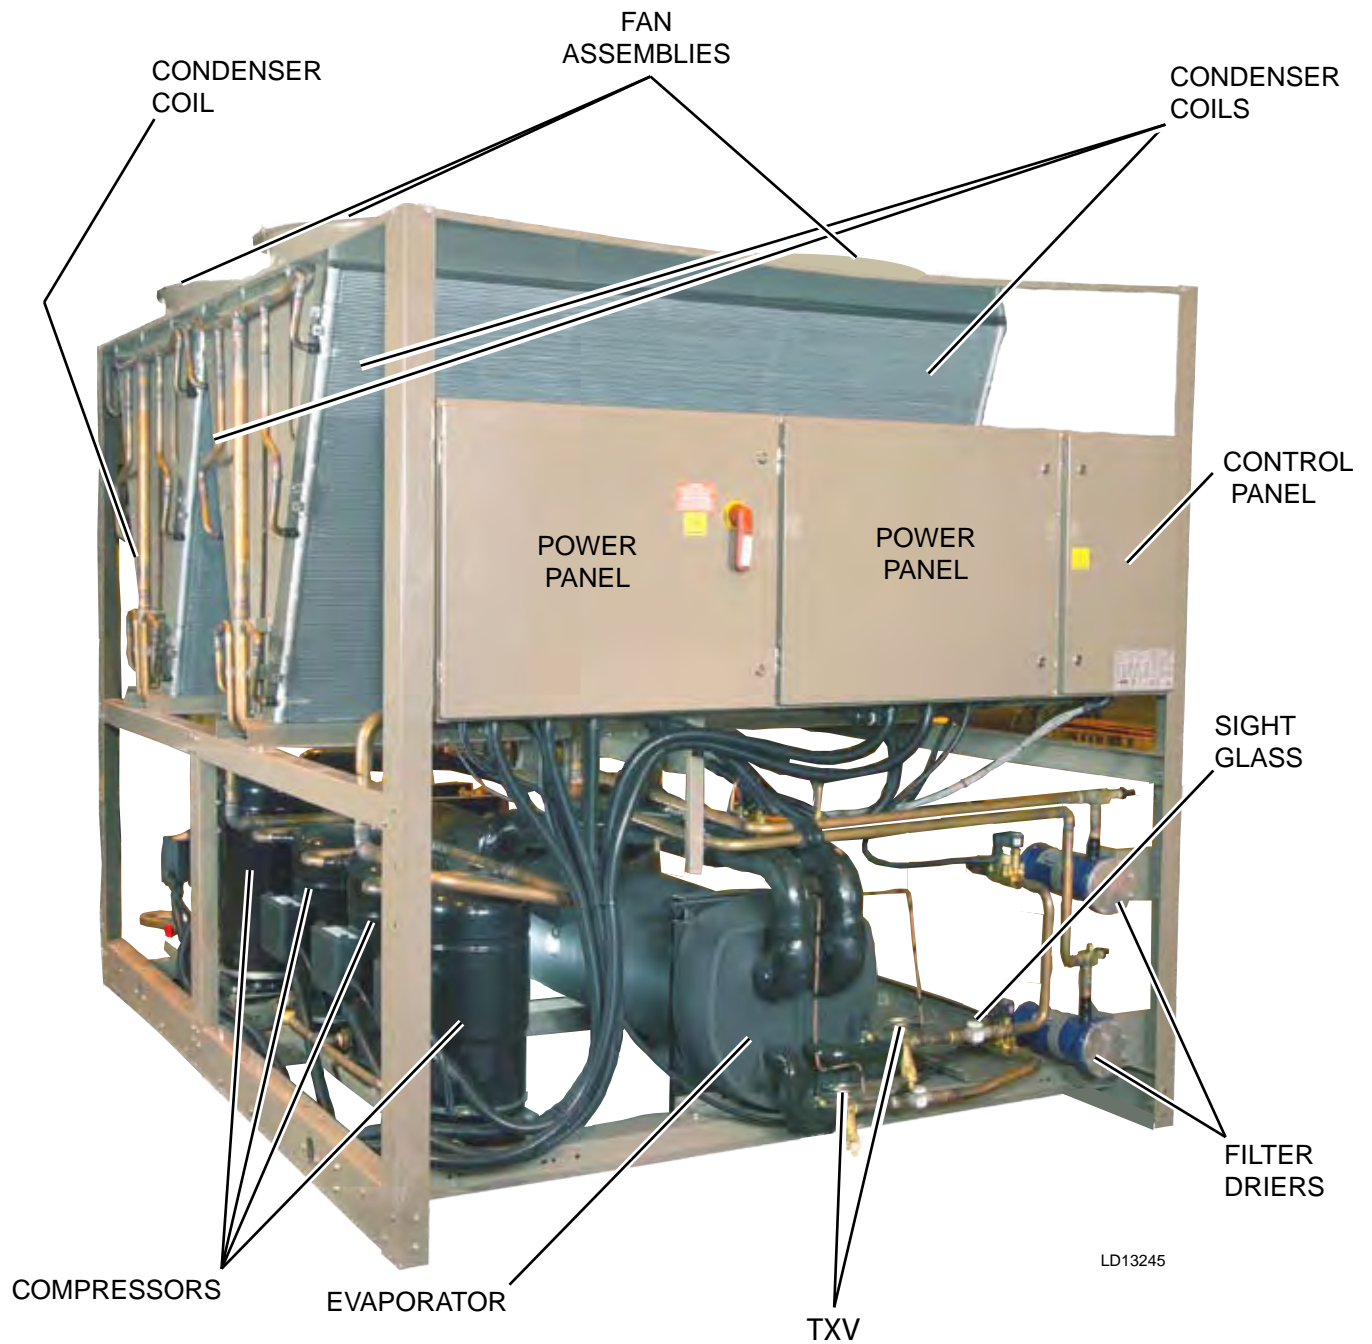


FIG. 1 – UNIT COMPONENTS FRONT


UNIT COMPONENTS (CONT'D)

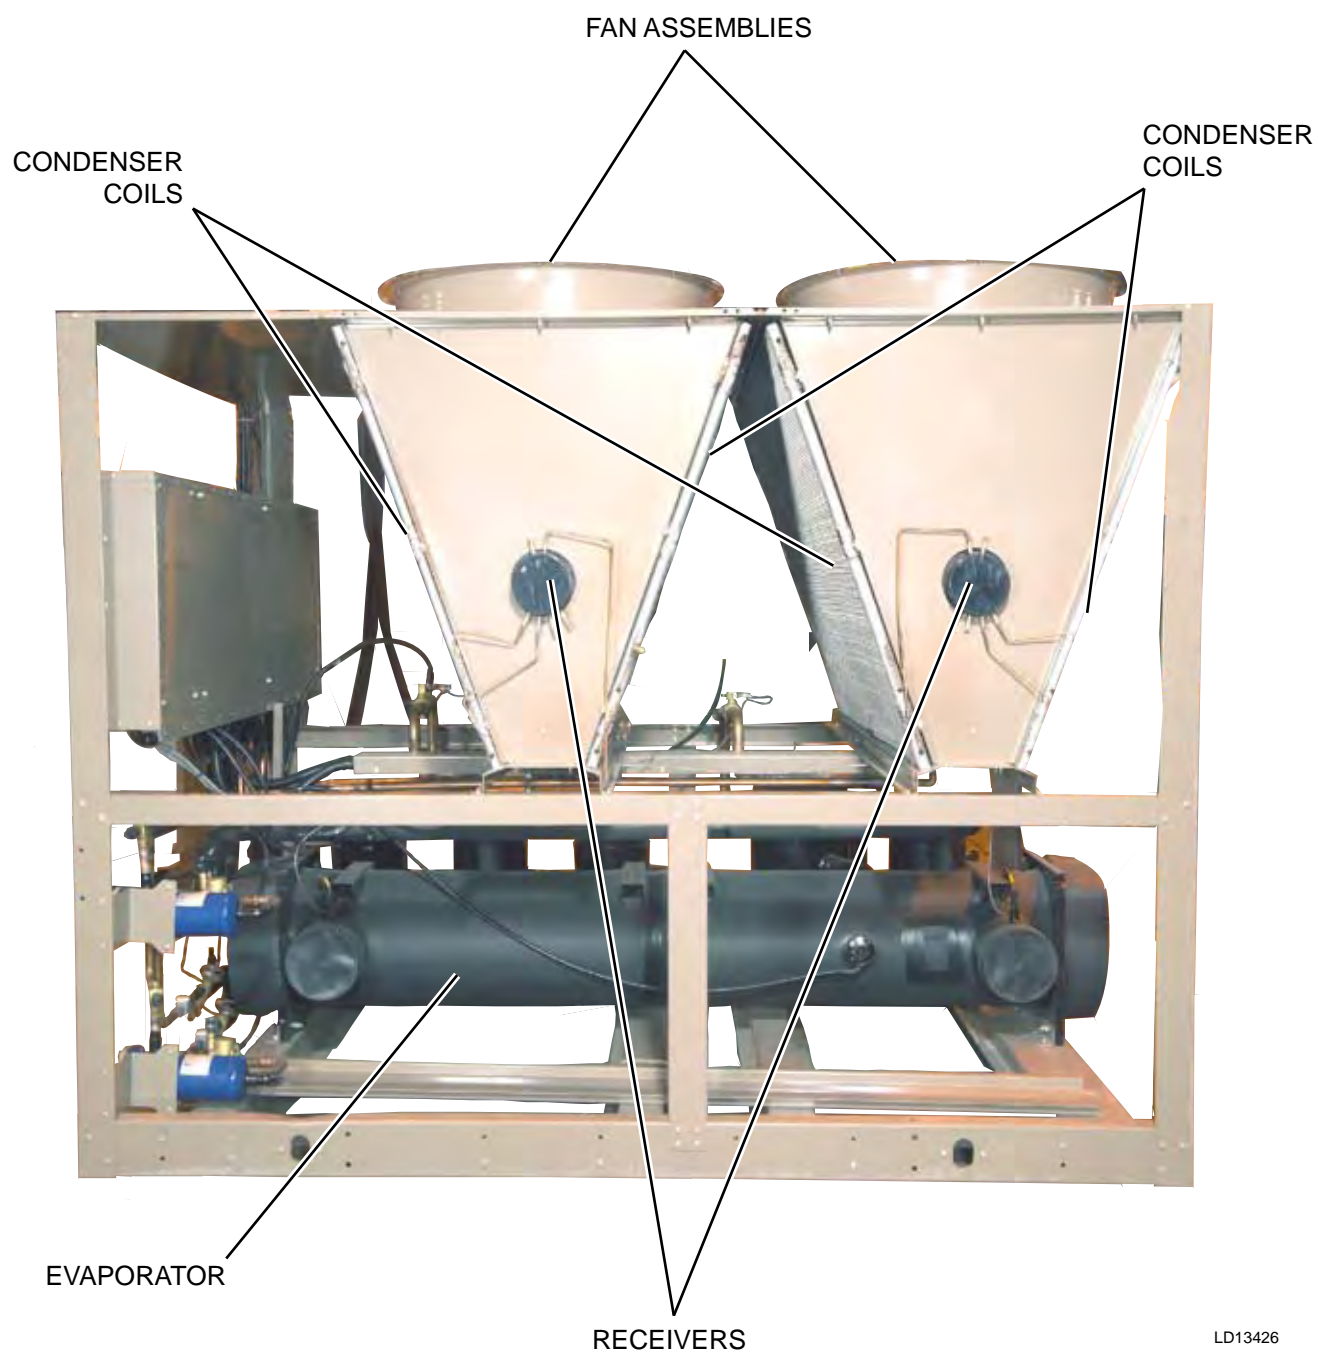

LD13426

FIG. 2 – UNIT COMPONENTS SIDE


CONTROL / POWER PANEL COMPONENTS

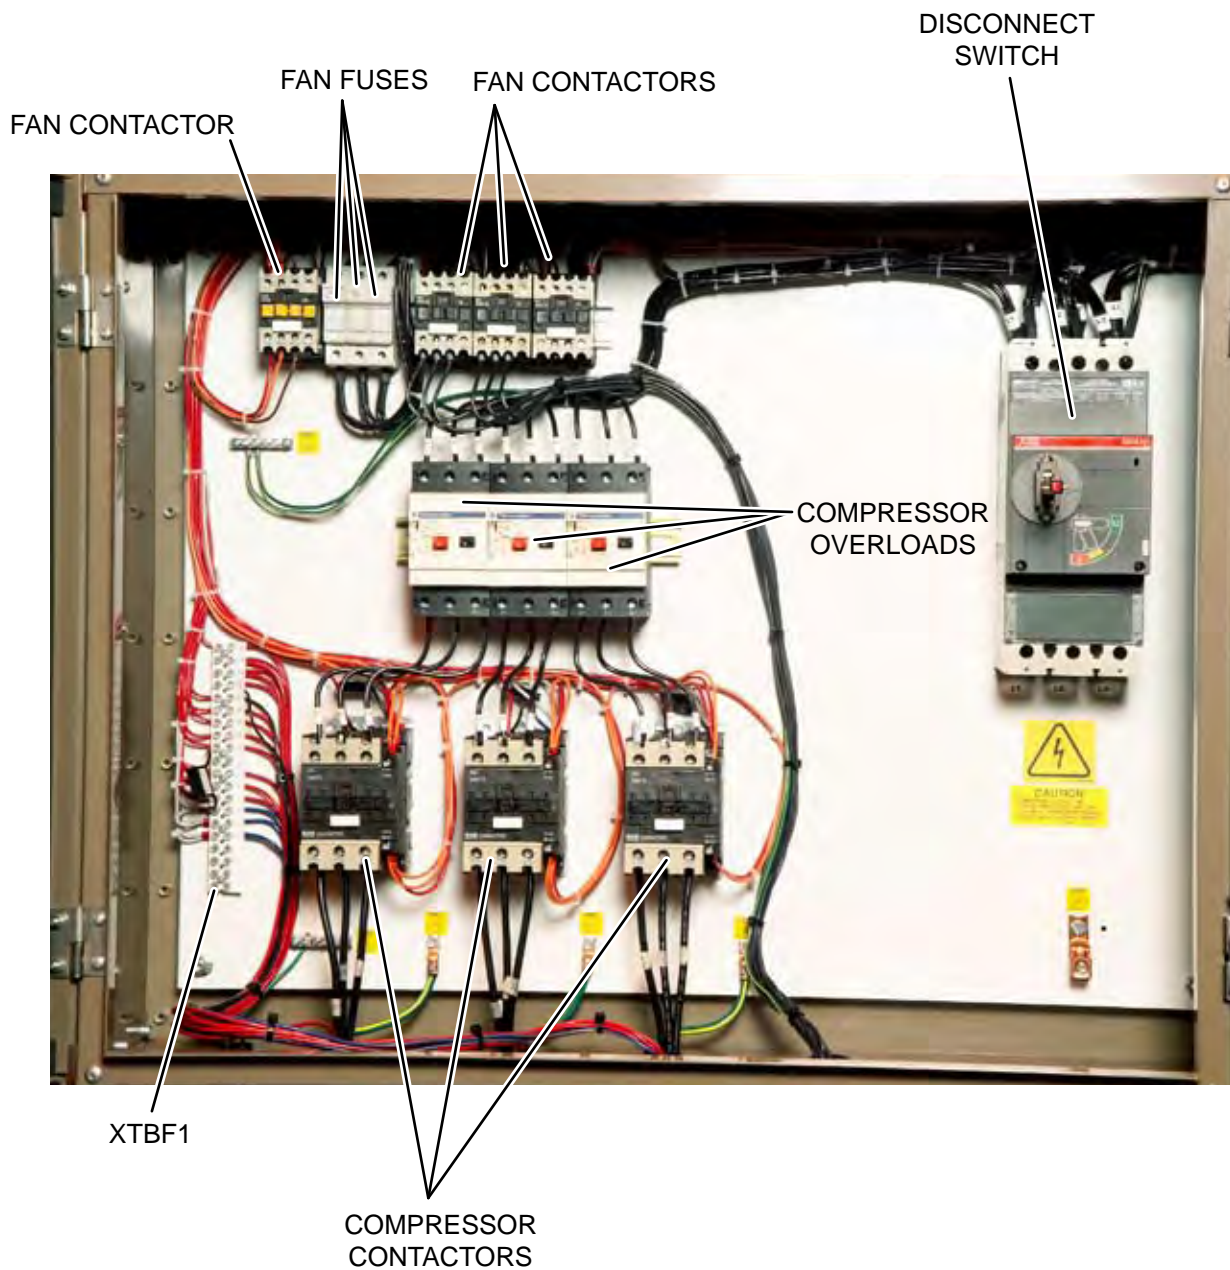

LD13247

FIG. 3 – POWER PANEL COMPONENTS

CONTROL / POWER PANEL COMPONENTS (CONT'D)

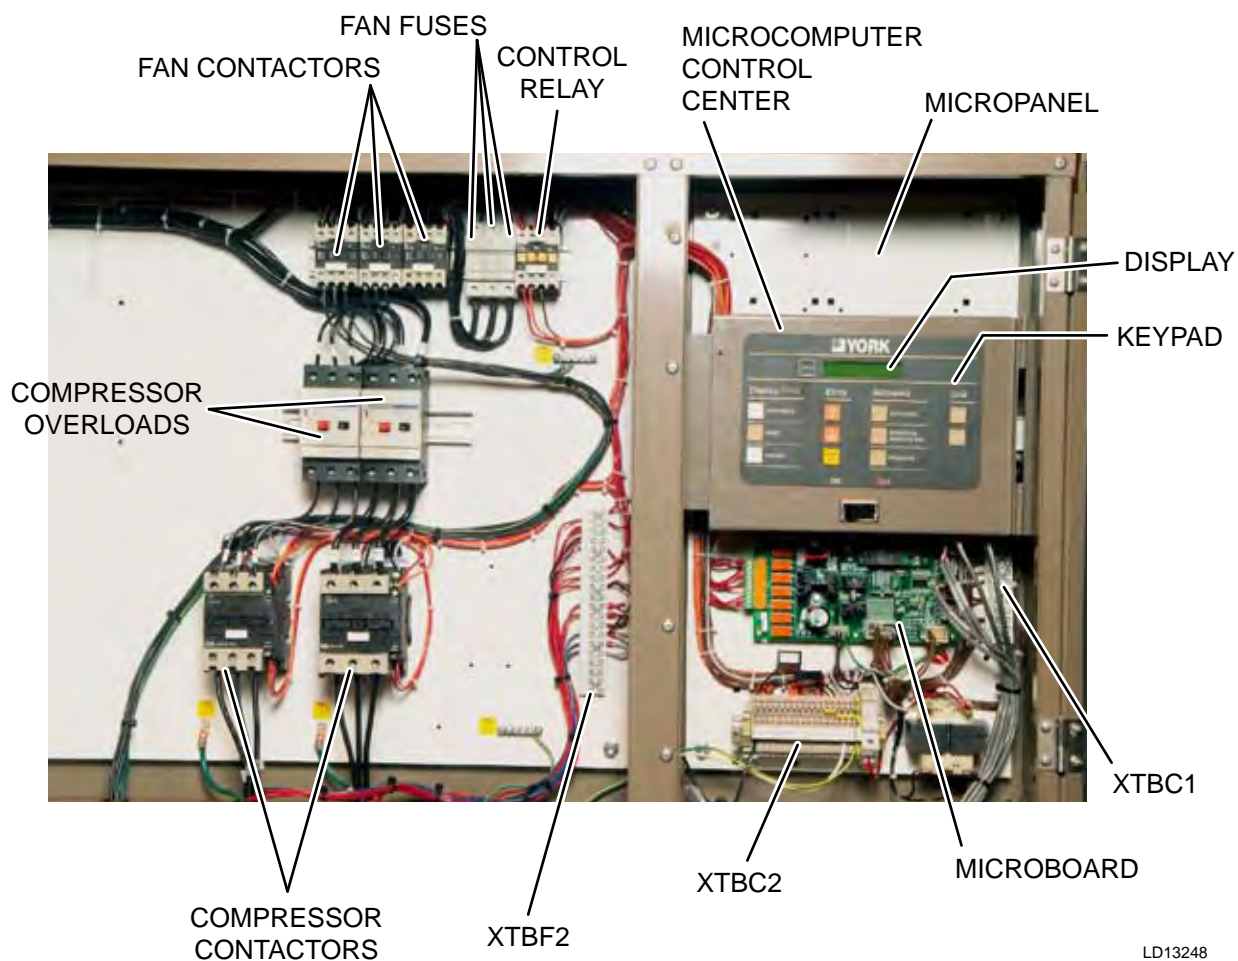

LD13248

FIG. 4 – POWER PANEL / CONTROL COMPONENTS

PRODUCT IDENTIFICATION NUMBER (PIN)

BASIC UNIT NOMENCLATURE

YLAA0150EE 46XCA

1 2 3 4	5 6 7 8	9	10	11 12 13	14 15
BASE PRODUCT TYPE	NOMINAL CAPACITY	UNIT DESIGNATOR	REFRIGERANT	VOLTAGE/STARTER	DESIGN/DEVELOPMENT LEVEL
1 Y 2 L 3 A 4 : YORK : Scroll : Air-Cooled : Condensing Unit A: Americas Europe	5 0 6 1 7 # 8 # Even Number: 60 HZ Nominal Tons Odd Number: 50 HZ Nominal kW	S : Standard Efficiency H : High Efficiency R : Heat Pump Y : High Efficiency (Round Tube) Z : Standard Efficiency (Round Tube)	E : R-410A	11 1 12 7 13 8 : 200 / 3 / 60 : 230 / 3 / 60 : 380 / 3 / 60 : 460 / 3 / 60 : 575 / 3 / 60 X: Across the Line	A : Design Series A, B, C A : Development Level

FEATURE	DESCRIPTION	OPTION	DESCRIPTION
CONTRACT	CONTRACT NUMBER	NUM	CONTRACT NUMBER = {CONTRACT/NUM}
ORDER	ORDER QUANTITY	QTY	ORDER QUANTITY = { ORDER/QTY }
USA	USA ORIGIN	N	USA ORIGIN NOT REQUIRED
		Y	USA ORIGIN REQUIRED
SHIPWT	SHIPPING WEIGHT	LBS	CRANE/RIGGING SHIPPING WEIGHT = {LBS}
		KG	CRANE/RIGGING SHIPPING WEIGHT = {KG}
STOCK	STOCK UNIT	N	UNIT BEING BUILT FOR SOLD ORDER
		Y	UNIT BEING BUILT FOR STOCK
CONV	STOCK CONVERSION	N	NOT A CONVERSION
		C	ORDER BEING CONVERTED FROM STOCK
MODEL	MODEL (PIN 1-4)	YLAA	YLAA
CAP	CAPACITY (PIN 5-8)	0070	0070
		0080	0080
		0090	0090
		0091	0091
		0100	0100
		0101	0101
		0115	0115
		0120	0120
		0125	0125
		0135	0135
		0141	0141
		0150	0150
		0155	0155
		0156	0156
		0175	0175
UNIT	UNIT DESIGNATOR (PIN 9)	S	STANDARD EFFICIENCY
		H	HIGH EFFICIENCY
		R	HEAT PUMP
		Y	HIGH EFFICIENCY (ROUND TUBE)
		Z	STANDARD EFFICIENCY (ROUND TUBE)
REF	REFRIGERANT (PIN 10)	E	R-410A

PRODUCT IDENTIFICATION NUMBER (PIN) (CONT'D)

FEATURE	DESCRIPTION	OPTION	DESCRIPTION
VOLTS	VOLTAGE (PIN 11 & 12)	17	200/3/60
		28	230/3/60
		40	380/3/60
		46	460/3/60
		50	380-415/3/50
		58	575/3/60
STARTER	STARTER (PIN 13)	X	ACROSS THE LINE STARTER
DESIGN	DESIGN SERIES (PIN 14)	A	DESIGN SERIES A
		B	DESIGN SERIES B
		C	DESIGN SERIES C (MICROCHANNEL CE/ETL PANEL)
DEV	DEVELOPMENT LEVEL (PIN 15)	A	DEVELOPMENT LEVEL A
POWER	POWER FIELD (PIN 16 & 17)	XX	MP SUPPLY TB
		SX	SP SUPPLY TB
		SD	SP NF DISCONNECT SWITCH
		BX	SP CIRCUIT BREAKER W/ LOCKABLE HANDLE
		DB	SP NF DISC SWITCH W/IND SYS CB
		MB	MP SUPPLY W/IND SYS CB & L EXT HANDLES
		MD	MP NF DISC SWITCHES
TRANS	CNTRL TRANSFORMER (PIN 18)	X	NO CONTROL TRANSFORMER REQUIRED
		T	CONTROL TRANSFORMER REQUIRED
		Q	SPECIAL CONTROL TRANSFORMER REQUIRED
PFC	POWER FACTOR CAPACITOR (19)	X	NO POWER CAPACITOR REQUIRED
		C	POWER CAPACITOR REQUIRED
		Q	SPECIAL POWER CAPACITOR REQUIRED
AMB	AMBIENT KITS (PIN 20)	H	HIGH AMBIENT KIT REQUIRED (FACTORY)
		A	BOTH LOW/HIGH AMBIENT KIT REQUIRED (FACTORY)
		Q	SPECIAL AMBIENT KIT REQUIRED
BAS	BAS RESET/OFFSET (PIN 21)	T	BAS RESET/OFFSET REQUIRED
		Q	SPECIAL BAS RESET/OFFSET REQUIRED
LCD	LANGUAGE (PIN 22)	X	ENGLISH
		S	SPANISH
		F	FRENCH
		G	GERMAN
		I	ITALIAN
RDOUT	READOUT KITS (PIN 23)	B	BOTH DISCHARGE & SUCTION PRESSURE TRANSDUCER READOUT REQUIRED
		Q	SPECIAL PRESSURE READOUT REQUIRED
SAFETY	SAFETY CODES (PIN 24)	L	N AMERICAN SAFETY CODE (CUL/CETL)
		C	EUROPEAN SAFETY CODE (CE)
SENSOR	PIN 25	X	X
		Q	SPECIAL QUOTE
PUMP	PIN 26	C	MOTOR CURRENT MODULE
		Q	SPECIAL QUOTE
REMOTE	REMOTE PANEL (PIN 27)	X	NO REMOTE PANEL REQUIRED
		Q	SPECIAL REMOTE PANEL REQUIRED
SEQ	SEQUENCE KIT (PIN 28)	X	NO SEQUENCE KIT REQUIRED
		Q	SPECIAL SEQUENCE KIT REQUIRED

PRODUCT IDENTIFICATION NUMBER (PIN) (CONT'D)

FEATURE	DESCRIPTION	OPTION	DESCRIPTION
TEMP	LEAVING WATER TEMP(29,30)	NUM	LEAVING WATER TEMP = {TEMP/NUM} DEGREES
		QQ	SPECIAL LWT REQUIREMENTS
CHICAGO	CHICAGO CODE KIT (PIN 31)	X	NO CHICAGO CODE KIT REQUIRED
		B	BOTH CHICAGO CODE & SERV ISOLATION
		C	CHICAGO CODE KIT REQUIRED
		G	BOTH SUCTION SERVICE VALVE AND DUAL RELIEF VALVE (EUROPE ONLY)
		R	DUAL RELIEF VALVES NO SUCTION SERVICE VALVE (EUROPE ONLY)
		S	SERVICE ISOLATION VALVES
		Q	SPECIAL CHICAGO CODE KIT REQUIRED
VALVES	VALVES (PIN 32)	X	STANDARD VALVES REQ'D
		Q	SPECIAL OPTIONAL VALVES REQ'D
HGBP	HOT GAS BYPASS (PIN 33)	X	NO HOT GAS BYPASS REQUIRED
		1	HOT GAS BYPASS REQUIRED - 1 CIRCUIT
		Q	SPECIAL HOT GAS BYPASS REQUIRED
GAUGE	PIN 34	X	X
		Q	SPECIAL QUOTE
OVERLOAD	PIN 35	X	X
		Q	SPECIAL QUOTE
PIN36	PIN 36	X	X
		Q	SPECIAL QUOTE
HTR	CRANKCASE HEATER (PIN 37)	H	CRANKCASE HEATER STANDARD
		Q	SPECIAL CRANKCASE HEATER REQUIRED
DWP	DWP (PIN 38)	X	150PSIG DWP WATERSIDE
		Q	SPECIAL QUOTE
INS	INSULATION (PIN 39)	X	STANDARD INSULATION
		D	DOUBLE THICK INSULATION
		Q	SPECIAL INSULATION REQUIRED
FLANGES	FLANGES (PIN 40)	X	NO FLANGES REQUIRED
		V	VICTAULIC FLANGES REQUIRED
		Q	SPECIAL FLANGES REQUIRED
FLOW	FLOW SWITCH (PIN 41)	X	NO FLOW SWITCH REQUIRED
		S	ONE FLOW SWITCH REQUIRED
		T	TWO FLOW SWITCHES REQUIRED
		U	THREE FLOW SWITCHES REQUIRED
		D	ONE DIFFERENTIAL PRESSURE SWITCH REQUIRED
		E	TWO DIFFERENTIAL PRESSURE SWITCHES REQUIRED
		F	THREE DIFFERENTIAL PRESSURE SWITCHES REQUIRED
		Q	SPECIAL FLOW SWITCH REQUIRED
VESSEL	VESSEL CODES (PIN 42)	A	ASME PRESSURE VESSEL CODES
		E	PED PRESSURE VESSEL CODES
		Q	SPECIAL QUOTE
CLR	COOLER (PIN 43)	X	STANDARD COOLER REQUIRED
		R	REMOTE COOLER REQUIRED
		Q	SPECIAL COOLER REQUIRED

PRODUCT IDENTIFICATION NUMBER (PIN) (CONT'D)


FEATURE	DESCRIPTION	OPTION	DESCRIPTION
PIN44	PIN 44	X	X
		Q	SPECIAL QUOTE
COILS	COILS (PIN 45)	X	ALUMINUM COILS
		C	COPPER FIN COILS
		B	PRE-COATED FIN COILS
		P	POST-COATED DIPPED COILS
		Q	SPECIAL COILS
HEAT	HEAT RECOVERY (PIN 46)	X	NO OPTION REQUIRED
		H	HEAT RECOVERY
		Q	SPECIAL QUOTE
FANMOTORS	FAN MOTORS (PIN 47)	X	TEAO FAN MOTORS
		Q	SPECIAL FAN MOTORS REQUIRED
ENCL	ENCLOSURE PANELS (PIN 48)	X	NO ENCLOSURE REQUIRED
		1	WIRE (FULL UNIT) ENCL PANELS (FACTORY)
		2	WIRE (FULL UNIT) ENCL PANELS (FIELD)
		3	WIRE/LOUVERED ENCL PANELS (FACTORY)
		4	WIRE/LOUVERED ENCL PANELS (FIELD)
		5	LOUVERED (COND ONLY) ENCL PANELS (FACTORY)
		6	LOUVERED (COND ONLY) ENCL PANELS (FIELD)
		7	LOUVERED (FULL UNIT) ENCL PANELS (FACTORY)
		8	LOUVERED (FULL UNIT) ENCL PANELS (FIELD)
		9	END LOUVER (END HAIL GUARD) ENCL PANELS (FACTORY)
		A	END LOUVER (END HAIL GUARD) ENCL PANELS (FIELD)
		B	AESTHETIC PANEL KIT ONLY (FACTORY)
		C	AESTHETIC PANEL KIT ONLY (FIELD)
		D	AESTHETIC PANEL KIT PLUS HAIL GUARDS (FACTORY)
		E	AESTHETIC PANEL KIT PLUS HAIL GUARDS (FIELD)
		Q	SPECIAL ENCLOSURE PANELS
ACOUSTIC	ACOUSTIC BLANKET (PIN 49)	X	NO ACOUSTIC BLANKET REQUIRED
		B	ACOUSTIC BLANKET REQUIRED
		E	ACOUSTIC ENCLOSURE
		Q	SPECIAL ACOUSTIC BLANKET REQUIRED
SRDOCS	SR DOCUMENTS (PIN 50)	X	NO DOCUMENTS REQUIRED
		A	BASE, MATERIAL & WITNESS DOCUMENTS
		B	BASE DOCUMENT
		M	BASE & MATERIAL DOCUMENTS
		W	BASE & WITNESS DOCUMENTS
		Q	SPECIAL QUOTE
PIN51	PIN 51	X	X
		Q	SPECIAL QUOTE

PRODUCT IDENTIFICATION NUMBER (PIN) (CONT'D)

FEATURE	DESCRIPTION	OPTION	DESCRIPTION
FANS	SOUND FANS (PIN 52)	X	STANDARD LOW SOUND FANS REQUIRED
		A	HIGH AIRFLOW FANS REQUIRED (VENDOR SPECIFIC)
		E	LOW SOUND FANS REQUIRED (VENDOR SPECIFIC)
		L	ULTRA QUIET FANS REQUIRED
		S	HIGH STATIC FANS REQUIRED (VENDOR SPECIFIC)
		U	ULTRA QUIET FANS REQUIRED (VENDOR SPECIFIC)
		2	TWO SPEED FANS REQUIRED (VENDOR SPECIFIC)
PAINT	PIN 53	X	X
		Q	SPECIAL QUOTE
ISOL	VIBRATION ISOLATORS (PIN 54)	X	NO ISOLATORS REQUIRED
		1	1" DEFLECTION ISOLATORS REQUIRED
		N	NEOPRENE ISOLATORS REQUIRED
		S	SEISMIC ISOLATORS REQUIRED
		Q	SPECIAL ISOLATORS REQUIRED
PIN 55	PIN 55	*	
PIN 56	PIN 56	*	
SHIP	SHIP INSTRUCTIONS (PIN 57)	X	NO CONTAINERIZATION REQUIRED WITH SHIPPING BAG
		A	BUY AMERICAN ACT COMPLIANCE WITH SHIPPING BAG
		B	BOTH BUY AMERICAN ACT COMPLIANCE AND CONTAINER SHIPPED WITHOUT SHIPPING BAG (FACTORY PREP)
		C	CONTAINER SHIPPED WITHOUT SHIPPING BAG (FACTORY LOAD)
		N	NO CONTAINERIZATION REQUIRED WITHOUT SHIPPING BAG
		P	CONTAINER SHIPPED WITHOUT SHIPPING BAG (FACTORY PREP)
		U	BUY AMERICAN ACT COMPLIANCE WITHOUT SHIPPING BAG
		Q	SPECIAL QUOTE
PIN 58	PIN 58	*	
PKG	PUMP PACKAGE (PIN 59)	X	NO PUMP REQUIRED
		A	PUMP KIT A REQUIRED
		B	PUMP KIT B REQUIRED
		C	PUMP KIT C REQUIRED
		D	PUMP KIT D REQUIRED
		E	PUMP KIT E REQUIRED
		F	PUMP KIT F REQUIRED
		G	PUMP KIT G REQUIRED
		H	PUMP KIT H REQUIRED
		I	PUMP KIT I REQUIRED
		J	PUMP KIT J REQUIRED
		K	PUMP KIT K REQUIRED
		L	PUMP KIT L REQUIRED
		M	PUMP KIT M REQUIRED
		N	PUMP KIT N REQUIRED
		O	PUMP KIT O REQUIRED
		P	PUMP KIT P REQUIRED
		R	PUMP KIT R REQUIRED
		Q	SPECIAL QUOTE * Marketing Purposes Only!

PRODUCT IDENTIFICATION NUMBER (PIN) (CONT'D)

FEATURE	DESCRIPTION	OPTION	DESCRIPTION
PKGOPT	PUMP PACKAGE OPTIONS (PIN 60)	X	NO OPTION REQUIRED
		Q	SPECIAL QUOTE
MFG	PLANT OF MFG (PIN 61)	R	PLANT OF MANUFACTURE - MONTERREY
		S	PLANT OF MANUFACTURE - SABADELL
LOC	MFG LOCATION	CUR	CURITIBA, BRAZIL
		MEX	MEXICO, ES
		MTY	MONTERREY, BE
		SAT	SAN ANTONIO, TEXAS
YW	YORKWORKS VERSION	CV	YORKWORKS CONFIGURATION VERSION {YW/CV}
		UV	YORKWORKS UPLOAD VERSION {YW/UV}
SQ	SPECIAL QUOTE	Q	SPECIAL QUOTE

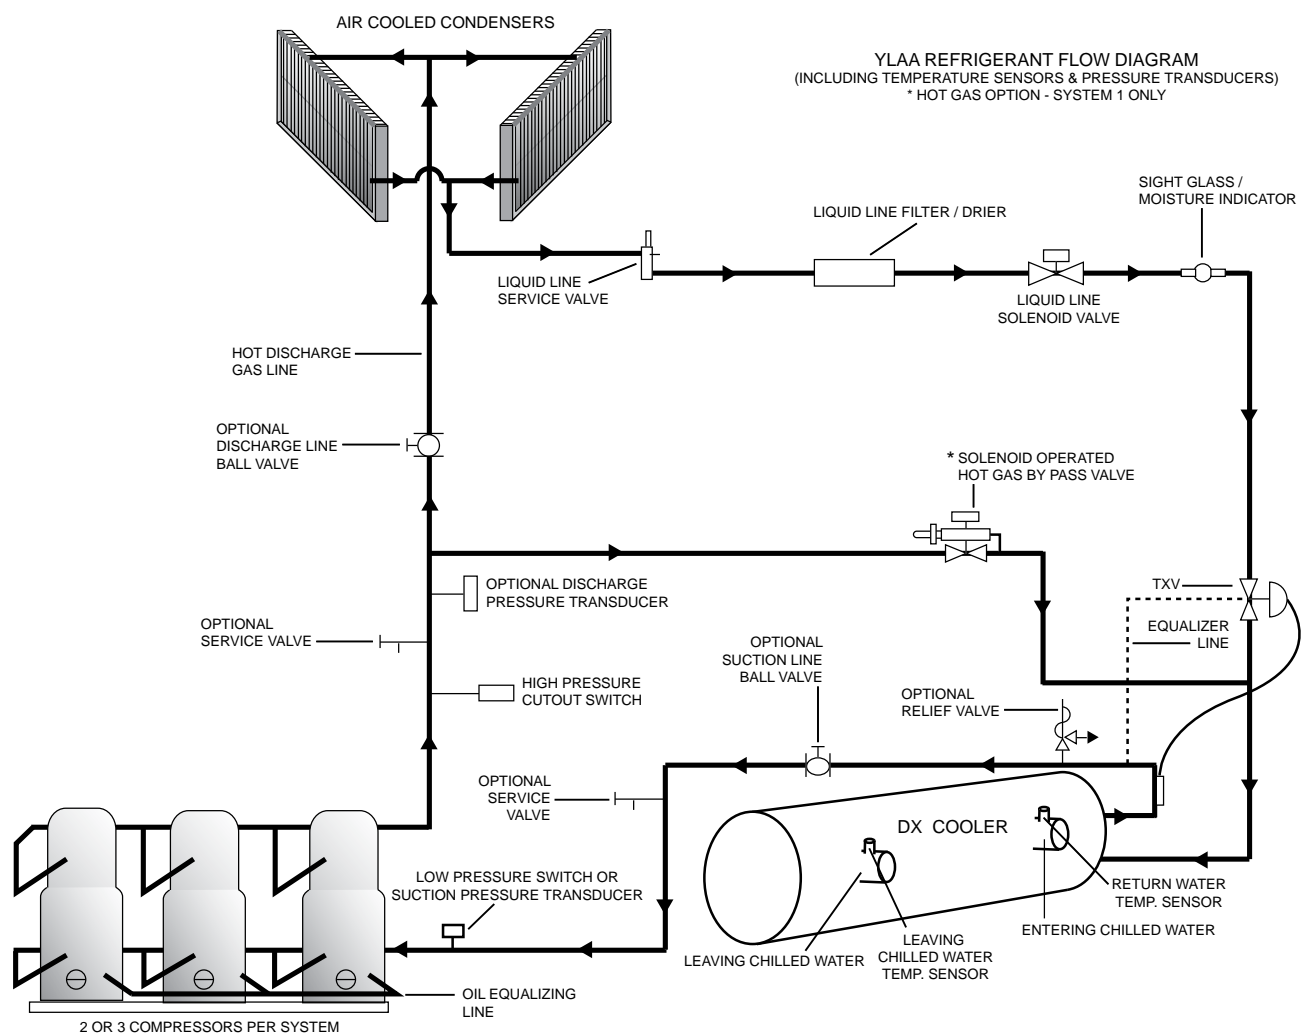

LD13138A

FIG. 5 – REFRIGERANT FLOW DIAGRAM

PROCESS AND INSTRUMENTATION DIAGRAM

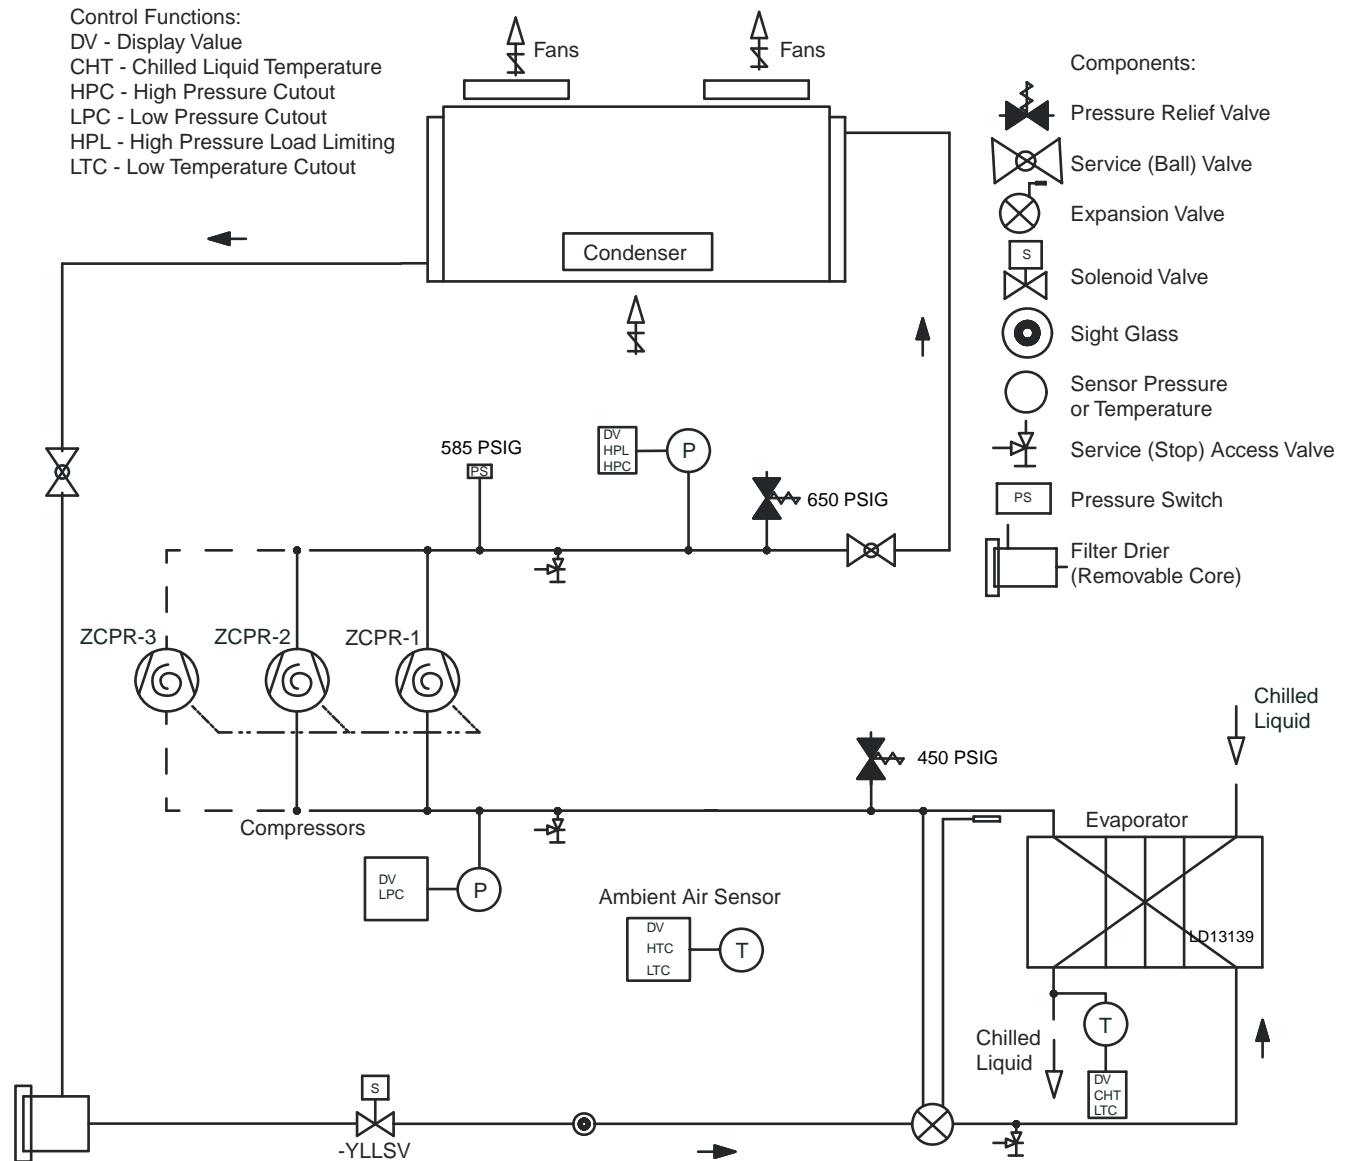


FIG. 6 – PROCESS AND INSTRUMENTATION DIAGRAM

Low pressure liquid refrigerant enters the cooler and is evaporated and superheated by the heat energy absorbed from the chilled liquid passing through the cooler shell. Low pressure vapor enters the compressor where pressure and superheat are increased. The high pressure

vapor is fed to the air cooled condenser coil and fans where the heat is removed. The fully condensed and subcooled liquid passes through the expansion valve where pressure is reduced and further cooling takes place before returning to the cooler.

THIS PAGE INTENTIONALLY LEFT BLANK

SECTION 3 – HANDLING AND STORAGE

DELIVERY AND STORAGE

To ensure consistent quality and maximum reliability, all units are tested and inspected before leaving the factory. Units are shipped completely assembled and containing refrigerant under pressure. Units are shipped without export crating unless crating has been specified on the Sales Order.

If the unit is to be put into storage, prior to installation, the following precautions should be observed:

- The chiller must be “blocked” so that the base is not permitted to sag or bow.
- Ensure that all openings, such as water connections, are securely capped.
- Do not store where exposed to ambient air temperatures exceeding 110 °F (43 °C).
- The condensers should be covered to protect the fins from potential damage and corrosion, particularly where building work is in progress.
- The unit should be stored in a location where there is minimal activity in order to limit the risk of accidental physical damage.
- To prevent inadvertent operation of the pressure relief devices the unit must not be steam cleaned.
- It is recommended that the unit is periodically inspected during storage.

INSPECTION

Remove any transit packing and inspect the unit to ensure that all components have been delivered and that no damage has occurred during transit. If any damage is evident, it should be noted on the carrier’s freight bill and a claim entered in accordance with the instructions given on the advice note.

Major damage must be reported immediately to your local Johnson Controls representative.

MOVING THE CHILLER

Prior to moving the unit, ensure that the installation site is suitable for installing the unit and is easily capable of supporting the weight of the unit and all associated services.

The units are designed to be lifted using cables. A spreader bar or frame should be used in order to prevent damage to the unit from the lifting chains.

Units are provided with lifting eyes in the sides of the base frame, which can be attached to directly using shackles or safety hooks.



The unit must only be lifted by the base frame at the points provided. Never move the unit on rollers, or lift the unit using a forklift truck.

Care should be taken to avoid damaging the condenser cooling fins when moving the unit.



Lifting Weights

For details of weights and weight distribution, refer to the data shipped in the chiller information packet and unit nameplate.



The unit should be lifted by inserting hooks through the holes provided in unit base rails. Spreader bars should be used to avoid crushing the unit frame rails with the lifting chains (See below).

RIGGING INSTRUCTIONS

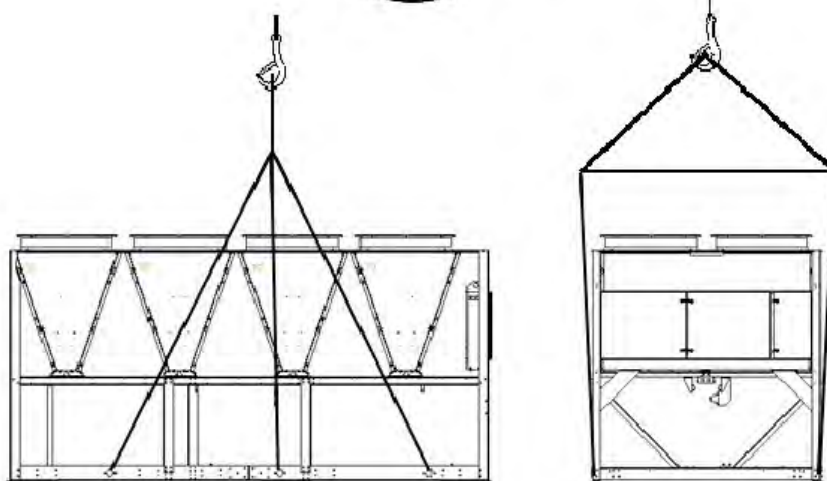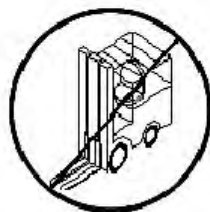

Typical Lifting Arrangement - 8 Fan Models

LD13137



LD13140

Typical Lifting Arrangement - 4 Fan Models

Use spreader bars to avoid lifting chains hitting the chiller.



Never lift the chiller using a forklift or by hooking to the top rails. Use only the lifting holes provided.

Lifting Instructions are placed on a label on the chiller and on the shipping bag.

FIG. 7 – UNIT RIGGING/LIFTING

SECTION 4 – INSTALLATION



To ensure warranty coverage, this equipment must be commissioned and serviced by an authorized Johnson Controls service mechanic or a qualified service person experienced in chiller installation. Installation must comply with all applicable codes, particularly in regard to electrical wiring and other safety elements such as relief valves, HP cutout settings, design working pressures, and ventilation requirements consistent with the amount and type of refrigerant charge.

Lethal voltages exist within the control panels. Before servicing, open and tag all disconnect switches.

INSTALLATION CHECKLIST

The following items, 1 through 5, must be checked before placing the units in operation.

1. Inspect the unit for shipping damage.
2. Rig unit using spreader bars.
3. Open the unit only to install water piping system.
Do not remove protective covers from water connections until piping is ready for attachment. Check water piping to ensure cleanliness.
4. Pipe unit using good piping practice (*see ASHRAE handbook section 215 and 195*).
5. Check to see that the unit is installed and operated within limitations (*Refer to LIMITATIONS*).

The following pages outline detailed procedures to be followed to install and start-up the chiller.

HANDLING

These units are shipped as completely assembled units containing full operating charge, and care should be taken to avoid damage due to rough handling.

INSPECTION

Immediately upon receiving the unit, it should be inspected for possible damage which may have occurred during transit. If damage is evident, it should be noted in the carrier's freight bill. A written request for inspection by the carrier's agent should be made at once. See "Instruction" manual, Form 50.15-NM for more information and details.

LOCATION AND CLEARANCES

These units are designed for outdoor installations on ground level, rooftop, or beside a building. Location should be selected for minimum sun exposure and to insure adequate supply of fresh air for the condenser. The units must be installed with sufficient clearances for air entrance to the condenser coil, for air discharge away from the condenser, and for servicing access.

In installations where winter operation is intended and snow accumulations are expected, additional height must be provided to ensure normal condenser air flow.

Clearances are listed under "Notes" in the "DIMENSIONS" section.

Foundation

The unit should be mounted on a flat and level foundation, floor, or rooftop capable of supporting the entire operating weight of the equipment. See *PHYSICAL DATA for operating weight*. If the unit is elevated beyond the normal reach of service personnel, a suitable catwalk must be capable of supporting service personnel, their equipment, and the compressors.

Ground Level Locations

It is important that the units be installed on a substantial base that will not settle. A one piece concrete slab with footers extended below the frost line is highly recommended. Additionally, the slab should not be tied to the main building foundations as noise and vibration may be transmitted. Mounting holes (5/8" dia.) are provided in the steel channel for bolting the unit to its foundation (*see DIMENSIONS*).

For ground level installations, precautions should be taken to protect the unit from tampering by or injury to unauthorized persons. Screws and/or latches on access panels will prevent casual tampering. However, further safety precautions such as a fenced-in enclosure or locking devices on the panels may be advisable.

Rooftop Locations

Choose a spot with adequate structural strength to safely support the entire weight of the unit and service personnel. Care must be taken not to damage the roof.

Consult the building contractor or architect if the roof is bonded. Roof installations should have wooden beams (treated to reduce deterioration), cork, rubber, or spring-type vibration isolators under the base to minimize vibration.

Noise Sensitive Locations

Efforts should be made to assure that the chiller is not located next to occupied spaces or noise sensitive areas where chiller noise level would be a problem. Chiller noise is a result of compressor and fan operation.

SPRING ISOLATORS (OPTIONAL)

When ordered, four (4) isolators will be furnished.

Identify the isolator, locate at the proper mounting point, and adjust per instructions.

COMPRESSOR MOUNTING

The compressors are mounted on four (4) rubber isolators. The mounting bolts should not be loosened or adjusted at installation of the chiller.


REMOTE COOLER OPTION

Not available at this time.

CHILLED LIQUID PIPING

General – When the unit(s) has been located in its final position, the unit water piping may be connected. Normal installation precautions should be observed in order to receive maximum operating efficiencies. Piping should be kept free of all foreign matter. All chilled water evaporator piping must comply in all respects with local plumbing codes and ordinances.

Since elbows, tees and valves decrease pump capacity, all piping should be kept as straight and as simple as possible. **All piping must be supported independent of the chiller.**

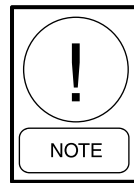

Consideration should be given to compressor access when laying out water piping. Routing the water piping too close to the unit could make compressor servicing/replacement difficult.

Hand stop valves should be installed in all lines to facilitate servicing.

Piping to the inlet and outlet connections of the chiller should include high-pressure rubber hose or piping loops to ensure against transmission of water pump vibration. The necessary components must be obtained in the field.

Drain connections should be provided at all low points to permit complete drainage of the cooler and system water piping.

A small valve or valves should be installed at the highest point or points in the chilled water piping to allow any trapped air to be purged. Vent and drain connections should be extended beyond the insulation to make them accessible.

The piping to and from the cooler must be designed to suit the individual installation. It is important that the following considerations be observed:

1. The chilled liquid piping system should be laid out so that the circulating pump discharges directly into the cooler. The suction for this pump should be taken from the piping system return line and not the cooler. This piping scheme is recommended, but is not mandatory.
2. The inlet and outlet cooler connection sizes are provided in Table 4 (Physical Data).
3. A strainer, preferably 40 mesh, must be installed in the cooler inlet line just ahead of the cooler. This is important to protect the cooler from entrance of large particles which could cause damage to the evaporator.
4. All chilled liquid piping should be thoroughly flushed to free it from foreign material before the system is placed into operation. Use care not to flush any foreign material into or through the cooler.
5. As an aid to servicing, thermometers and pressure gauges should be installed in the inlet and outlet water lines.
6. The chilled water lines that are exposed to outdoor ambients should be wrapped with supplemental heater cable and insulated to protect against freeze-up during low ambient periods, and to prevent formation of condensation on lines in warm humid locations. As an alternative, ethylene glycol should be added to protect against freeze-up during low ambient periods.
7. A chilled water flow switch, (either by YORK or others) **MUST** be installed in the leaving water piping of the cooler. There should be a straight horizontal run of at least 5 diameters on each side of the switch. Adjust the flow switch paddle to the size of the pipe in which it is to be installed (see manufacturer's instructions furnished with the switch). The switch is to be wired to Terminals 13 – 14 of XTBC1 located in the control panel, as shown on the unit wiring diagram.



The Flow Switch **MUST NOT** be used to start and stop the chiller (i.e. starting and stopping the chilled water pump). It is intended only as a safety switch.

PIPEWORK ARRANGEMENT

The following are suggested pipework arrangements for single unit installations, for multiple unit installations, each unit should be piped as shown.

RECOMMENDATIONS OF THE BUILDING SERVICES RESEARCH ASSOCIATION.

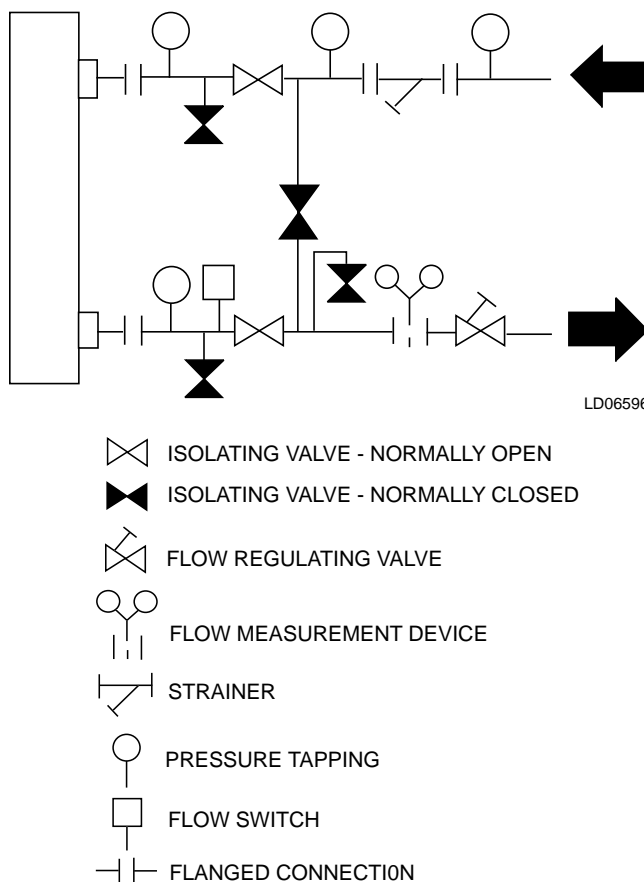


FIG. 8 – CHILLED LIQUID SYSTEM

DUCT WORK CONNECTION

General Requirements

The following duct work recommendations are intended to ensure satisfactory operation of the unit. Failure to follow these recommendations could cause damage to the unit, or loss of performance, and may invalidate the warranty.

When ducting is to be fitted to the fan discharge it is recommended that the duct should be the same cross-sectional area as the fan outlet and straight for at least three feet (1 meter) to obtain static regain from the fan. Duct work should be suspended with flexible hangers to prevent noise and vibration being transmitted to the structure. A flexible joint is also recommended between the duct attached to the fan and the next section for the same reason. Flexible connectors should not be allowed to concertina.

The unit(s) is not designed to take structural loading. No significant amount of weight should be allowed to rest on the fan outlet flange, deck assemblies or condenser coil module. No more than 3 feet (1 meter) of light construction duct work should be supported by the unit. Where cross winds may occur, any duct work must be supported to prevent side loading on the unit.

If the ducts from two or more fans are to be combined into a common duct, back-flow dampers should be fitted in the individual fan ducts. This will prevent recirculation of air when only one of the fans is running.

Units are supplied with outlet guards for safety and to prevent damage to the fan blades. If these guards are removed to fit duct work, adequate alternative precautions must be taken to ensure persons cannot be harmed or put at risk from rotating fan blades.

WIRING

Liquid Chillers are shipped with all factory-mounted controls wired for operation.

Field Wiring – Power wiring must be provided through a fused disconnect switch to the unit terminals (or optional molded disconnect switch) in accordance with N.E.C. or local code requirements. Minimum circuit ampacity and maximum dual element fuse size are given in Tables 5 .

Copper power wiring only should be used for supplying power to the chiller. This is recommended to avoid safety and reliability issues resulting from connection failure at the power connections to the chiller. Aluminum wiring is not recommended due to thermal characteristics that may cause loose terminations resulting from the contraction and expansion of the wiring. Aluminum oxide may also build up at the termination causing hot spots and eventual failure. If aluminum wiring is used to supply power to the chiller, AL-CU compression fittings should be used to transition from aluminum to copper. This transition should be done in an external box separate to the power panel. Copper conductors can then be run from the box to the chiller.

A 120-1-60, 15 amp source must be supplied for the control panel through a fused disconnect when a control panel transformer (optional) is not provided (*Refer to Fig. 9*).

See unit wiring diagrams for field and power wiring connections, chilled water pump starter contacts, alarm contacts, compressor run status contacts, PWM input, and load limit input. Refer to section on UNIT OPERATION for a detailed description of operation concerning aforementioned contacts and inputs.

Evaporator Pump Start Contacts

Terminal Block XTBC2 – Terminals 23 (115VAC) to 24, are normally- open contacts that can be used to switch field supplied power to provide a start signal to the evaporator pump contactor. The contacts will be closed when any of the following conditions occur:

1. Low Leaving Chilled Liquid Fault
2. Any compressor is running
3. Daily schedule is not programmed OFF and the Unit Switch is ON

The pump will not run if the microprocessor panel has been powered up for less than 30 seconds, or if the pump has run in the last 30 seconds, to prevent pump motor overheating. *Refer to Fig. 11 and unit wiring diagram.*

System Run Contacts

Contacts are available to monitor system status. Normally-open auxiliary contacts from each compressor contactor are wired in parallel with XTBC2 – Terminals 25 to 26 for system 1, and XTBC2 – Terminals 27 to 28 for system 2. *Refer to Fig. 4, 11 and unit wiring diagram.*

Alarm Status Contacts

Normally-open contacts are available for each refrigerant system. These normally-open contacts close when the system is functioning normally. The respective contacts will open when the unit is shut down on a unit fault, or locked out on a system fault. Field connections are at XTBC2 - Terminals 29 to 30 (system 1), and Terminals 31 to 32 (system 2).

Remote Start/Stop Contacts

To remotely start and stop the chiller, dry contacts can be wired across terminals 13 and 51 on XTBC1. Refer to Fig 4, 10 and unit wiring diagram.

Remote Emergency Cutoff


Immediate shutdown of the chiller can be accomplished by opening a field-installed dry contact to break the electrical circuit between Terminals 5 to L on Terminal Block XTBC2. The unit is shipped with a factory jumper installed between Terminals 5 to L, which must be removed if emergency shutdown contacts are installed. Refer to Fig. 11 and unit wiring diagram.

Remote Temp Reset Input

The Remote Temp Reset input allows reset of the chilled liquid setpoint by supplying a voltage or current signal. Field wiring should be connected to XTBC1 – Terminals A+ to A-. A detailed explanation is provided in the Unit Control section. Refer to Fig's. 3, 4 and unit wiring diagram.

Load Limit Input

Load limiting is a feature that prevents the unit from loading beyond a desired value. The unit can be "load limited" either 33%, 40%, 50%, 66% or 80%, depending on the number of compressors on unit. The field connections are wired to XTBC1 – Terminals 13 to 21, and work in conjunction with the PWM inputs. A detailed explanation is provided in the Unit Control section. Refer to Fig. 4, 10 and unit wiring diagram.

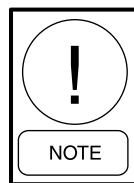

When using the Load Limit feature, the PWM feature will not function – SIMULTANEOUS OPERATION OF LOAD LIMITING AND TEMPERATURE RESET (PWM INPUT) CANNOT BE DONE.

Flow Switch Input

The flow switch is field wired to XTBC1 Terminals 13 - 14. See Fig. 4 and unit wiring diagram.

COMPRESSOR HEATERS

Compressor heaters are standard. ZP103, ZP120 and ZP137 compressors utilize 90W heaters; ZP180 compressors utilize 70W heaters; ZP235 compressors utilize 120W heaters. If power is OFF more than two hours, the crankcase heaters must be energized for 18 – 24 hours prior to restarting a compressor. This will assure that liquid slugging and oil dilution does not damage the compressors on start.


RELIEF VALVES

Relief valves are located on both the high and low pressure side of the piping. High side relief valve pressure setting is 650 PSIG. Low side relief valve pressure setting is 450 PSIG.

HIGH PRESSURE CUTOUT

A high pressure cutout is installed in the discharge piping of each system. The cutout opens at 585 PSIG \pm 10 PSIG and closes at 440 PSIG \pm 25 PSIG.

SINGLE-POINT SUPPLY CONNECTION – TERMINAL BLOCK, NON-FUSED DISCONNECT SWITCH OR CIRCUIT BREAKER

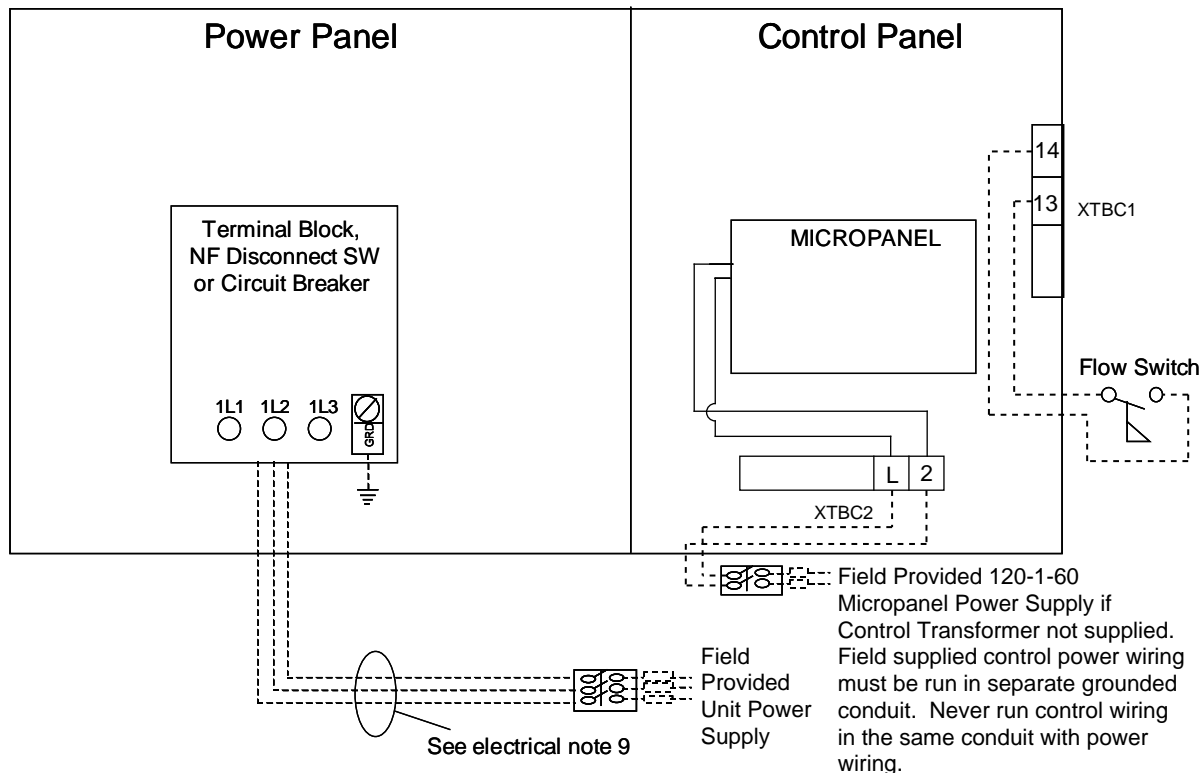


LD13141

Electrical Notes and Legend located on page 68.




It is possible that multiple sources of power can be supplying the unit power panel. To prevent serious injury or death, the technician should verify that NO LETHAL VOLTAGES are present inside the panel AFTER disconnecting power, PRIOR to working on equipment.

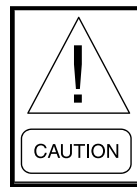

The unit evaporator heater uses 120VAC. Disconnecting 120VAC power from the unit, at or below freezing temperatures, can result in damage to the evaporator and unit as a result of the chilled liquid freezing.


FIG. 9 – SINGLE-POINT SUPPLY CONNECTION – TERMINAL BLOCK, NON-FUSED DISCONNECT SWITCH OR CIRCUIT BREAKER

USER CONTROL WIRING INPUTS

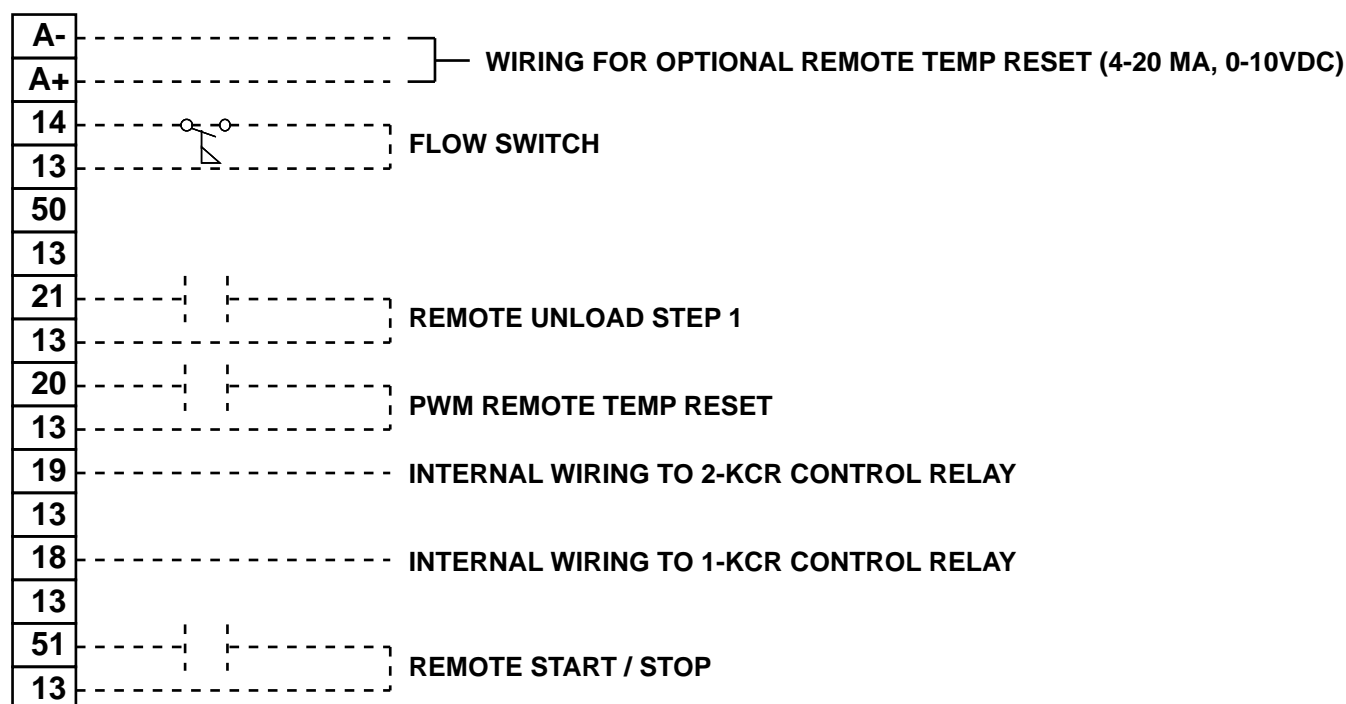


XTBC1

LD13130

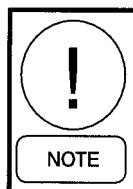

All externally supplied contacts must be capable of switching 24 VDC / 115 VAC. Gold contacts are recommended. If supplied contacts are from a Relay / Contactor (Inductive Load), the coil of the Relay / Contactor must be suppressed. Typical suppressor is P/N 031-00808-000.

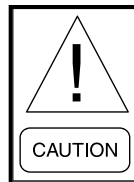



The unit evaporator heater uses 120VAC. Disconnecting 120VAC power from the unit, at or below freezing temperatures, can result in damage to the evaporator and unit as a result of the chilled liquid freezing.



*It is possible that multiple sources of power can be supplying the unit power panel. To prevent serious injury or death, the technician should verify that **NO LETHAL VOLTAGES** are present inside the panel **AFTER** disconnecting power, **PRIOR** to working on equipment.*

FIG. 10 – CONTROL WIRING INPUTS

USER CONTROL WIRING OUTPUTS

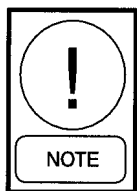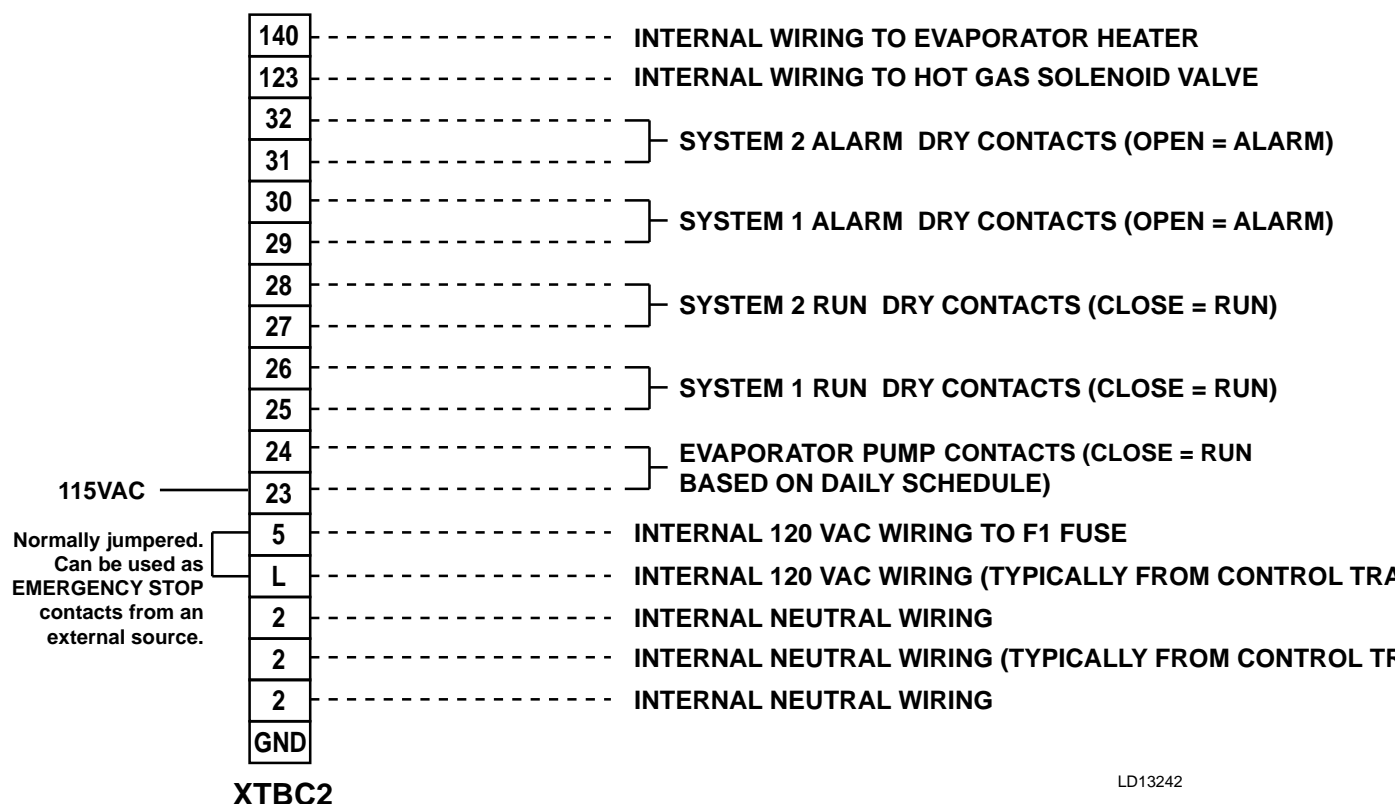

All chiller supplied contacts are rated at 115 VAC, 100 VA, resistive load only, and must be suppressed at the load by user if powering an inductive load (Relay/Contactor Coil). Typical suppressor P/N is 031-00808-000.



It is possible that multiple sources of power can be supplying the unit power panel. To prevent serious injury or death, the technician should verify that NO LETHAL VOLTAGES are present inside the panel AFTER disconnecting power, PRIOR to working on equipment.



The unit evaporator heater uses 120VAC. Disconnecting 120VAC power from the unit, at or below freezing temperatures, can result in damage to the evaporator and unit as a result of the chilled liquid freezing.

FIG. 11 – CONTROL WIRING OUTPUTS

SECTION 5 – TECHNICAL DATA

OPERATIONAL LIMITATIONS (ENGLISH)

TABLE 1 – TEMPERATURES AND FLOWS

Nominal Evaporator Water Flow						
Unit Designation	Temperature (°F)		Water Flow (gpm)		Air On Condenser (°F)	
	MIN	MAX	MIN	MAX	MIN	MAX
YLAA0070SE	40	55	60	285	0	125
YLAA0080SE	40	55	100	355	0	125
YLAA0090SE	40	55	140	625	0	125
YLAA0100SE	40	55	100	385	0	125
YLAA0115SE	40	55	100	385	0	125
YLAA0120SE	40	55	150	625	0	125
YLAA0135SE	40	55	120	625	0	125
YLAA0150SE	40	55	120	625	0	125
YLAA0155SE	40	55	150	625	0	125
YLAA0170SE	40	55	120	625	0	125
High Efficiency						
YLAA0091HE	40	55	100	385	0	125
YLAA0101HE	40	55	100	385	0	125
YLAA0125HE	40	55	100	385	0	125
YLAA0141HE	40	55	150	625	0	125
YLAA0156HE	40	55	120	625	0	125
YLAA0175HE	40	55	180	650	0	125

NOTES:

1. For leaving brine temperature below 40°F (4.4°C), contact your nearest Johnson Controls Office for application requirements.
2. For leaving water temperature higher than 55°F (12.8°C), contact the nearest Johnson Controls Office for application guidelines. 3. The evaporator is protected against freezing to -20°F (-28.8°C) with an electric heater as standard.
3. For operation at temperatures below 25°F (-3.9°C), the optional Low Ambient Kit will need to be installed on the system (for YLAA00140080 models only).
4. For operation at temperatures above 115°F (46.1°C), the optional High Ambient Kit will need to be installed on the system.



Excessive flow will cause damage to the cooler. Do not exceed maximum cooler flow. Special care should be taken when multiple chillers are fed by a single pump.

Voltage Limitations


The following voltage limitations are absolute and operation beyond these limitations may cause serious damage to the compressor.

TABLE 2 – VOLTAGE LIMITATIONS

UNIT POWER	MIN.	MAX.
200-3-60	180	220
230-3-60	207	253
380-3-60	355	415
460-3-60	414	506
575-3-60	517	633

HEAT EXCHANGER FLOW, GPM

YLAA Evaporator Pressure Drop (IP Units)

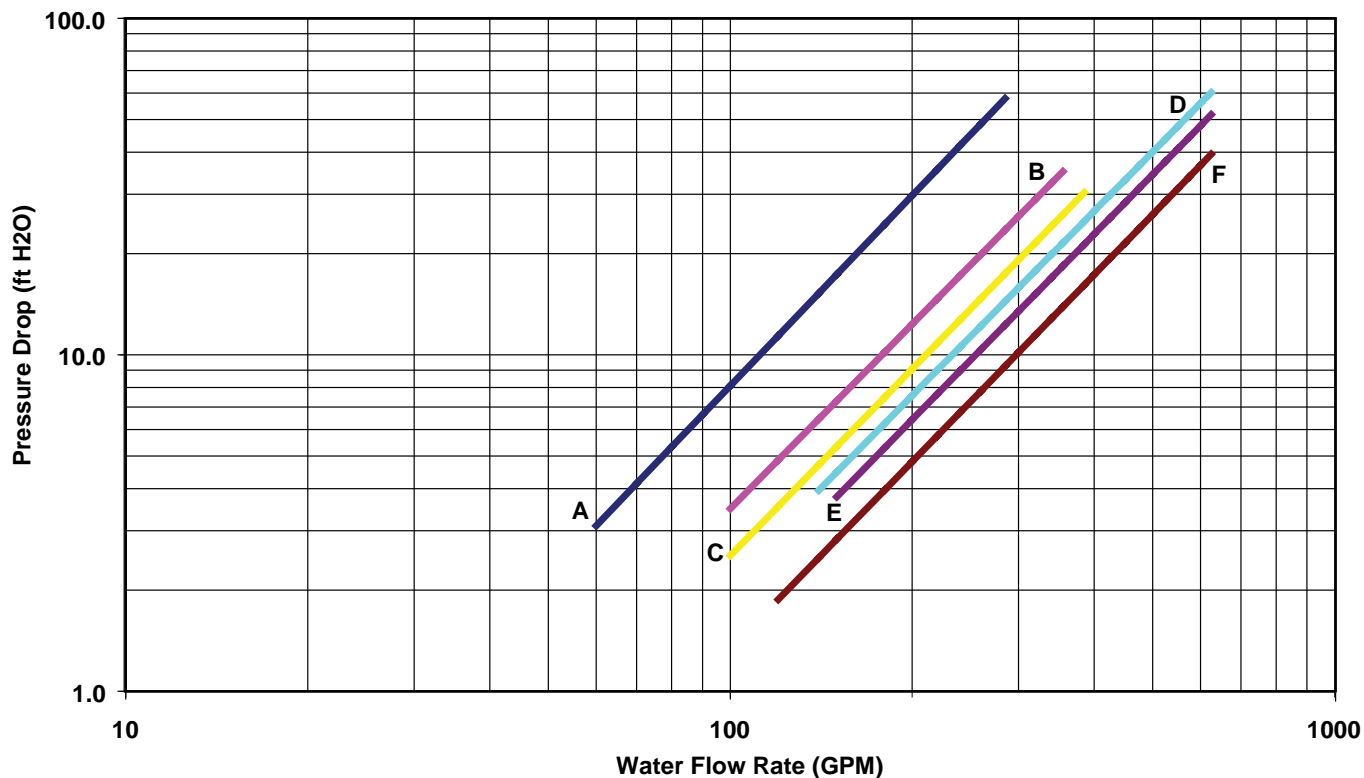

EVAPORATOR	YLAA MODELS
A	70SE
B	80SE
C	91HE, 100SE, 101HE, 115SE, 125HE
D	120SE, 141HE, 155SE
E	90SE
F	135SE, 150SE, 156HE, 170HE
G	175HE

TABLE 3 – ETHYLENE AND PROPYLENE GLYCOL CORRECTION FACTORS

ETHYLENE GLYCOL

% WEIGHT	TONS kW	COMPR	GPM°F/ TON	PRESS DROP	FREEZE PT
10	0.985	0.997	24.1	1.034	26
20	0.981	0.996	24.9	1.062	16
30	0.974	0.995	26.1	1.096	5
40	0.966	0.991	27.5	1.134	-10
50	0.957	0.989	29.1	1.172	-32

PROPYLENE GLYCOL

% WEIGHT	TONS kW	COMPR	GPM°F/ TON	PRESS DROP	FREEZE PT
10	0.983	0.996	24.2	1.048	27
20	0.974	0.995	24.4	1.086	19
30	0.961	0.990	25.1	1.134	8
40	0.946	0.98	26.0	1.186	-5
50	0.928	0.984	27.2	1.247	-25

Note: Water Pressure Drop Curves may extend past the minimum and maximum water flow ranges.

THIS PAGE INTENTIONALLY LEFT BLANK

PHYSICAL DATA (ENGLISH)

YLAA0070_ – YLAA0175_

60Hz

TABLE 4 – PHYSICAL DATA (ENGLISH)

REFRIGERANT R-410A	MODEL NUMBER YLAA									
	STANDARD EFFICIENCY UNITS									
	0070SE	0080SE	0090SE	0100SE	0115SE	0120SE	0135SE	0150SE	0155SE	0170SE
GENERAL UNIT DATA										
Nominal Tons, R-410A	71.8	77.7	85.8	95.8	113.9	119.7	127.3	140.4	143.1	167.9
Length	116.1	116.1	116.1	142.7	142.7	142.7	187.7	187.7	187.7	232.7
Width	88.0	88.0	88.0	88.0	88.0	88.0	88.0	88.0	88.0	88.0
Height	94.2	94.2	94.2	94.2	94.2	94.2	94.2	94.2	94.2	94.2
Number of Refrigerant Circuits	2	2	2	2	2	2	2	2	2	2
REFRIGERANT CHARGE, OPERATING										
R-410A, Ckt1 / Ckt2, LBS	51 / 50	54 / 52	57 / 57	55 / 58	62 / 58	65 / 62	81 / 71	81 / 73	83 / 76	90 / 87
Oil Charge, Ckt1 / Ckt2, Gallons	2.58 / 2.58	3.28 / 2.58	3.28 / 2.76	3.28 / 3.33	3.33/3.33	3.33/3.33	4.99 / 2.76	4.99 / 3.33	4.99 / 3.33	4.99 / 4.99
Shipping Weight	4112	4541	4949	5407	5644	5921	6803	6958	7152	7972
Operating Weight	4450	4948	5435	5835	6072	6473	7260	7415	7705	8429
COMPRESSORS, SCROLL TYPE										
Compressors per Circuit	3/3	3/3	3/2	3/2	2/2	3/2	3/2	3/2	3/2	3/3
Compressors per Unit	6	6	5	5	4	4	5	5	5	6
Nominal Tons per Compressor										
Circuit 1	13	15	15	15	32	32	32	32	32	32
Circuit 2	13	13	15/32	32	32	32	15/32	32	32	32
CONDENSER										
Total Face Area Ft ²	106.9	106.9	106.9	133.6	160.3	160.3	213.8	213.8	213.8	267.2
Number of Rows	1	1	1	1	1	1	1	1	1	1
Fins per Inch	20	20	20	20	20	20	20	20	20	20
CONDENSER FANS, LOW SOUND										
Number of Fans, Ckt1./Ckt2.	2/2	2/2	2/2	3/2	3/3	3/3	4/4	4/4	4/4	5/5
Fan HP	2	2	2	2	2	2	2	2	2	2
Fan RPM	1160	1160	1160	1160	1160	1160	1160	1160	1160	1160
Total Chiller CFM	62400	62400	62400	78000	93600	93600	124800	124800	124800	156000
EVAPORATOR										
Water Volume, Gallons	40	49	58	51	51	66	55	55	66	55
Maximum Water Side Pressure, PSIG	150	150	150	150	150	150	150	150	150	150
Maximum Refrigerant Side Pressure, PSIG	450	450	450	450	450	450	450	450	450	450
Minimum Chiller Water Flow Rate, GPM	60	100	140	100	100	150	120	120	150	120
Maximum Chiller Water Flow Rate, GPM	285	355	625	385	385	625	625	625	625	625
Water Connections Size, Inches	6	6	8	6	6	8	8	8	8	8

MODEL NUMBER YLAA						
HIGH EFFICIENCY UNITS						
0091HE	0101HE	0125HE	0141HE	0156HE	0175HE	
88.1	98.3	117.0	130.6	145.6	174.2	
142.7	142.7	187.7	187.7	232.7	232.7	
88.0	88.0	88.0	88.0	88.0	88.0	
94.2	94.2	94.2	94.2	94.2	94.2	
2	2	2	2	2	2	
59 / 55	55 / 71	75 / 71	83 / 73	90 / 82	94 / 92	
2.76 / 2.76	3.28/3.33	3.33/3.33	4.99 / 2.76	4.99 / 3.33	4.99 / 4.99	
5334	5569	6485	6997	7582	8313	
5762	5997	6913	7549	8039	8956	
2/2	3/2	2/2	3/2	3/2	3/3	
4	5	4	5	5	6	
15/32	15	32	32	32	32	
15/32	32	32	15/32	32	32	
160.3	160.3	213.8	213.8	267.2	267.2	
1	1	1	1	1	1	
20	20	20	20	20	20	
3/3	4/2	4/4	4/4	4/6	5/5	
2	2	2	2	2	2	
1160	1160	1160	1160	1160	1160	
93600	93600	124800	124800	156000	156000	
51	51	51	66	55	77	
150	150	150	150	150	150	
450	450	450	450	450	450	
100	100	100	150	120	120	
385	385	385	625	625	625	
6	6	6	8	8	8	

ELECTRICAL DATA

TABLE 5 – MICRO PANEL POWER SUPPLY

UNIT VOLTAGE	UNIT VOLTAGE	CONTROL POWER	MCA NOTE A	OVER CURRENT PROTECTION, SEE NOTE B		NF DISC Sw
MODELS w/o CONTROL TRANS		115-1-60/50		MIN	MAX	
			15A	10A	15A	30 A / 240V
MODELS w/ CONTROL TRANS	-17	200-1-60	15A	10A	15A	30 A / 240V
	-28	230-1-60	15A	10A	15A	30 A / 240V
	-40	380-1-60	15A	10A	15A	30 A / 480V
	-46	460-1-60	15A	10A	15A	30 A / 480V
	-50	380/415-1-60	15A	10A	15A	30A / 415V
	-58	575-1-60	15A	10A	15A	30 A / 600V

A. Minimum #14 AWG, 75 °C, Copper Recommended

B. Minimum and Maximum Over Current Protection, Dual Element Fuse or Circuit Breaker



*It is possible that multiple sources of power can be supplying the unit power panel. To prevent serious injury or death, the technician should verify that **NO LETHAL VOLTAGES** are present inside the panel **AFTER** disconnecting power, **PRIOR** to working on equipment.*



The unit evaporator heater uses 120VAC. Disconnecting 120VAC power from the unit, at or below freezing temperatures, can result in damage to the evaporator and unit as a result of the chilled liquid freezing.

TABLE 6 – VOLTAGE RANGE

VOLTAGE RANGE			
VOLTAGE CODE	UNIT POWER	MIN.	MAX.
-17	200-3-60	180	220
-28	230-3-60	207	253
-40	380/415-3-60	342	440
-46	460-3-60	414	506
-50	380/415-3-50	342	440
-58	575-3-60	517	633

ELECTRICAL NOTES

1. Minimum Circuit Ampacity (MCA) is based on 125% of the rated load amps for the largest motor plus 100% of the rated load amps for all other loads included in the circuit, per N.E.C. Article 430-24. If the optional Factory Mounted Control Transformer is provided, add the following MCA values to the electrical tables for the system providing power to the transformer: -17, add 2.5 amps; -28, add 2.3 amps; -40, add 1.5 amps; -46, add 1.3 amps; -58, add 1 amps.
2. The minimum recommended disconnect switch is based on 115% of the rated load amps for all loads included in the circuit, per N.E.C. Article 440.
3. Minimum fuse size is based upon 150% of the rated load amps for the largest motor plus 100% of the rated load amps for all other loads included in the circuit to avoid nuisance trips at start-up due to lock rotor amps. It is not recommended in applications where brown outs, frequent starting and stopping of the unit, and/or operation at ambient temperatures in excess of 95°F (35°C) is anticipated.
4. Maximum fuse size is based upon 225% of the rated load amps for the largest motor plus 100% of the rated load amps for all other loads included in the circuit, per N.E.C. Article 440-22.
5. Circuit breakers must be UL listed and CSA certified and maximum size is based on 225% of the rated load amps for the largest motor plus 100% of the rated load amps for all other loads included in the circuit. Otherwise, HACR-type circuit breakers must be used. Maximum HACR circuit breaker rating is based on 225% of the rated load amps for the largest motor plus 100% of the rated load amps for all other loads included in the circuit.
6. The “INCOMING WIRE RANGE” is the minimum and maximum wire size that can be accommodated by the unit wiring lugs. The (2) preceding the wire range indicates the number of termination points available per phase of the wire range specified. Actual wire size and number of wires per phase must be determined based on the National Electrical Code, **using copper connectors only**. Field wiring must also comply with local codes.
7. A ground lug is provided for each compressor system to accommodate a field grounding conductor per N.E.C. Table 250-95. A control circuit grounding lug is also supplied.
8. The supplied disconnect is a “Disconnecting Means” as defined in the N.E.C. 100, and is intended for isolating the unit for the available power supply to perform maintenance and troubleshooting. This disconnect is not intended to be a Load Break Device.
9. Field Wiring by others which complies to the National Electrical Code and Local Codes.

LEGEND

ACR-LINE	ACROSS THE LINE START
C.B.	CIRCUIT BREAKER
D.E.	DUAL ELEMENT FUSE
DISC SW	DISCONNECT SWITCH
FACT MOUNT CB	FACTORY MOUNTED CIRCUIT BREAKER
FLA	FULL LOAD AMPS
HZ	HERTZ
MAX	MAXIMUM
MCA	MINIMUM CIRCUIT AMPACITY
MIN	MINIMUM
MIN NF	MINIMUM NON FUSED
RLA	RATED LOAD AMPS
S.P. WIRE	SINGLE POINT WIRING
UNIT MTD SERV SW	UNIT MOUNTED SERVICE (NON-FUSED DISCONNECT SWITCH)
LRA	LOCKED ROTOR AMPS

VOLTAGE CODE

-17	= 200-3-60
-28	= 230-3-60
-40	= 380-3-60
-46	= 460-3-60
-50	= 380/415-3-50
-58	= 575-3-60

ELECTRICAL DATA W/O PUMPS

CHILLER MODEL	VOLT	HZ	MIN. CKT. AMPS	MIN N/F DISC SW	MIN DUAL ELEM FUSE	MAX DUAL ELEM FUSE & MAX CB	SYSTEM # 1											
							COMPR 1		COMPR 2		COMPR 3		COND FANS					
							RLA	LRA	RLA	LRA	RLA	LRA	QTY	FLA	LRA			
YLAA0070 SE	208	60	351	400	400	400	51.3	300	51.3	300	51.3	300	2	7.6	30.9			
	230	60	350	400	400	400	51.3	300	51.3	300	51.3	300	2	7.4	37.0			
	380	60	186	250	200	200	26.9	139	26.9	139	26.9	139	2	4.5	22.3			
	460	60	160	200	175	175	23.1	150	23.1	150	23.1	150	2	4.0	19.0			
	575	60	136	200	150	150	19.9	109	19.9	109	19.9	109	2	2.9	14.6			
YLAA0080 SE	208	60	366	600	400	400	55.8	425	55.8	425	55.8	425	2	7.6	30.9			
	230	60	365	600	400	400	55.8	425	55.8	425	55.8	425	2	7.4	37.0			
	380	60	216	250	225	250	36.0	239	36.0	239	36.0	239	2	4.5	22.3			
	460	60	173	200	200	200	26.9	187	26.9	187	26.9	187	2	4.0	19.0			
	575	60	148	200	175	175	23.7	148	23.7	148	23.7	148	2	2.9	14.6			
YLAA0090 SE	208	60	391	600	450	500	55.8	425	55.8	425	55.8	425	2	7.6	30.9			
	230	60	390	600	450	450	55.8	425	55.8	425	55.8	425	2	7.4	37.0			
	380	60	249	400	300	300	36.0	239	36.0	239	36.0	239	2	4.5	22.3			
	460	60	192	250	225	225	26.9	187	26.9	187	26.9	187	2	4.0	19.0			
	575	60	168	200	200	200	23.7	148	23.7	148	23.7	148	2	2.9	14.6			
YLAA0100 SE	208	60	452	600	500	500	55.8	425	55.8	425	55.8	425	2	7.6	30.9			
	230	60	451	600	500	500	55.8	425	55.8	425	55.8	425	2	7.4	37.0			
	380	60	286	400	350	350	36.0	239	36.0	239	36.0	239	2	4.5	22.3			
	460	60	223	250	250	250	26.9	187	26.9	187	26.9	187	2	4.0	19.0			
	575	60	197	250	225	225	23.7	148	23.7	148	23.7	148	2	2.9	14.6			
YLAA0115 YLAA0120 SE	208	60	511	600	600	600	109.6	599	109.6	599			3	7.6	30.9			
	230	60	510	600	600	600	109.6	599	109.6	599			3	7.4	37.0			
	380	60	321	400	350	350	69.2	358	69.2	358			3	4.5	22.3			
	460	60	256	400	300	300	54.5	310	54.5	310			3	4.0	19.0			
	575	60	227	250	250	250	49.4	239	49.4	239			3	2.9	14.6			
YLAA0135 SE	208	60	582	800	700	700	109.6	599	109.6	599	109.6	599	4	7.6	30.9			
	230	60	581	800	700	700	109.6	599	109.6	599	109.6	599	4	7.4	37.0			
	380	60	366	600	400	400	69.2	358	69.2	358	69.2	358	4	4.5	22.3			
	460	60	291	400	350	350	54.5	310	54.5	310	54.5	310	4	4.0	19.0			
	575	60	257	400	300	300	49.4	239	49.4	239	49.4	239	4	2.9	14.6			
YLAA0150 YLAA0155 SE	208	60	636	800	700	700	109.6	599	109.6	599	109.6	599	4	7.6	30.9			
	230	60	635	800	700	700	109.6	599	109.6	599	109.6	599	4	7.4	37.0			
	380	60	399	600	450	450	69.2	358	69.2	358	69.2	358	4	4.5	22.3			
	460	60	318	400	350	350	54.5	310	54.5	310	54.5	310	4	4.0	19.0			
	575	60	283	400	300	300	49.4	239	49.4	239	49.4	239	4	2.9	14.6			
YLAA0170 HE	208	60	761	1000	800	800	109.6	599	109.6	599	109.6	599	5	7.6	30.9			
	230	60	759	1000	800	800	109.6	599	109.6	599	109.6	599	5	7.4	37.0			
	380	60	478	600	500	500	69.2	358	69.2	358	69.2	358	5	4.5	22.3			
	460	60	381	600	400	400	54.5	310	54.5	310	54.5	310	5	4.0	19.0			
	575	60	338	400	400	400	49.4	239	49.4	239	49.4	239	5	2.9	14.6			

SYSTEM # 2									
COMPR 1		COMPR 2		COMPR 3		COND FANS			
RLA	LRA	RLA	LRA	RLA	LRA	QTY	FLA	LRA	
51.3	300	51.3	300	51.3	300	2	7.6	30.9	
51.3	300	51.3	300	51.3	300	2	7.4	37.0	
26.9	139	26.9	139	26.9	139	2	4.5	22.3	
23.1	150	23.1	150	23.1	150	2	4.0	19.0	
19.9	109	19.9	109	19.9	109	2	2.9	14.6	
51.3	300	51.3	300	51.3	300	2	7.6	30.9	
51.3	300	51.3	300	51.3	300	2	7.4	37.0	
26.9	139	26.9	139	26.9	139	2	4.5	22.3	
23.1	150	23.1	150	23.1	150	2	4.0	19.0	
19.9	109	19.9	109	19.9	109	2	2.9	14.6	
109.6	599	55.8	425			2	7.6	30.9	
109.6	599	55.8	425			2	7.4	37.0	
69.2	358	36.0	239			2	4.5	22.3	
54.5	310	26.9	187			2	4.0	19.0	
49.4	239	23.7	148			2	2.9	14.6	
109.6	599	110	599			3	7.6	30.9	
109.6	599	110	599			3	7.4	37.0	
69.2	358	69.2	358			3	4.5	22.3	
54.5	310	54.5	310			3	4.0	19.0	
49.4	239	49.4	239			3	2.9	14.6	
109.6	599	109.6	599			3	7.6	30.9	
109.6	599	109.6	599			3	7.4	37.0	
69.2	358	69.2	358			3	4.5	22.3	
54.5	310	54.5	310			3	4.0	19.0	
49.4	239	49.4	239			3	2.9	14.6	
109.6	599	55.8	425			4	7.6	30.9	
109.6	599	55.8	425			4	7.4	37.0	
69.2	358	36.0	239			4	4.5	22.3	
54.5	310	26.9	187			4	4.0	19.0	
49.4	239	23.7	148			4	2.9	14.6	
109.6	599	109.6	599			4	7.6	30.9	
109.6	599	109.6	599			4	7.4	37.0	
69.2	358	69.2	358			4	4.5	22.3	
54.5	310	54.5	310			4	4.0	19.0	
49.4	239	49.4	239			4	2.9	14.6	
109.6	599	110	599	109.6	599	5	7.6	30.9	
109.6	599	110	599	109.6	599	5	7.4	37.0	
69.2	358	69.2	358	69.2	358	5	4.5	22.3	
54.5	310	54.5	310	54.5	310	5	4.0	19.0	
49.4	239	49.4	239	49.4	239	5	2.9	14.6	

ELECTRICAL DATA W/O PUMPS (CONT'D)

CHILLER MODEL	VOLT	HZ	MIN. CKT. AMPS	MIN N/F DISC SW	MIN DUAL ELEM FUSE	MAX DUAL ELEM FUSE & MAX CB	SYSTEM # 1											
							COMPR 1		COMPR 2		COMPR 3		COND FANS					
							RLA	LRA	RLA	LRA	RLA	LRA	QTY	FLA	LRA			
YLAA0091 HE	208	60	404	600	450	500	109.6	599	55.8	425			3	7.6	30.9			
	230	60	403	600	450	500	109.6	358	55.8	425			3	7.4	37.0			
	380	60	255	400	300	300	69.2	310	36.0	239			3	4.5	22.3			
	460	60	200	250	225	250	54.5	239	26.9	187			3	4.0	19.0			
	575	60	176	200	200	225	49.4	310	23.7	148			3	2.9	14.6			
YLAA0101 HE	208	60	460	600	500	500	55.8	425	55.8	425	55.8	425	2	7.6	30.9			
	230	60	458	600	500	500	55.8	425	55.8	425	55.8	425	2	7.4	37.0			
	380	60	291	400	350	350	36.0	239	36.0	239	36.0	239	2	4.5	22.3			
	460	60	227	250	250	250	26.9	187	26.9	187	26.9	187	2	4.0	19.0			
	575	60	200	250	225	225	23.7	148	23.7	148	23.7	148	2	2.9	14.6			
YLAA0125 HE	208	60	527	600	600	600	109.6	599	109.6	599			4	7.6	30.9			
	230	60	525	600	600	600	109.6	599	109.6	599			4	7.4	37.0			
	380	60	330	400	350	350	69.2	358	69.2	358			4	4.5	22.3			
	460	60	264	400	300	300	54.5	310	54.5	310			4	4.0	19.0			
	575	60	233	400	250	250	49.4	239	49.4	239			4	2.9	14.6			
YLAA0141 HE	208	60	582	800	700	700	109.6	599	109.6	599	109.6	599	5	7.6	30.9			
	230	60	581	800	700	700	109.6	599	109.6	599	109.6	599	5	7.4	37.0			
	380	60	366	600	400	400	69.2	358	69.2	358	69.2	358	5	4.5	22.3			
	460	60	291	400	350	350	54.5	310	54.5	310	54.5	310	5	4.0	19.0			
	575	60	257	400	300	300	49.4	239	49.4	239	49.4	239	5	2.9	14.6			
YLAA0156 HE	208	60	651	800	700	700	109.6	599	109.6	599	109.6	599	6	7.6	30.9			
	230	60	649	800	700	700	109.6	599	109.6	599	109.6	599	6	7.4	37.0			
	380	60	408	600	450	450	69.2	358	69.2	358	69.2	358	6	4.5	22.3			
	460	60	326	400	350	350	54.5	310	54.5	310	54.5	310	6	4.0	19.0			
	575	60	288	400	350	350	49.4	239	49.4	239	49.4	239	6	2.9	14.6			
YLAA0175 HE	208	60	761	1000	800	800	109.6	599	109.6	599	109.6	599	5	7.6	30.9			
	230	60	759	1000	800	800	109.6	599	109.6	599	109.6	599	5	7.4	37.0			
	380	60	478	600	500	500	69.2	358	69.2	358	69.2	358	5	4.5	22.3			
	460	60	381	600	400	400	54.5	310	54.5	310	54.5	310	5	4.0	19.0			
	575	60	338	400	400	400	49.4	239	49.4	239	49.4	239	5	2.9	14.6			

SYSTEM # 2									
COMPR 1		COMPR 2		COMPR 3		COND FANS			
RLA	LRA	RLA	LRA	RLA	LRA	QTY	FLA	LRA	
109.6	599	55.8	425			3	7.6	30.9	
109.6	599	55.8	425			3	7.4	37.0	
69.2	358	36.0	239			3	4.5	22.3	
54.5	310	26.9	187			3	4.0	19.0	
49.4	239	23.7	148			3	2.9	14.6	
109.6	599	109.6	599			4	7.6	30.9	
109.6	599	109.6	599			4	7.4	37.0	
69.2	358	69.2	358			4	4.5	22.3	
54.5	310	54.5	310			4	4.0	19.0	
49.4	239	49.4	239			4	2.9	14.6	
109.6	599	110	599			4	7.6	30.9	
109.6	599	110	599			4	7.4	37.0	
69.2	358	69.2	358			4	4.5	22.3	
54.5	310	54.5	310			4	4.0	19.0	
49.4	239	49.4	239			4	2.9	14.6	
109.6	599	55.8	425			3	7.6	30.9	
109.6	599	55.8	425			3	7.4	37.0	
69.2	358	36	239			3	4.5	22.3	
54.5	310	26.9	187			3	4.0	19.0	
49.4	239	23.7	148			3	2.9	14.6	
109.6	599	109.6	599			4	7.6	30.9	
109.6	599	110	599			4	7.4	37.0	
69.2	358	69.2	358			4	4.5	22.3	
54.5	310	54.5	310			4	4.0	19.0	
49.4	239	49.4	239			4	2.9	14.6	
109.6	599	110	599	109.6	599	5	7.6	30.9	
109.6	599	110	599	109.6	599	5	7.4	37.0	
69.2	358	69.2	358	69.2	358	5	4.5	22.3	
54.5	310	54.5	310	54.5	310	5	4.0	19.0	
49.4	239	49.4	239	49.4	239	5	2.9	14.6	

WIRING LUGS

CHILLER MODEL	VOLT	HZ	TERMINAL BLOCK LUGS	NON FUSED DISCONNECT SWITCH LUGS	TERMINAL BLOCK LUGS
YLAA0070	208	60	(1) #4 - 500 kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil
	230	60	(1) #4 - 500 kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil
	380	60	(1) #4 - 500 kcmil	(1) #6 - 350 kcmil	(1) #6 - 350 kcmil
	460	60	(1) #4 - 500 kcmil	(1) #6 - 350 kcmil	(1) #6 - 350 kcmil
	575	60	(1) #4 - 500 kcmil	(1) #6 - 350 kcmil	(1) #6 - 350 kcmil
YLAA0080	208	60	(1) #4 - 500 kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil
	230	60	(1) #4 - 500 kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil
	380	60	(1) #4 - 500 kcmil	250 - 500kcmil & (2)3/0 - 250kcmil	250 - 500kcmil & (2)3/0 - 250kcmil
	460	60	(1) #4 - 500 kcmil	(1) #6 - 350 kcmil	(1) #6 - 350 kcmil
	575	60	(1) #4 - 500 kcmil	(1) #6 - 350 kcmil	(1) #6 - 350 kcmil
YLAA0090	208	60	(2) #6 - 500 kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil
	230	60	(2) #6 - 500 kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil
	380	60	(1) #4 - 500 kcmil	250 - 500kcmil & (2)3/0 - 250kcmil	250 - 500kcmil & (2)3/0 - 250kcmil
	460	60	(1) #4 - 500 kcmil	(1) #6 - 350 kcmil	(1) #6 - 350 kcmil
	575	60	(1) #4 - 500 kcmil	(1) #6 - 350 kcmil	(1) #6 - 350 kcmil
YLAA0091	208	60	(2) #6 - 500 kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil
	230	60	(2) #6 - 500 kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil
	380	60	(1) #4 - 500 kcmil	250 - 500kcmil & (2)3/0 - 250kcmil	250 - 500kcmil & (2)3/0 - 250kcmil
	460	60	(1) #4 - 500 kcmil	(1) #6 - 350 kcmil	(1) #6 - 350 kcmil
	575	60	(1) #4 - 500 kcmil	(1) #6 - 350 kcmil	(1) #6 - 350 kcmil
P1: YLAA0101 P2: YLAA0100	208	60	(2) #6 - 500 kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil
	230	60	(2) #6 - 500 kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil
	380	60	(1) #4 - 500 kcmil	250 - 500kcmil & (2)3/0 - 250kcmil	250 - 500kcmil & (2)3/0 - 250kcmil
	460	60	(1) #4 - 500 kcmil	250 - 500kcmil & (2)3/0 - 250kcmil	250 - 500kcmil & (2)3/0 - 250kcmil
	575	60	(1) #4 - 500 kcmil	(1) #6 - 350 kcmil	(1) #6 - 350 kcmil

WIRING LUGS (CONT'D)

CHILLER MODEL	VOLT	HZ	TERMINAL BLOCK LUGS	NON FUSED DISCONNECT SWITCH LUGS	TERMINAL BLOCK LUGS
P1: YLAA0115 & YLAA0120 P2: YLAA0125	208	60	(2) #6 - 500 kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil
	230	60	(2) #6 - 500 kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil
	380	60	(1) #4 - 500 kcmil	250 - 500kcmil & (2)3/0 - 250kcmil	250 - 500kcmil & (2)3/0 - 250kcmil
	460	60	(1) #4 - 500 kcmil	250 - 500kcmil & (2)3/0 - 250kcmil	250 - 500kcmil & (2)3/0 - 250kcmil
	575	60	(1) #4 - 500 kcmil	250 - 500kcmil & (2)3/0 - 250kcmil	250 - 500kcmil & (2)3/0 - 250kcmil
P1: YLAA0135 P2: YLAA0141	208	60	(2) #6 - 500 kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil
	230	60	(2) #6 - 500 kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil
	380	60	(1) #4 - 500 kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil	250 - 500kcmil & (2)3/0 - 250kcmil
	460	60	(1) #4 - 500 kcmil	250 - 500kcmil & (2)3/0 - 250kcmil	250 - 500kcmil & (2)3/0 - 250kcmil
	575	60	(1) #4 - 500 kcmil	250 - 500kcmil & (2)3/0 - 250kcmil	250 - 500kcmil & (2)3/0 - 250kcmil
P1: YLAA0150 & YLAA0155 P2: YLAA0156	208	60	(2) #6 - 500 kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil
	230	60	(2) #6 - 500 kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil
	380	60	(2) #6 - 500 kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil
	460	60	(1) #4 - 500 kcmil	250 - 500kcmil & (2)3/0 - 250kcmil	250 - 500kcmil & (2)3/0 - 250kcmil
	575	60	(1) #4 - 500 kcmil	250 - 500kcmil & (2)3/0 - 250kcmil	250 - 500kcmil & (2)3/0 - 250kcmil
P2: YLAA0170 & YLAA0175	208	60	(2) #6 - 500 kcmil	(4) 4/0 - 500kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil
	230	60	(2) #6 - 500 kcmil	(4) 4/0 - 500kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil
	380	60	(2) #6 - 500 kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil
	460	60	(2) #6 - 500 kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil
	575	60	(1) #4 - 500 kcmil	(2)250 - 500kcmil & (3)2/0 - 400kcmil	250 - 500kcmil & (2)3/0 - 250kcmil

ELECTRICAL DATA W/ PUMPS

CHILLER MODEL	VOLT	PUMP MODEL	PUMP FLA	MIN. CKT AMPS	MIN N/F DISC SW			MIN DUAL ELEM FUSE & MIN CB	MAX DUAL ELEM FUSE & MAX CB				
					RATING	SIZE	LUG						
YLAA0070 SE	208	A, K	15.4	366	600	S6-600	S6: (2) 250kcmil - 500kcmil	400	400				
	230		13.9	364	600	S6-600	S6: (2) 250kcmil - 500kcmil	400	400				
	380		8.1	194	250	S4-250	S4: 6AWG - 350kcmil	225	225				
	460		7.0	167	200	S3-225	S3-S4-S5: 4AWG - 300kcmil	175	175				
	575		5.6	142	200	S3-225	S3-S4-S5: 4AWG - 300kcmil	150	150				
YLAA0070 SE	208	B	21.4	372	600	S6-600	S6: (2) 250kcmil - 500kcmil	400	400				
	230		20.4	371	600	S6-600	S6: (2) 250kcmil - 500kcmil	400	400				
	380		12.0	198	250	S4-250	S4: 6AWG - 350kcmil	225	225				
	460		10.2	171	200	S3-225	S3-S4-S5: 4AWG - 300kcmil	200	200				
	575		8.2	144	200	S3-225	S3-S4-S5: 4AWG - 300kcmil	150	150				
YLAA0070 SE	208	C	32.2	383	600	S6-600	S6: (2) 250kcmil - 500kcmil	400	400				
	230		28.4	379	600	S6-600	S6: (2) 250kcmil - 500kcmil	400	400				
	380		15.4	202	250	S4-250	S4: 6AWG - 350kcmil	225	225				
	460		14.2	175	200	S3-225	S3-S4-S5: 4AWG - 300kcmil	200	200				
	575		11.4	147	200	S3-225	S3-S4-S5: 4AWG - 300kcmil	175	175				
YLAA0070 SE	208	D, M, N	41.7	393	600	S6-600	S6: (2) 250kcmil - 500kcmil	450	450				
	230		36.3	387	600	S6-600	S6: (2) 250kcmil - 500kcmil	400	400				
	380		22.0	208	250	S4-250	S4: 6AWG - 350kcmil	225	225				
	460		18.2	179	200	S3-225	S3-S4-S5: 4AWG - 300kcmil	200	200				
	575		14.5	150	200	S3-225	S3-S4-S5: 4AWG - 300kcmil	175	175				
YLAA0070 SE	208	L	27.1	378	600	S6-600	S6: (2) 250kcmil - 500kcmil	400	400				
	230		24.5	375	600	S6-600	S6: (2) 250kcmil - 500kcmil	400	400				
	380		14.8	201	250	S4-250	S4: 6AWG - 350kcmil	225	225				
	460		12.3	173	200	S3-225	S3-S4-S5: 4AWG - 300kcmil	200	200				
	575		9.8	146	200	S3-225	S3-S4-S5: 4AWG - 300kcmil	175	175				
YLAA0080 SE	208	A, K	15.4	381	600	S6-600	S6: (2) 250kcmil - 500kcmil	400	400				
	230		13.9	379	600	S6-600	S6: (2) 250kcmil - 500kcmil	400	400				
	380		8.1	224	250	S4-250	S4: 6AWG - 350kcmil	250	250				
	460		7.0	180	200	S3-225	S3-S4-S5: 4AWG - 300kcmil	200	200				
	575		5.6	154	200	S3-225	S3-S4-S5: 4AWG - 300kcmil	175	175				
YLAA0080 SE	208	B	21.4	387	600	S6-600	S6: (2) 250kcmil - 500kcmil	450	450				
	230		20.4	385	600	S6-600	S6: (2) 250kcmil - 500kcmil	400	400				
	380		12.0	228	400	S5-400	S5: (2) 3/0 - 250kcmil	250	250				
	460		10.2	183	250	S4-250	S4: 6AWG - 350kcmil	200	200				
	575		8.2	157	200	S3-225	S3-S4-S5: 4AWG - 300kcmil	175	175				
YLAA0080 SE	208	C	32.2	398	600	S6-600	S6: (2) 250kcmil - 500kcmil	450	450				
	230		28.4	393	600	S6-600	S6: (2) 250kcmil - 500kcmil	450	450				
	380		15.4	231	400	S5-400	S5: (2) 3/0 - 250kcmil	250	250				
	460		14.2	187	250	S4-250	S4: 6AWG - 350kcmil	200	200				
	575		11.4	160	200	S3-225	S3-S4-S5: 4AWG - 300kcmil	175	175				
YLAA0080 SE	208	D, M, N	41.7	407	600	S6-600	S6: (2) 250kcmil - 500kcmil	450	450				
	230		36.3	401	600	S6-600	S6: (2) 250kcmil - 500kcmil	450	450				
	380		22.0	238	400	S5-400	S5: (2) 3/0 - 250kcmil	250	250				
	460		18.2	191	250	S4-250	S4: 6AWG - 350kcmil	200	200				
	575		14.5	163	200	S3-225	S3-S4-S5: 4AWG - 300kcmil	175	175				
YLAA0080 SE	208	L	27.1	393	600	S6-600	S6: (2) 250kcmil - 500kcmil	450	450				
	230		24.5	389	600	S6-600	S6: (2) 250kcmil - 500kcmil	450	450				
	380		14.8	231	400	S5-400	S5: (2) 3/0 - 250kcmil	250	250				
	460		12.3	185	250	S4-250	S4: 6AWG - 350kcmil	200	200				
	575		9.8	158	200	S3-225	S3-S4-S5: 4AWG - 300kcmil	175	175				

	SYSTEM # 1									SYSTEM # 2								
	COMPR 1		COMPR 2		COMPR 3		COND FANS			COMPR 1		COMPR 2		COMPR 3		COND FANS		
	RLA	LRA	RLA	LRA	RLA	LRA	QTY	FLA	LRA	RLA	LRA	RLA	LRA	RLA	LRA	QTY	FLA	LRA
	51.3	300	51.3	300	51.3	300	2	7.6	30.9	51.3	300	51.3	300	51.3	300	2	7.6	30.9
	51.3	300	51.3	300	51.3	300	2	7.4	37.0	51.3	300	51.3	300	51.3	300	2	7.4	37.0
	26.9	139	26.9	139	26.9	139	2	4.5	22.3	26.9	139	26.9	139	26.9	139	2	4.5	22.3
	23.1	150	23.1	150	23.1	150	2	4.0	19.0	23.1	150	23.1	150	23.1	150	2	4.0	19.0
	19.9	109	19.9	109	19.9	109	2	2.9	14.6	19.9	109	19.9	109	19.9	109	2	2.9	14.6
	51.3	300	51.3	300	51.3	300	2	7.6	30.9	51.3	300	51.3	300	51.3	300	2	7.6	30.9
	51.3	300	51.3	300	51.3	300	2	7.4	37.0	51.3	300	51.3	300	51.3	300	2	7.4	37.0
	26.9	139	26.9	139	26.9	139	2	4.5	22.3	26.9	139	26.9	139	26.9	139	2	4.5	22.3
	23.1	150	23.1	150	23.1	150	2	4.0	19.0	23.1	150	23.1	150	23.1	150	2	4.0	19.0
	19.9	109	19.9	109	19.9	109	2	2.9	14.6	19.9	109	19.9	109	19.9	109	2	2.9	14.6
	51.3	300	51.3	300	51.3	300	2	7.6	30.9	51.3	300	51.3	300	51.3	300	2	7.6	30.9
	51.3	300	51.3	300	51.3	300	2	7.4	37.0	51.3	300	51.3	300	51.3	300	2	7.4	37.0
	26.9	139	26.9	139	26.9	139	2	4.5	22.3	26.9	139	26.9	139	26.9	139	2	4.5	22.3
	23.1	150	23.1	150	23.1	150	2	4.0	19.0	23.1	150	23.1	150	23.1	150	2	4.0	19.0
	19.9	109	19.9	109	19.9	109	2	2.9	14.6	19.9	109	19.9	109	19.9	109	2	2.9	14.6
	51.3	300	51.3	300	51.3	300	2	7.6	30.9	51.3	300	51.3	300	51.3	300	2	7.6	30.9
	51.3	300	51.3	300	51.3	300	2	7.4	37.0	51.3	300	51.3	300	51.3	300	2	7.4	37.0
	26.9	139	26.9	139	26.9	139	2	4.5	22.3	26.9	139	26.9	139	26.9	139	2	4.5	22.3
	23.1	150	23.1	150	23.1	150	2	4.0	19.0	23.1	150	23.1	150	23.1	150	2	4.0	19.0
	19.9	109	19.9	109	19.9	109	2	2.9	14.6	19.9	109	19.9	109	19.9	109	2	2.9	14.6
	51.3	300	51.3	300	51.3	300	2	7.6	30.9	51.3	300	51.3	300	51.3	300	2	7.6	30.9
	51.3	300	51.3	300	51.3	300	2	7.4	37.0	51.3	300	51.3	300	51.3	300	2	7.4	37.0
	26.9	139	26.9	139	26.9	139	2	4.5	22.3	26.9	139	26.9	139	26.9	139	2	4.5	22.3
	23.1	150	23.1	150	23.1	150	2	4.0	19.0	23.1	150	23.1	150	23.1	150	2	4.0	19.0
	19.9	109	19.9	109	19.9	109	2	2.9	14.6	19.9	109	19.9	109	19.9	109	2	2.9	14.6
	51.3	300	51.3	300	51.3	300	2	7.6	30.9	51.3	300	51.3	300	51.3	300	2	7.6	30.9
	51.3	300	51.3	300	51.3	300	2	7.4	37.0	51.3	300	51.3	300	51.3	300	2	7.4	37.0
	26.9	139	26.9	139	26.9	139	2	4.5	22.3	26.9	139	26.9	139	26.9	139	2	4.5	22.3
	23.1	150	23.1	150	23.1	150	2	4.0	19.0	23.1	150	23.1	150	23.1	150	2	4.0	19.0
	19.9	109	19.9	109	19.9	109	2	2.9	14.6	19.9	109	19.9	109	19.9	109	2	2.9	14.6
	51.3	300	51.3	300	51.3	300	2	7.6	30.9	51.3	300	51.3	300	51.3	300	2	7.6	30.9
	51.3	300	51.3	300	51.3	300	2	7.4	37.0	51.3	300	51.3	300	51.3	300	2	7.4	37.0
	26.9	139	26.9	139	26.9	139	2	4.5	22.3	26.9	139	26.9	139	26.9	139	2	4.5	22.3
	23.1	150	23.1	150	23.1	150	2	4.0	19.0	23.1	150	23.1	150	23.1	150	2	4.0	19.0
	19.9	109	19.9	109	19.9	109	2	2.9	14.6	19.9	109	19.9	109	19.9	109	2	2.9	14.6
	51.3	300	51.3	300	51.3	300	2	7.6	30.9	51.3	300	51.3	300	51.3	300	2	7.6	30.9
	51.3	300	51.3	300	51.3	300	2	7.4	37.0	51.3	300	51.3	300	51.3	300	2	7.4	37.0
	26.9	139	26.9	139	26.9	139	2	4.5	22.3	26.9	139	26.9	139	26.9	139	2	4.5	22.3
	23.1	150	23.1	150	23.1	150	2	4.0	19.0	23.1	150	23.1	150	23.1	150	2	4.0	19.0
	19.9	109	19.9	109	19.9	109	2	2.9	14.6	19.9	109	19.9	109	19.9	109	2	2.9	14.6
	51.3	300	51.3	300	51.3	300	2	7.6	30.9	51.3	300	51.3	300	51.3	300	2	7.6	30.9
	51.3	300	51.3	300	51.3	300	2	7.4	37.0	51.3	300	51.3	300	51.3	300	2	7.4	37.0
	26.9	139	26.9	139	26.9	139	2	4.5	22.3	26.9	139	26.9	139	26.9	139	2	4.5	22.3
	23.1	150	23.1	150	23.1	150	2	4.0	19.0	23.1	150	23.1	150	23.1	150	2	4.0	19.0
	19.9	109	19.9	109	19.9	109	2	2.9	14.6	19.9	109	19.9	109	19.9	109	2	2.9	14.6
	51.3	300	51.3	300	51.3	300	2	7.6	30.9	51.3	300	51.3	300	51.3	300	2	7.6	30.9
	51.3	300	51.3	300	51.3	300	2	7.4	37.0	51.3	300	51.3	300	51.3	300	2	7.4	37.0
	26.9	139	26.9	139	26.9	139	2	4.5	22.3	26.9	139	26.9	139	26.9	139	2	4.5	22.3
	23.1	150	23.1	150	23.1	150	2	4.0	19.0	23.1	150	23.1	150	23.1	150	2	4.0	19.0
	19.9	109	19.9	109	19.9	109	2	2.9	14.6	19.9	109	19.9	109	19.9	109	2	2.9	14.6
	51.3	300	51.3	300	51.3	300	2	7.6	30.9	51.3	300	51.3	300	51.3	300	2	7.6	30.9
	51.3	300	51.3	300	51.3	300	2	7.4	37.0	51.3	300	51.3	300	51.3	300	2	7.4	37.0
	26.9	139	26.9	139	26.9	139	2	4.5	22.3	26.9	139	26.9	139	26.9	139	2	4.5	22.3
	23.1	150	23.1	150	23.1	150	2	4.0	19.0	23.1	150	23.1	150	23.1	150	2	4.0	19.0
	19.9	109	19.9	109	19.9	109	2	2.9	14.6	19.9	109	19.9	109	19.9	109	2	2.9	14.6
	51.3	300	51.3	300	51.3	300	2	7.6	30.9	51.3	300	51.3	300	51.3	300	2	7.6	30.9
	51.3	300	51.3	300	51.3	300	2	7.4	37.0	51.3	300	51.3	300	51.3	300	2	7.4	37.0
	26.9	139	26.9	139	26.9	139	2	4.5	22.3	26.9	139	26.9	139	26.9	139	2	4.5	22.3
	23.1	150	23.1	150	23.1	150	2	4.0	19.0	23.1	150	23.1	150	23.1	150	2	4.0	19.0
	19.9	109	19.9	109	19.9	109	2	2.9	14.6	19.9	109	19.9	109	19.9	109	2	2.9	14.6
	51.3	300	51.3	300	51.3	300	2	7.6	30.9	51.3	300	51.3	300	51.3	300	2	7.6	30.9
	51.3	300	51.3	300	51.3	300	2	7.4	37.0	51.3	300	51.3	300	51.3	300	2	7.4	37.0
	26.9	139	26.9	139	26.9	139	2	4.5	22.3	26.9	139	26.9	139	26.9	139	2	4.5	22.3
	23.1	150	23.1	150	23.1	150	2	4.0	19.0	23.1	150	23.1	150	23.1	150	2	4.0	19.0
	19.9	109	19.9	109	19.9	109	2	2.9	14.6	19.9	109	19.9	109	19.9	109	2	2.9	14.6
	51.3	300	51.3	300	51.3	300	2	7.6	30.9	51.3	300	51.3	300	51.3	300	2	7.6	30.9
	51.3	300	51.3	300	51.3	300	2	7.4	37.0	51.3	300	51.3	300	51.3	300	2	7.4	37.0
	26.9	139	26.9	139	26.9	139	2	4.5	22.3	26.9	139	26.9	139	26.9	139	2	4.5	22.3
	23.1	150	23.1	150	23.1	150	2	4.0	19.0	23.1	150	23.1	150	23.1	150	2	4.0	19.0
	19.9	109	19.9	109	19.9	109	2	2.9	14.6	19.9	109	19.9	109	19.9	109	2	2.9	14.6
	51.3	300	51.3	300	51.3	300	2	7.6	30.9	51.3	300	51.3	300	51.3	300	2	7.6	30.9
	51.3	300	51.3	300	51.3	300	2	7.4	37.0	51.3	300	51.3	300	51.3	300	2	7.4	37.0
	26.9	139	26.9	139	26.9	139	2	4.5	22.3	26.9	139	26.9	139	26.9	139	2	4.5	22.3
	23.1	150	23.1	150	23.1	150	2	4.0	19.0	23.1	150	23.1	150	23.1	150	2	4.0	19.0
	19.9	109	19.9	109	19.9	109	2	2.9	14.6	19.9	109	19.9	109	19.9	109	2	2.9	14.6
	51.3	300	51.3	300	51.3	300	2	7.6	30.9	51.3	300	51.3	300	51.3	300	2	7.6	30.9
	51.3	300	51.3	300	51.3	300	2	7.4	37.0	51.3	300	51.3	300	51.3	300	2	7.4	37.0
	26.9	139	26.9	139	26.9	139	2	4.5	22.3	26.9	139	26.9	139					

ELECTRICAL DATA W/ PUMPS (CONT'D)

CHILLER MODEL	VOLT	PUMP MODEL	PUMP FLA	MIN. CKT AMPS	MIN N/F DISC SW			MIN DUAL ELEM FUSE & MIN CB	MAX DUAL ELEM FUSE & MAX CB			
					RATING	SIZE	LUG					
YLAA0090 SE	208	A, K	15.4	406	600	S6-600	S6: (2) 250kcmil - 500kcmil	450	500			
	230		13.9	404	600	S6-600	S6: (2) 250kcmil - 500kcmil	450	500			
	380		8.1	257	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300			
	460		7.0	199	250	S4-250	S4: 6AWG - 350kcmil	225	250			
	575		5.6	174	200	S3-225	S3-S4-S5: 4AWG - 300kcmil	200	200			
YLAA0090 SE	208	B	21.4	412	600	S6-600	S6: (2) 250kcmil - 500kcmil	450	500			
	230		20.4	410	600	S6-600	S6: (2) 250kcmil - 500kcmil	450	500			
	380		12.0	261	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300			
	460		10.2	202	250	S4-250	S4: 6AWG - 350kcmil	225	250			
	575		8.2	176	200	S3-225	S3-S4-S5: 4AWG - 300kcmil	200	225			
YLAA0090 SE	208	D, M, N	41.7	432	600	S6-600	S6: (2) 250kcmil - 500kcmil	500	500			
	230		36.3	426	600	S6-600	S6: (2) 250kcmil - 500kcmil	500	500			
	380		22.0	271	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300			
	460		18.2	210	250	S4-250	S4: 6AWG - 350kcmil	225	250			
	575		14.5	183	200	S3-225	S3-S4-S5: 4AWG - 300kcmil	200	225			
YLAA0090 SE	208	E	54.7	445	600	S6-600	S6: (2) 250kcmil - 500kcmil	500	500			
	230		49.5	439	600	S6-600	S6: (2) 250kcmil - 500kcmil	500	500			
	380		29.1	278	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300			
	460		24.8	217	250	S4-250	S4: 6AWG - 350kcmil	250	250			
	575		19.8	188	250	S4-250	S4: 6AWG - 350kcmil	225	225			
YLAA0090 SE	208	L	27.1	418	600	S6-600	S6: (2) 250kcmil - 500kcmil	450	500			
	230		24.5	414	600	S6-600	S6: (2) 250kcmil - 500kcmil	450	500			
	380		14.8	263	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300			
	460		12.3	204	250	S4-250	S4: 6AWG - 350kcmil	225	250			
	575		9.8	178	200	S3-225	S3-S4-S5: 4AWG - 300kcmil	200	225			
YLAA0091 HE	208	A, K	15.4	419	600	S6-600	S6: (2) 250kcmil - 500kcmil	450	500			
	230		13.9	417	600	S6-600	S6: (2) 250kcmil - 500kcmil	450	500			
	380		8.1	263	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300			
	460		7.0	207	250	S4-250	S4: 6AWG - 350kcmil	225	250			
	575		5.6	182	200	S3-225	S3-S4-S5: 4AWG - 300kcmil	200	225			
YLAA0091 HE	208	B	21.4	425	600	S6-600	S6: (2) 250kcmil - 500kcmil	500	500			
	230		20.4	423	600	S6-600	S6: (2) 250kcmil - 500kcmil	500	500			
	380		12.0	267	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300			
	460		10.2	211	250	S4-250	S4: 6AWG - 350kcmil	225	250			
	575		8.2	184	200	S3-225	S3-S4-S5: 4AWG - 300kcmil	200	225			
YLAA0091 HE	208	D, M, N	41.7	446	600	S6-600	S6: (2) 250kcmil - 500kcmil	500	500			
	230		36.3	439	600	S6-600	S6: (2) 250kcmil - 500kcmil	500	500			
	380		22.0	277	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300			
	460		18.2	219	250	S4-250	S4: 6AWG - 350kcmil	250	250			
	575		14.5	190	250	S4-250	S4: 6AWG - 350kcmil	225	225			
YLAA0091 HE	208	E	54.7	459	600	S6-600	S6: (2) 250kcmil - 500kcmil	500	500			
	230		49.5	452	600	S6-600	S6: (2) 250kcmil - 500kcmil	500	500			
	380		29.1	284	400	S5-400	S5: (2) 3/0 - 250kcmil	350	350			
	460		24.8	225	250	S4-250	S4: 6AWG - 350kcmil	250	250			
	575		19.8	196	250	S4-250	S4: 6AWG - 350kcmil	225	225			
YLAA0091 HE	208	L	27.1	431	600	S6-600	S6: (2) 250kcmil - 500kcmil	500	500			
	230		24.5	427	600	S6-600	S6: (2) 250kcmil - 500kcmil	500	500			
	380		14.8	270	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300			
	460		12.3	213	250	S4-250	S4: 6AWG - 350kcmil	250	250			
	575		9.8	186	200	S3-225	S3-S4-S5: 4AWG - 300kcmil	200	225			

	SYSTEM # 1									SYSTEM # 2								
	COMPR 1		COMPR 2		COMPR 3		COND FANS			COMPR 1		COMPR 2		COMPR 3		COND FANS		
	RLA	LRA	RLA	LRA	RLA	LRA	QTY	FLA	LRA	RLA	LRA	RLA	LRA	RLA	LRA	QTY	FLA	LRA
	55.8	425	55.8	425	55.8	425	2	7.6	30.9	109.6	599	55.8	425			2	7.6	30.9
	55.8	425	55.8	425	55.8	425	2	7.4	37.0	109.6	599	55.8	425			2	7.4	37.0
	36.0	239	36.0	239	36.0	239	2	4.5	22.3	69.2	358	36.0	239			2	4.5	22.3
	26.9	187	26.9	187	26.9	187	2	4.0	19.0	54.5	310	26.9	187			2	4.0	19.0
	23.7	148	23.7	148	23.7	148	2	2.9	14.6	49.4	239	23.7	148			2	2.9	14.6
	55.8	425	55.8	425	55.8	425	2	7.6	30.9	109.6	599	55.8	425			2	7.6	30.9
	55.8	425	55.8	425	55.8	425	2	7.4	37.0	109.6	599	55.8	425			2	7.4	37.0
	36.0	239	36.0	239	36.0	239	2	4.5	22.3	69.2	358	36.0	239			2	4.5	22.3
	26.9	187	26.9	187	26.9	187	2	4.0	19.0	54.5	310	26.9	187			2	4.0	19.0
	23.7	148	23.7	148	23.7	148	2	2.9	14.6	49.4	239	23.7	148			2	2.9	14.6
	55.8	425	55.8	425	55.8	425	2	7.6	30.9	109.6	599	55.8	425			2	7.6	30.9
	55.8	425	55.8	425	55.8	425	2	7.4	37.0	109.6	599	55.8	425			2	7.4	37.0
	36.0	239	36.0	239	36.0	239	2	4.5	22.3	69.2	358	36.0	239			2	4.5	22.3
	26.9	187	26.9	187	26.9	187	2	4.0	19.0	54.5	310	26.9	187			2	4.0	19.0
	23.7	148	23.7	148	23.7	148	2	2.9	14.6	49.4	239	23.7	148			2	2.9	14.6
	55.8	425	55.8	425	55.8	425	2	7.6	30.9	109.6	599	55.8	425			2	7.6	30.9
	55.8	425	55.8	425	55.8	425	2	7.4	37.0	109.6	599	55.8	425			2	7.4	37.0
	36.0	239	36.0	239	36.0	239	2	4.5	22.3	69.2	358	36.0	239			2	4.5	22.3
	26.9	187	26.9	187	26.9	187	2	4.0	19.0	54.5	310	26.9	187			2	4.0	19.0
	23.7	148	23.7	148	23.7	148	2	2.9	14.6	49.4	239	23.7	148			2	2.9	14.6
	55.8	425	55.8	425	55.8	425	2	7.6	30.9	109.6	599	55.8	425			2	7.6	30.9
	55.8	425	55.8	425	55.8	425	2	7.4	37.0	109.6	599	55.8	425			2	7.4	37.0
	36.0	239	36.0	239	36.0	239	2	4.5	22.3	69.2	358	36.0	239			2	4.5	22.3
	26.9	187	26.9	187	26.9	187	2	4.0	19.0	54.5	310	26.9	187			2	4.0	19.0
	23.7	148	23.7	148	23.7	148	2	2.9	14.6	49.4	239	23.7	148			2	2.9	14.6
	109.6	599	55.8	425			3	7.6	30.9	109.6	599	55.8	425			3	7.6	30.9
	109.6	358	55.8	425			3	7.4	37.0	109.6	599	55.8	425			3	7.4	37.0
	69.2	310	36.0	239			3	4.5	22.3	69.2	358	36.0	239			3	4.5	22.3
	54.5	239	26.9	187			3	4.0	19.0	54.5	310	26.9	187			3	4.0	19.0
	49.4	310	23.7	148			3	2.9	14.6	49.4	239	23.7	148			3	2.9	14.6
	109.6	599	55.8	425			3	7.6	30.9	109.6	599	55.8	425			3	7.6	30.9
	109.6	358	55.8	425			3	7.4	37.0	109.6	599	55.8	425			3	7.4	37.0
	69.2	310	36.0	239			3	4.5	22.3	69.2	358	36.0	239			3	4.5	22.3
	54.5	239	26.9	187			3	4.0	19.0	54.5	310	26.9	187			3	4.0	19.0
	49.4	310	23.7	148			3	2.9	14.6	49.4	239	23.7	148			3	2.9	14.6
	109.6	599	55.8	425			3	7.6	30.9	109.6	599	55.8	425			3	7.6	30.9
	109.6	358	55.8	425			3	7.4	37.0	109.6	599	55.8	425			3	7.4	37.0
	69.2	310	36.0	239			3	4.5	22.3	69.2	358	36.0	239			3	4.5	22.3
	54.5	239	26.9	187			3	4.0	19.0	54.5	310	26.9	187			3	4.0	19.0
	49.4	310	23.7	148			3	2.9	14.6	49.4	239	23.7	148			3	2.9	14.6
	109.6	599	55.8	425			3	7.6	30.9	109.6	599	55.8	425			3	7.6	30.9
	109.6	358	55.8	425			3	7.4	37.0	109.6	599	55.8	425			3	7.4	37.0
	69.2	310	36.0	239			3	4.5	22.3	69.2	358	36.0	239			3	4.5	22.3
	54.5	239	26.9	187			3	4.0	19.0	54.5	310	26.9	187			3	4.0	19.0
	49.4	310	23.7	148			3	2.9	14.6	49.4	239	23.7	148			3	2.9	14.6

ELECTRICAL DATA W/ PUMPS (CONT'D)

CHILLER MODEL	VOLT	PUMP MODEL	PUMP FLA	MIN. CKT AMPS	MIN N/F DISC SW			MIN DUAL ELEM FUSE & MIN CB	MAX DUAL ELEM FUSE & MAX CB			
					RATING	SIZE	LUG					
YLAA0101 HE	208	B, F	21.4	481	600	S6-600	S6: (2) 250kcmil - 500kcmil	600	600			
	230		20.4	479	600	S6-600	S6: (2) 250kcmil - 500kcmil	600	600			
	380		12.0	303	400	S5-400	S5: (2) 3/0 - 250kcmil	350	350			
	460		10.2	238	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300			
	575		8.2	208	250	S4-250	S4: 6AWG - 350kcmil	225	250			
YLAA0101 HE	208	D, O	41.7	501	600	S6-600	S6: (2) 250kcmil - 500kcmil	600	600			
	230		36.3	495	600	S6-600	S6: (2) 250kcmil - 500kcmil	600	600			
	380		22.0	313	400	S5-400	S5: (2) 3/0 - 250kcmil	350	350			
	460		18.2	246	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300			
	575		14.5	214	250	S4-250	S4: 6AWG - 350kcmil	250	250			
YLAA0101 HE	208	E, P	54.7	514	600	S6-600	S6: (2) 250kcmil - 500kcmil	600	600			
	230		49.5	508	600	S6-600	S6: (2) 250kcmil - 500kcmil	600	600			
	380		29.1	320	400	S5-400	S5: (2) 3/0 - 250kcmil	350	350			
	460		24.8	252	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300			
	575		19.8	219	250	S4-250	S4: 6AWG - 350kcmil	250	250			
YLAA0101 HE	208	K	15.4	475	600	S6-600	S6: (2) 250kcmil - 500kcmil	600	600			
	230		13.9	472	600	S6-600	S6: (2) 250kcmil - 500kcmil	500	500			
	380		8.1	299	400	S5-400	S5: (2) 3/0 - 250kcmil	350	350			
	460		7.0	234	400	S5-400	S5: (2) 3/0 - 250kcmil	250	250			
	575		5.6	205	250	S4-250	S4: 6AWG - 350kcmil	225	250			
YLAA0101 HE	208	L	27.1	487	600	S6-600	S6: (2) 250kcmil - 500kcmil	600	600			
	230		24.5	483	600	S6-600	S6: (2) 250kcmil - 500kcmil	600	600			
	380		14.8	306	400	S5-400	S5: (2) 3/0 - 250kcmil	350	350			
	460		12.3	240	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300			
	575		9.8	209	250	S4-250	S4: 6AWG - 350kcmil	225	250			
YLAA0115 YLAA0120 SE	208	F	21.4	533	600	S6-600	S6: (2) 250kcmil - 500kcmil	600	600			
	230		20.4	531	600	S6-600	S6: (2) 250kcmil - 500kcmil	600	600			
	380		12.0	333	400	S5-400	S5: (2) 3/0 - 250kcmil	400	400			
	460		10.2	266	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300			
	575		8.2	236	400	S5-400	S5: (2) 3/0 - 250kcmil	250	250			
YLAA0115 YLAA0120 SE	208	C	32.2	544	600	S6-600	S6: (2) 250kcmil - 500kcmil	600	600			
	230		28.4	539	600	S6-600	S6: (2) 250kcmil - 500kcmil	600	600			
	380		15.4	337	400	S5-400	S5: (2) 3/0 - 250kcmil	400	400			
	460		14.2	270	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300			
	575		11.4	239	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300			
YLAA0115 YLAA0120 SE	208	D, M, N	41.7	553	800	S6-800	S6: (3) 2/0 - 4000kcmil	600	600			
	230		36.3	547	600	S6-600	S6: (2) 250kcmil - 500kcmil	600	600			
	380		22.0	343	400	S5-400	S5: (2) 3/0 - 250kcmil	400	400			
	460		18.2	274	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300			
	575		14.5	242	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300			
YLAA0115 YLAA0120 SE	208	E, P	54.7	566	800	S6-800	S6: (3) 2/0 - 4000kcmil	600	600			
	230		49.5	560	800	S6-800	S6: (3) 2/0 - 4000kcmil	600	600			
	380		29.1	350	400	S5-400	S5: (2) 3/0 - 250kcmil	400	400			
	460		24.8	280	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300			
	575		19.8	247	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300			
YLAA0115 YLAA0120 SE	208	K	15.4	527	600	S6-600	S6: (2) 250kcmil - 500kcmil	600	600			
	230		13.9	524	600	S6-600	S6: (2) 250kcmil - 500kcmil	600	600			
	380		8.1	329	400	S5-400	S5: (2) 3/0 - 250kcmil	350	350			
	460		7.0	263	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300			
	575		5.6	233	400	S5-400	S5: (2) 3/0 - 250kcmil	250	250			

	SYSTEM # 1									SYSTEM # 2								
	COMPR 1		COMPR 2		COMPR 3		COND FANS			COMPR 1		COMPR 2		COMPR 3		COND FANS		
	RLA	LRA	RLA	LRA	RLA	LRA	QTY	FLA	LRA	RLA	LRA	RLA	LRA	RLA	LRA	QTY	FLA	LRA
	55.8	425	55.8	425	55.8	425	2	7.6	30.9	109.6	599	109.6	599			4	7.6	30.9
	55.8	425	55.8	425	55.8	425	2	7.4	37.0	109.6	599	109.6	599			4	7.4	37.0
	36.0	239	36.0	239	36.0	239	2	4.5	22.3	69.2	358	69.2	358			4	4.5	22.3
	26.9	187	26.9	187	26.9	187	2	4.0	19.0	54.5	310	54.5	310			4	4.0	19.0
	23.7	148	23.7	148	23.7	148	2	2.9	14.6	49.4	239	49.4	239			4	2.9	14.6
	55.8	425	55.8	425	55.8	425	2	7.6	30.9	109.6	599	109.6	599			4	7.6	30.9
	55.8	425	55.8	425	55.8	425	2	7.4	37.0	109.6	599	109.6	599			4	7.4	37.0
	36.0	239	36.0	239	36.0	239	2	4.5	22.3	69.2	358	69.2	358			4	4.5	22.3
	26.9	187	26.9	187	26.9	187	2	4.0	19.0	54.5	310	54.5	310			4	4.0	19.0
	23.7	148	23.7	148	23.7	148	2	2.9	14.6	49.4	239	49.4	239			4	2.9	14.6
	55.8	425	55.8	425	55.8	425	2	7.6	30.9	109.6	599	109.6	599			4	7.6	30.9
	55.8	425	55.8	425	55.8	425	2	7.4	37.0	109.6	599	109.6	599			4	7.4	37.0
	36.0	239	36.0	239	36.0	239	2	4.5	22.3	69.2	358	69.2	358			4	4.5	22.3
	26.9	187	26.9	187	26.9	187	2	4.0	19.0	54.5	310	54.5	310			4	4.0	19.0
	23.7	148	23.7	148	23.7	148	2	2.9	14.6	49.4	239	49.4	239			4	2.9	14.6
	55.8	425	55.8	425	55.8	425	2	7.6	30.9	109.6	599	109.6	599			4	7.6	30.9
	55.8	425	55.8	425	55.8	425	2	7.4	37.0	109.6	599	109.6	599			4	7.4	37.0
	36.0	239	36.0	239	36.0	239	2	4.5	22.3	69.2	358	69.2	358			4	4.5	22.3
	26.9	187	26.9	187	26.9	187	2	4.0	19.0	54.5	310	54.5	310			4	4.0	19.0
	23.7	148	23.7	148	23.7	148	2	2.9	14.6	49.4	239	49.4	239			4	2.9	14.6
	55.8	425	55.8	425	55.8	425	2	7.6	30.9	109.6	599	109.6	599			4	7.6	30.9
	55.8	425	55.8	425	55.8	425	2	7.4	37.0	109.6	599	109.6	599			4	7.4	37.0
	36.0	239	36.0	239	36.0	239	2	4.5	22.3	69.2	358	69.2	358			4	4.5	22.3
	26.9	187	26.9	187	26.9	187	2	4.0	19.0	54.5	310	54.5	310			4	4.0	19.0
	23.7	148	23.7	148	23.7	148	2	2.9	14.6	49.4	239	49.4	239			4	2.9	14.6
	109.6	599	109.6	599			3	7.6	30.9	109.6	599	109.6	599			3	7.6	30.9
	109.6	599	109.6	599			3	7.4	37.0	109.6	599	109.6	599			3	7.4	37.0
	69.2	358	69.2	358			3	4.5	22.3	69.2	358	69.2	358			3	4.5	22.3
	54.5	310	54.5	310			3	4.0	19.0	54.5	310	54.5	310			3	4.0	19.0
	49.4	239	49.4	239			3	2.9	14.6	49.4	239	49.4	239			3	2.9	14.6
	109.6	599	109.6	599			3	7.6	30.9	109.6	599	109.6	599			3	7.6	30.9
	109.6	599	109.6	599			3	7.4	37.0	109.6	599	109.6	599			3	7.4	37.0
	69.2	358	69.2	358			3	4.5	22.3	69.2	358	69.2	358			3	4.5	22.3
	54.5	310	54.5	310			3	4.0	19.0	54.5	310	54.5	310			3	4.0	19.0
	49.4	239	49.4	239			3	2.9	14.6	49.4	239	49.4	239			3	2.9	14.6
	109.6	599	109.6	599			3	7.6	30.9	109.6	599	109.6	599			3	7.6	30.9
	109.6	599	109.6	599			3	7.4	37.0	109.6	599	109.6	599			3	7.4	37.0
	69.2	358	69.2	358			3	4.5	22.3	69.2	358	69.2	358			3	4.5	22.3
	54.5	310	54.5	310			3	4.0	19.0	54.5	310	54.5	310			3	4.0	19.0
	49.4	239	49.4	239			3	2.9	14.6	49.4	239	49.4	239			3	2.9	14.6
	109.6	599	109.6	599			3	7.6	30.9	109.6	599	109.6	599			3	7.6	30.9
	109.6	599	109.6	599			3	7.4	37.0	109.6	599	109.6	599			3	7.4	37.0
	69.2	358	69.2	358			3	4.5	22.3	69.2	358	69.2	358			3	4.5	22.3
	54.5	310	54.5	310			3	4.0	19.0	54.5	310	54.5	310			3	4.0	19.0
	49.4	239	49.4	239			3	2.9	14.6	49.4	239	49.4	239			3	2.9	14.6

ELECTRICAL DATA W/ PUMPS (CONT'D)

CHILLER MODEL	VOLT	PUMP MODEL	PUMP FLA	MIN. CKT AMPS	MIN N/F DISC SW			MIN DUAL ELEM FUSE & MIN CB	MAX DUAL ELEM FUSE & MAX CB				
					RATING	SIZE	LUG						
YLAA0115 SE	208	L	27.1	539	600	S6-600	S6: (2) 250kcmil - 500kcmil	600	600				
	230		24.5	535	600	S6-600	S6: (2) 250kcmil - 500kcmil	600	600				
	380		14.8	336	400	S5-400	S5: (2) 3/0 - 250kcmil	400	400				
	460		12.3	268	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300				
	575		9.8	237	400	S5-400	S5: (2) 3/0 - 250kcmil	250	250				
YLAA0135 SE	208	F	21.4	604	800	S6-800	S6: (3) 2/0 - 4000kcmil	700	700				
	230		20.4	601	800	S6-800	S6: (3) 2/0 - 4000kcmil	700	700				
	380		12.0	378	600	S6-600	S6: (2) 250kcmil - 500kcmil	400	400				
	460		10.2	301	400	S5-400	S5: (2) 3/0 - 250kcmil	350	350				
	575		8.2	265	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300				
YLAA0135 SE	208	C	32.2	615	800	S6-800	S6: (3) 2/0 - 4000kcmil	700	700				
	230		28.4	609	800	S6-800	S6: (3) 2/0 - 4000kcmil	700	700				
	380		15.4	382	600	S6-600	S6: (2) 250kcmil - 500kcmil	400	450				
	460		14.2	305	400	S5-400	S5: (2) 3/0 - 250kcmil	350	350				
	575		11.4	268	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300				
YLAA0135 SE	208	D, M, N	41.7	624	800	S6-800	S6: (3) 2/0 - 4000kcmil	700	700				
	230		36.3	617	800	S6-800	S6: (3) 2/0 - 4000kcmil	700	700				
	380		22.0	388	600	S6-600	S6: (2) 250kcmil - 500kcmil	450	450				
	460		18.2	309	400	S5-400	S5: (2) 3/0 - 250kcmil	350	350				
	575		14.5	271	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300				
YLAA0135 SE	208	E, R	54.7	637	800	S6-800	S6: (3) 2/0 - 4000kcmil	700	700				
	230		49.5	630	800	S6-800	S6: (3) 2/0 - 4000kcmil	700	700				
	380		29.1	395	600	S6-600	S6: (2) 250kcmil - 500kcmil	450	450				
	460		24.8	315	400	S5-400	S5: (2) 3/0 - 250kcmil	350	350				
	575		19.8	277	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300				
YLAA0135 SE	208	K	15.4	598	800	S6-800	S6: (3) 2/0 - 4000kcmil	700	700				
	230		13.9	595	800	S6-800	S6: (3) 2/0 - 4000kcmil	700	700				
	380		8.1	374	600	S6-600	S6: (2) 250kcmil - 500kcmil	400	400				
	460		7.0	297	400	S5-400	S5: (2) 3/0 - 250kcmil	350	350				
	575		5.6	262	400	S5-400	S5: (2) 3/0 - 250kcmil	300	300				
YLAA0150 YLAA0155 SE	208	G	32.2	668	800	S6-800	S6: (3) 2/0 - 4000kcmil	700	700				
	230		28.4	663	800	S6-800	S6: (3) 2/0 - 4000kcmil	700	700				
	380		15.4	415	600	S6-600	S6: (2) 250kcmil - 500kcmil	450	450				
	460		14.2	332	400	S5-400	S5: (2) 3/0 - 250kcmil	350	350				
	575		11.4	294	400	S5-400	S5: (2) 3/0 - 250kcmil	350	350				
YLAA0150 YLAA0155 SE	208	H, L	27.1	663	800	S6-800	S6: (3) 2/0 - 4000kcmil	700	700				
	230		24.5	659	800	S6-800	S6: (3) 2/0 - 4000kcmil	700	700				
	380		14.8	414	600	S6-600	S6: (2) 250kcmil - 500kcmil	450	450				
	460		12.3	330	400	S5-400	S5: (2) 3/0 - 250kcmil	350	350				
	575		9.8	292	400	S5-400	S5: (2) 3/0 - 250kcmil	350	350				
YLAA0150 YLAA0155 SE	208	I, M	41.7	678	800	S6-800	S6: (3) 2/0 - 4000kcmil	800	800				
	230		36.3	671	800	S6-800	S6: (3) 2/0 - 4000kcmil	700	700				
	380		22.0	421	600	S6-600	S6: (2) 250kcmil - 500kcmil	450	450				
	460		18.2	336	400	S5-400	S5: (2) 3/0 - 250kcmil	350	350				
	575		14.5	297	400	S5-400	S5: (2) 3/0 - 250kcmil	350	350				
YLAA0150 YLAA0155 SE	208	J, R	54.7	691	800	S6-800	S6: (3) 2/0 - 4000kcmil	800	800				
	230		49.5	684	800	S6-800	S6: (3) 2/0 - 4000kcmil	800	800				
	380		29.1	428	600	S6-600	S6: (2) 250kcmil - 500kcmil	450	450				
	460		24.8	343	400	S5-400	S5: (2) 3/0 - 250kcmil	400	400				
	575		19.8	302	400	S5-400	S5: (2) 3/0 - 250kcmil	350	350				

	SYSTEM # 1									SYSTEM # 2								
	COMPR 1		COMPR 2		COMPR 3		COND FANS			COMPR 1		COMPR 2		COMPR 3		COND FANS		
	RLA	LRA	RLA	LRA	RLA	LRA	QTY	FLA	LRA	RLA	LRA	RLA	LRA	RLA	LRA	QTY	FLA	LRA
	109.6	599	109.6	599			3	7.6	30.9	109.6	599	109.6	599			3	7.6	30.9
	109.6	599	109.6	599			3	7.4	37.0	109.6	599	109.6	599			3	7.4	37.0
	69.2	358	69.2	358			3	4.5	22.3	69.2	358	69.2	358			3	4.5	22.3
	54.5	310	54.5	310			3	4.0	19.0	54.5	310	54.5	310			3	4.0	19.0
	49.4	239	49.4	239			3	2.9	14.6	49.4	239	49.4	239			3	2.9	14.6
	109.6	599	109.6	599	109.6	599	4	7.6	30.9	109.6	599	55.8	425			4	7.6	30.9
	109.6	599	109.6	599	109.6	599	4	7.4	37.0	109.6	599	55.8	425			4	7.4	37.0
	69.2	358	69.2	358	69.2	358	4	4.5	22.3	69.2	358	36.0	239			4	4.5	22.3
	54.5	310	54.5	310	54.5	310	4	4.0	19.0	54.5	310	26.9	187			4	4.0	19.0
	49.4	239	49.4	239	49.4	239	4	2.9	14.6	49.4	239	23.7	148			4	2.9	14.6
	109.6	599	109.6	599	109.6	599	4	7.6	30.9	109.6	599	55.8	425			4	7.6	30.9
	109.6	599	109.6	599	109.6	599	4	7.4	37.0	109.6	599	55.8	425			4	7.4	37.0
	69.2	358	69.2	358	69.2	358	4	4.5	22.3	69.2	358	36.0	239			4	4.5	22.3
	54.5	310	54.5	310	54.5	310	4	4.0	19.0	54.5	310	26.9	187			4	4.0	19.0
	49.4	239	49.4	239	49.4	239	4	2.9	14.6	49.4	239	23.7	148			4	2.9	14.6
	109.6	599	109.6	599	109.6	599	4	7.6	30.9	109.6	599	55.8	425			4	7.6	30.9
	109.6	599	109.6	599	109.6	599	4	7.4	37.0	109.6	599	55.8	425			4	7.4	37.0
	69.2	358	69.2	358	69.2	358	4	4.5	22.3	69.2	358	36.0	239			4	4.5	22.3
	54.5	310	54.5	310	54.5	310	4	4.0	19.0	54.5	310	26.9	187			4	4.0	19.0
	49.4	239	49.4	239	49.4	239	4	2.9	14.6	49.4	239	23.7	148			4	2.9	14.6
	109.6	599	109.6	599	109.6	599	4	7.6	30.9	109.6	599	55.8	425			4	7.6	30.9
	109.6	599	109.6	599	109.6	599	4	7.4	37.0	109.6	599	55.8	425			4	7.4	37.0
	69.2	358	69.2	358	69.2	358	4	4.5	22.3	69.2	358	36.0	239			4	4.5	22.3
	54.5	310	54.5	310	54.5	310	4	4.0	19.0	54.5	310	26.9	187			4	4.0	19.0
	49.4	239	49.4	239	49.4	239	4	2.9	14.6	49.4	239	23.7	148			4	2.9	14.6
	109.6	599	109.6	599	109.6	599	4	7.6	30.9	109.6	599	109.6	599			4	7.6	30.9
	109.6	599	109.6	599	109.6	599	4	7.4	37.0	109.6	599	109.6	599			4	7.4	37.0
	69.2	358	69.2	358	69.2	358	4	4.5	22.3	69.2	358	69.2	358			4	4.5	22.3
	54.5	310	54.5	310	54.5	310	4	4.0	19.0	54.5	310	54.5	310			4	4.0	19.0
	49.4	239	49.4	239	49.4	239	4	2.9	14.6	49.4	239	49.4	239			4	2.9	14.6
	109.6	599	109.6	599	109.6	599	4	7.6	30.9	109.6	599	109.6	599			4	7.6	30.9
	109.6	599	109.6	599	109.6	599	4	7.4	37.0	109.6	599	109.6	599			4	7.4	37.0
	69.2	358	69.2	358	69.2	358	4	4.5	22.3	69.2	358	69.2	358			4	4.5	22.3
	54.5	310	54.5	310	54.5	310	4	4.0	19.0	54.5	310	54.5	310			4	4.0	19.0
	49.4	239	49.4	239	49.4	239	4	2.9	14.6	49.4	239	49.4	239			4	2.9	14.6
	109.6	599	109.6	599	109.6	599	4	7.6	30.9	109.6	599	109.6	599			4	7.6	30.9
	109.6	599	109.6	599	109.6	599	4	7.4	37.0	109.6	599	109.6	599			4	7.4	37.0
	69.2	358	69.2	358	69.2	358	4	4.5	22.3	69.2	358	69.2	358			4	4.5	22.3
	54.5	310	54.5	310	54.5	310	4	4.0	19.0	54.5	310	54.5	310			4	4.0	19.0
	49.4	239	49.4	239	49.4	239	4	2.9	14.6	49.4	239	49.4	239			4	2.9	14.6

ELECTRICAL NOTES AND LEGEND


DESIGNATION	DESCRIPTION
ACC	ACCESSORY
- ADIS	DISPLAY BOARD
- AMB	MICRO BOARD
- BAMB	AMBIENT
- BDAT	DISCHARGE AIR TEMPERATURE
- BDP	DISCHARGE PRESSURE
- BECT	ENTRING CHILLED TEMPERATURE
- BLCT	LEAVING CHILLED TEMPERATURE NOT FITTED ON REMOTE EVAP UNITS
-BMP	MOTOR PROTECTOR COMPRESSOR
- BSP	SUCTION PRESSURE
- CPF	CAPACITOR POWER FACTOR
- ECH	CRANKCASE HEATER
- EEH	EVAPORATOR HEATER
- EHRH	HEAT RECOVERY HEATER
- EPH	PUMP HEATER
- EXT	EXTERNAL TO CONTROL PANEL
- F	FUSE
- FHP	HIGH PRESSURE CUTOOUT
- FSC	FAN SPEED CONTROLLER
- FSI	FAN SPEED INHIBIT TWO SPEED FAN OPTION ONLY
GND	GROUND
G/Y	GREEN / YELLOW
J	PLUG BOARD CONNECTOR
- K	CIRCUIT BOARD RELAY
- KF	FAN CONTACTOR LINE (INCLUDING COIL SUPPRESSOR)
- KFH	FAN CONTACTOR HIGH SPEED (INCLUDING COIL SUPPRESSOR)
- KFL	FAN CONTACTOR LOW SPEED (INCLUDING COIL SUPPRESSOR)
- KFOL	FAN OVERLOAD
- KFS	RELAY FAN SPEED
- KH	HEATER RELAY
- KM	COMPRESSOR CONTACTOR (INCLUD- ING COIL SUPPRESSOR)
- KCR	CONTROL RELAY
- KP	PUMP CONTACTOR PART (INCLUDING COIL SUPPRESSOR)
- KT	RELAY TIMER
- M	COMPRESSOR MOTOR

DESIGNATION	DESCRIPTION
- MF	MOTOR FAN
- MP	MOTOR PUMP
NU	NOT USED
PE	PROTECTIVE EARTH
PWM	PULSE WIDTH MODULATION TEMP RE- SET or REMOTE UNLOAD 2nd STEP
- QCB	CIRCUIT BREAKER
- QMMSC	MANUAL MOTOR STARTER COMPRESSOR
- QMMSP	MANUAL MOTOR STARTER PUMP
- QSD	SWITCH DISCONNECT
R	RESISTOR
RED	RED
RP	RUN PERMISSIVE
RU	REMOTE UNLOAD 1st STEP
SCH	THERMOSTAT CRANKCASE HEATER
SCR	SCREEN
- SF	FLOW SWITCH
- SKP	KEYPAD
- SOA	SWITCH OFF AUTO
- SZT	ZONE THERMOSTAT
- T	TRANSFORMER
- TC	TRANSFORMER CURRENT
- UBR	BRIDGE RECTIFIER
- WHT	WHITE
- XP	PLUGS BETWEEN POW./MICROBOARD. SECTION
- XTBC	TERMINAL BLOCK CUSTOMER
- XTBF	TERMINAL BLOCK FACTORY
- YESV	EVAPORATOR SOLENOID VALVE
- YHGSV	HOT GAS SOLENOID VALVE (INCLUDING COIL SUPPRESSOR)
- YLLSV	LIQUID LINE SOLENOID VALVE FIELD MOUNTED AND WIRED ON REMOTE EVAP. UNITS
- ZCPR	COMPRESSOR
(NB)	NOTE WELL {SEE NOTE}
— • — • — • — •	WIRING AND ITEMS SHOWN THUS ARE STANDARD YORK ACCESSORIES
— • • • — • • •	WIRING AND ITEMS SHOWN THUS ARE NOT SUPPLIED BY YORK
— — —	ITEMS THUS ENCLOSED FORM A COM- PONENTS OR SETS OF COMPONENTS

035-21966-101 REVG

ELECTRICAL NOTES AND LEGEND (CONT'D)

035-21966-101 REV G

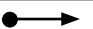GENERAL	
A.	This drawing is based on IEC symbols.
B.	Field wiring to be in accordance with the relevant electrical code as well as all other applicable codes and specifications.
C.	All sources of supply shown on this diagram to be taken from one main isolator, not shown or supplied by YORK.
D.	Green and yellow wire is used for earth, multi-colored cable used for low voltage. Red wire used for AC Control, blue wire for neutral, black wire for AC and DC power. Orange wire should be used for interlock control wiring supplied by external source.
E.	Legend designation depicts component abbreviations. Number prefix located, if applicable, on schematic circuit, refers to system thereon, E.G. = 1-FHP2 refers to high pressure cutout no 2 on system no 1.
F.	All wiring to control section voltage free contacts requires a supply provided by the customer maximum voltage 120 volts. The customer must take particular care when deriving the supplies for the voltage free terminals with regard to a common point of isolation. Thus, these circuits when used must be fed via the common point of isolation the voltage to these circuits is removed when the common point of isolation to the unit is opened. This common point of isolation is not supplied by YORK. The YORK voltage free contacts are rated at 100va. All inductive devices {relays} switch by the YORK voltage free contacts must have their coil suppressed using standard R/C suppressors.
G.	Customer voltage free contacts connected to terminal 13 must be rated at 30V 5ma.
H.	No controls {relays etc.} Should be mounted in any section of the control panel. Additionally, control wiring not connected to the YORK control panel should not be run through the panel. If these precautions are not followed, electrical noise could cause malfunctions or damage to the unit and its controls.
I.	 120/14.3 - (Signal IN/OUT) i.e. 120 is wire # and 14.3 refers to SHT. 14 column 3.
Notes	
1	Refer to installation commissioning operation and maintenance manual for customer connections and customer connection notes, non compliance to these instructions will invalidate unit warranty.
2	Wiring and components for compressor 3 only fitted when unit has 3 compressors on the system. 1-BMP3 is replaced by a link across terminals 134 & 135. 2-BMP3 is replaced by a link across terminals 234 & 235.
3	
4	Fitted on units with hot gas bypass option.
5	EMS option is wired as shown.
6	This wiring must be used for old display 031-0110-000.
7	Network connection point.
8	Printer port.
9	Remote emergency stop can be wired between terminal I and 5 after removing link.
10	Power factor correction accessory. Power factor correction fitted to each compressor contactor.
11	Not fitted on compressors with internal motor protection. For system 1 terminals 132 & 133, 133 & 134 and 134 & 135 are linked. For system 2 terminals 232 & 233, 233 & 234 and 234 & 235 are linked.
12	Only fitted on systems with 3 or 4 fans.
13	Only fitted on systems with 4 fans.
14	Only fitted on systems with 5 fans.
15	Only fitted on systems with 6 fans.
16	Input switch disconnect (standard on CE units) or circuit breaker option replaces input terminal block.
17	Input switch disconnect & individual system circuit breaker option replaces input terminal block.
18	115V control circuit requires a 115V supply unless control circuit transformer -T2 & -F3 are fitted (standard on CE units).
19	For optional hydro kit. Heater -EPH is fitted and wired as shown. On single pump -KP1, -QMMSP1 & -MP1 are fitted & wired as shown. On two pump hydro kits -KP2, -QMMSP2 & -MP2 are also fitted and wired as shown.
20	Current measurement option wired as show.
21	Only fitted on systems with single speed fans.

ELECTRICAL NOTES AND LEGEND (CONT'D)

22	Only fitted on systems with two speed fans.
23	Optional compressor manual motors starters (standard on CE units).
24	See sheet 3 of connection diagram for power input options.
25	Alternate connections shown for different two speed motor types.
26	Only fitted on systems with a maximum of 4 fans.
27	220/230V units require a separate fuse for units w/4 or more fans per system.
28	Low ambient kit -FSC for fan -MF1 is only fitted on systems with less than 4 fans.
29	Only fitted on YLAA0091.
30	Only fitted on YLAA0090, 0091 & 0135.
31	Input dual point circuit breaker option replaces input terminal block.
32	Field installed on remote evaporator units.
33	Fitted on units with single phase motors only.
34	Fitted on units with low ambient option only.
35	Only fitted on units with an acoustic kit.
36	Only fitted on heat recovery units.
37	Only fitted on condensing units.
38	Omitted on condensing units.

THIS PAGE INTENTIONALLY LEFT BLANK

WIRING DIAGRAMS ELEMENTARY WIRING DIAGRAMS

035-21583-101 REV D

SEE SHT. 035-21583-116 FOR SINGLE/DUAL POINT WIRING OPTIONS


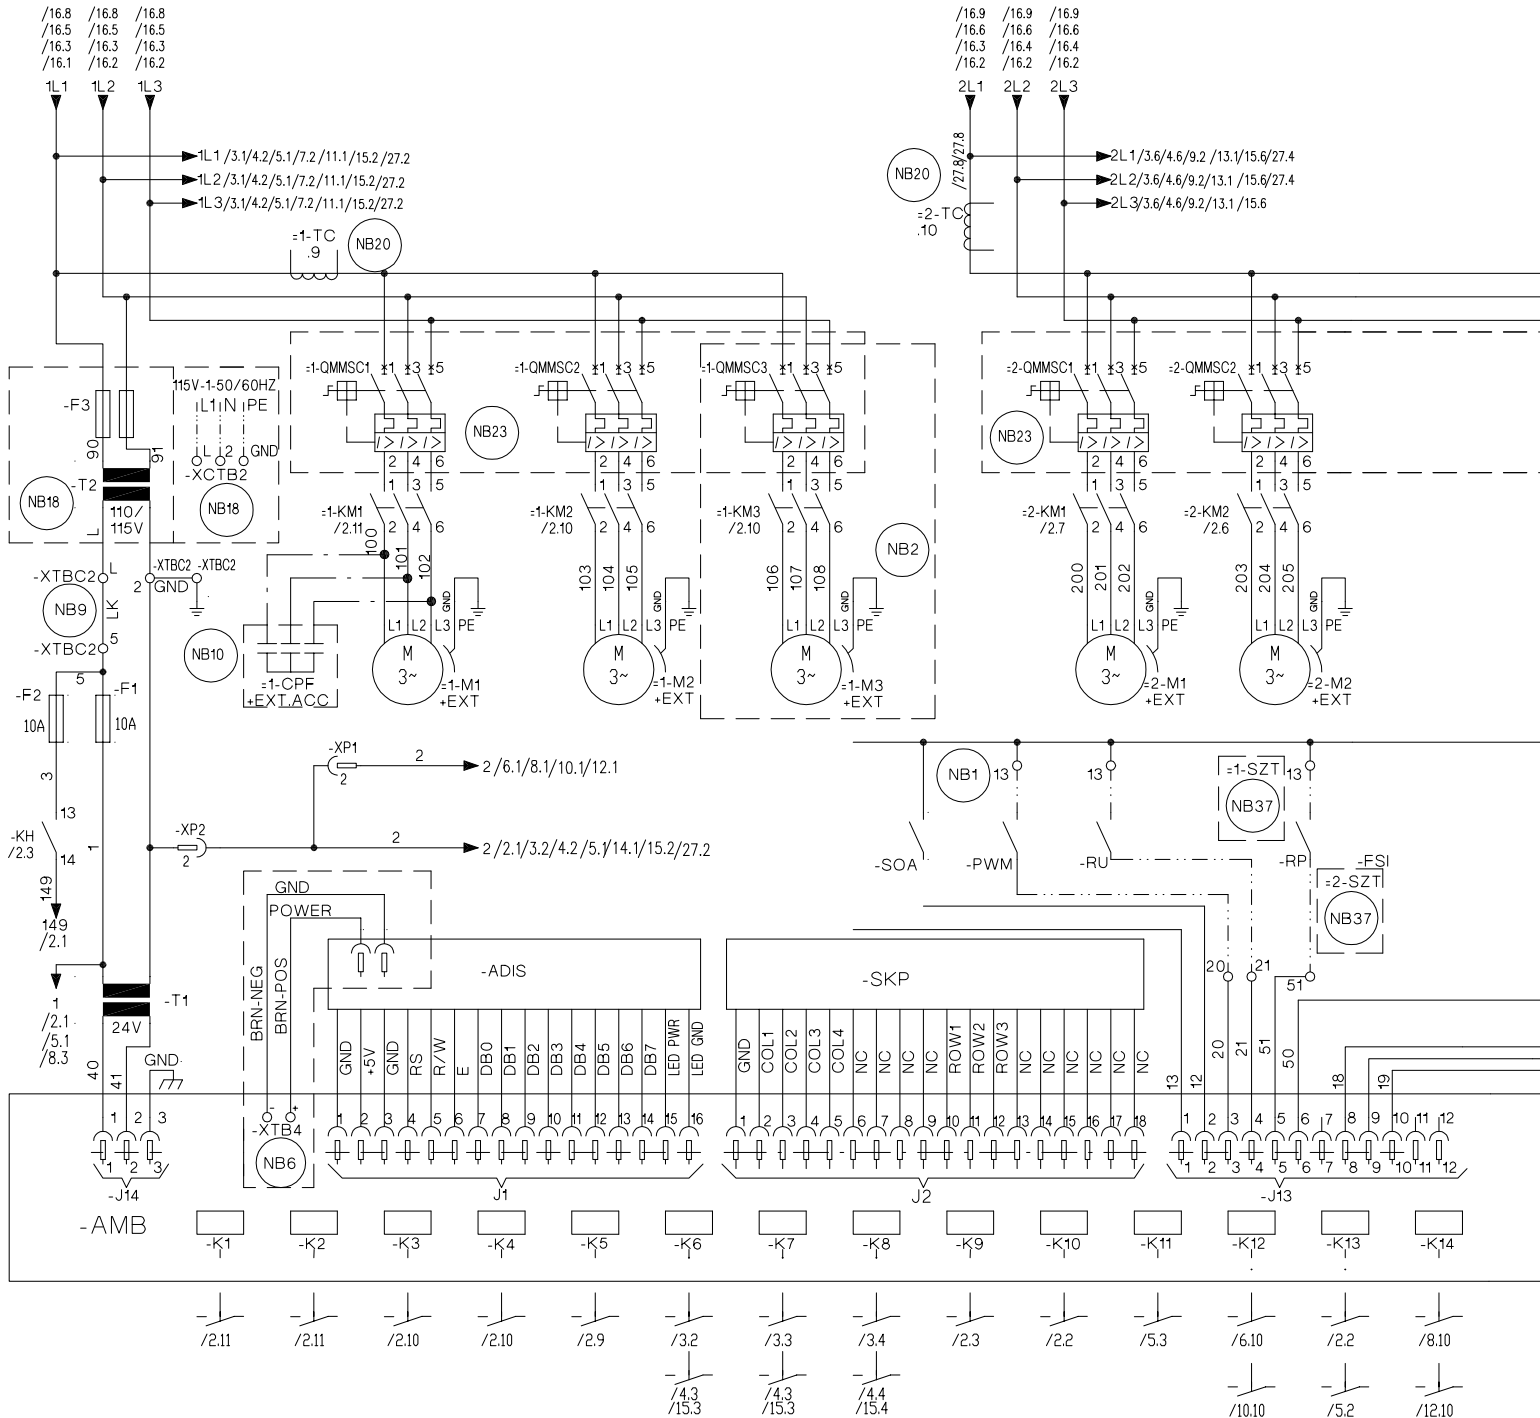


FIG. 12 – ELEMENTARY WIRING DIAGRAM, SHT 1

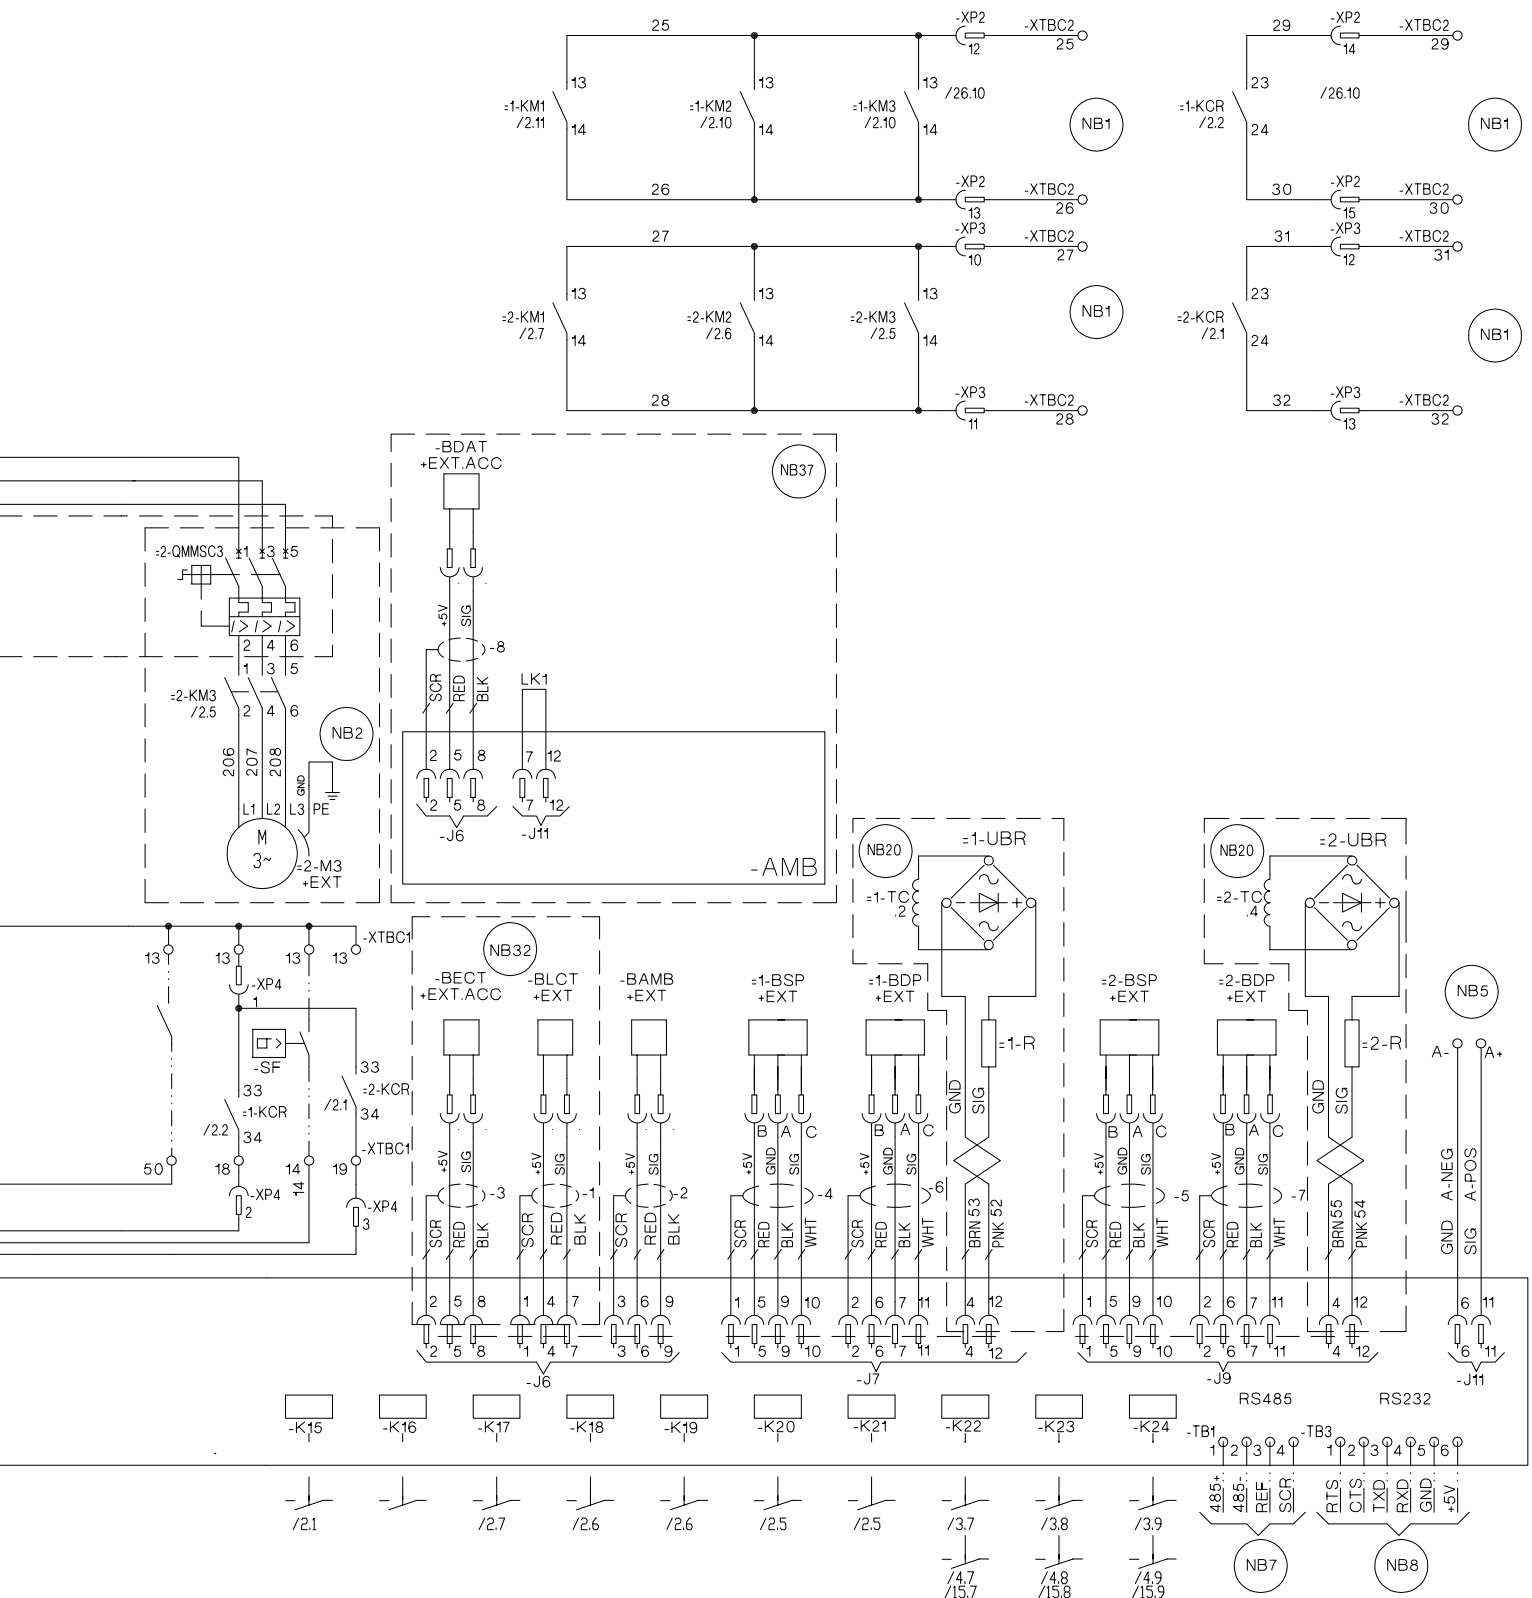

ELEMENTARY WIRING DIAGRAMS (CONT'D)

035-21583-102 REV D


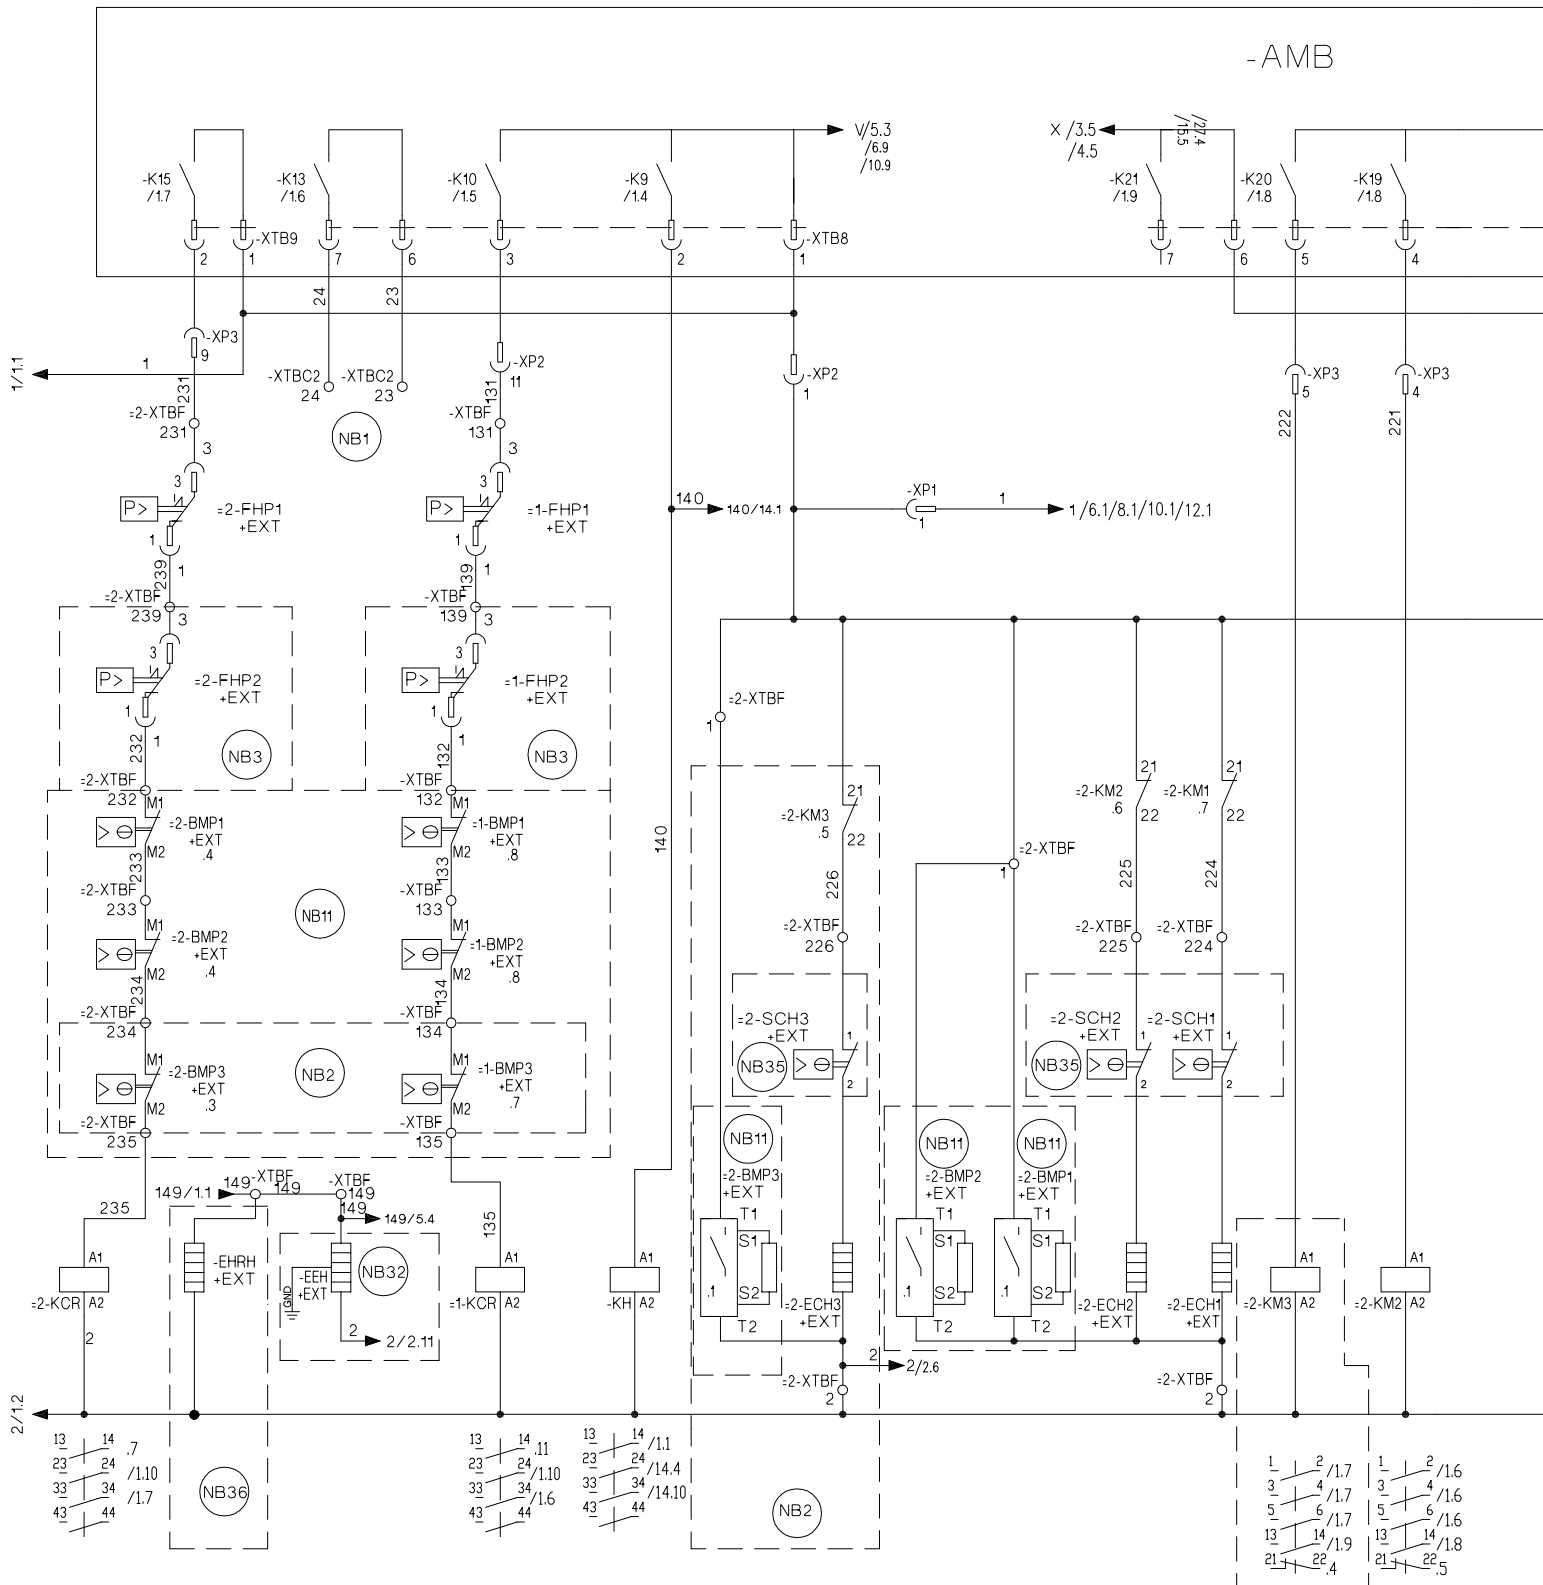


FIG. 13 – ELEMENTARY WIRING DIAGRAM, SHT 2

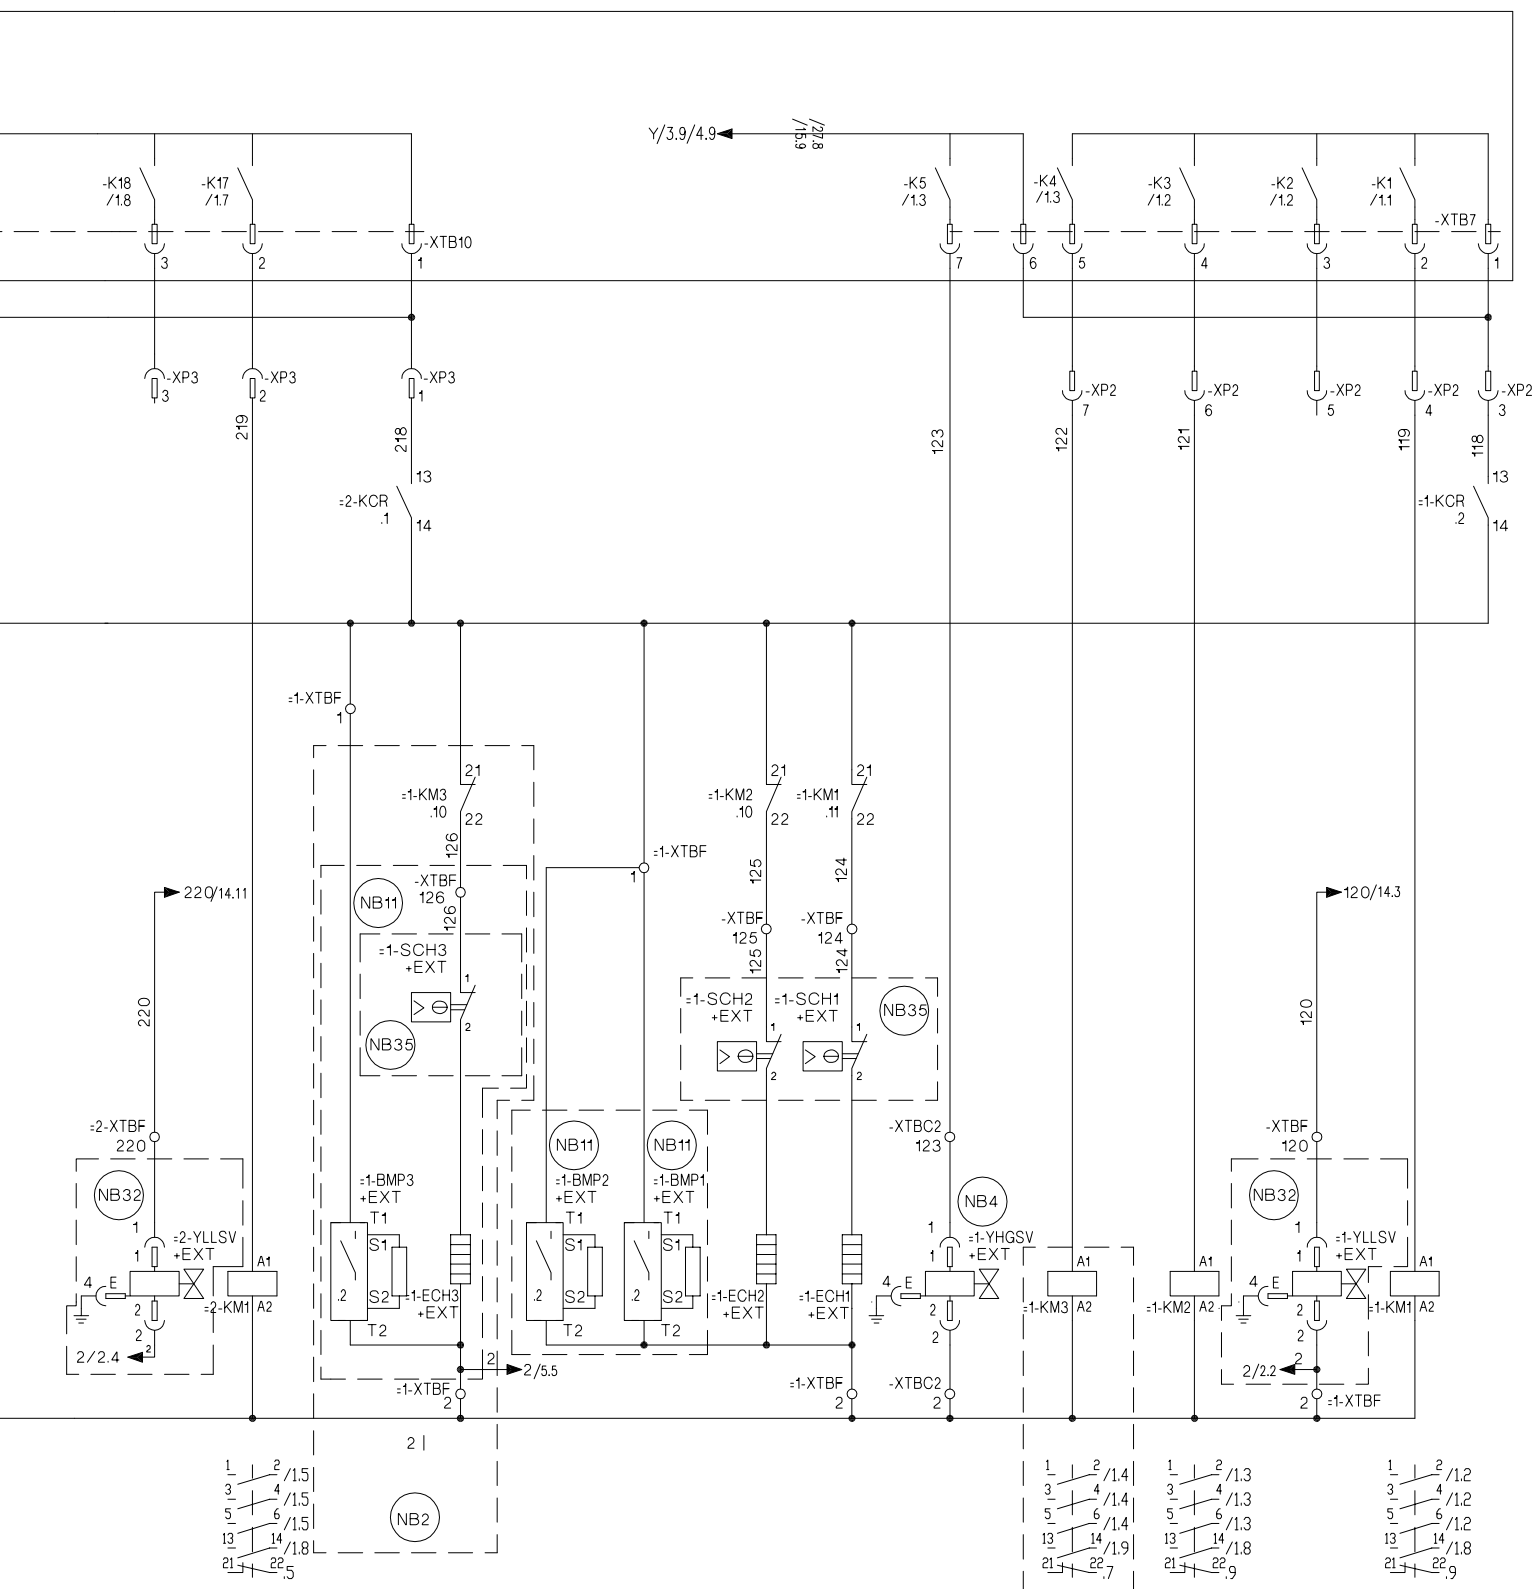

FAN WIRING

035-21583-103 REV B




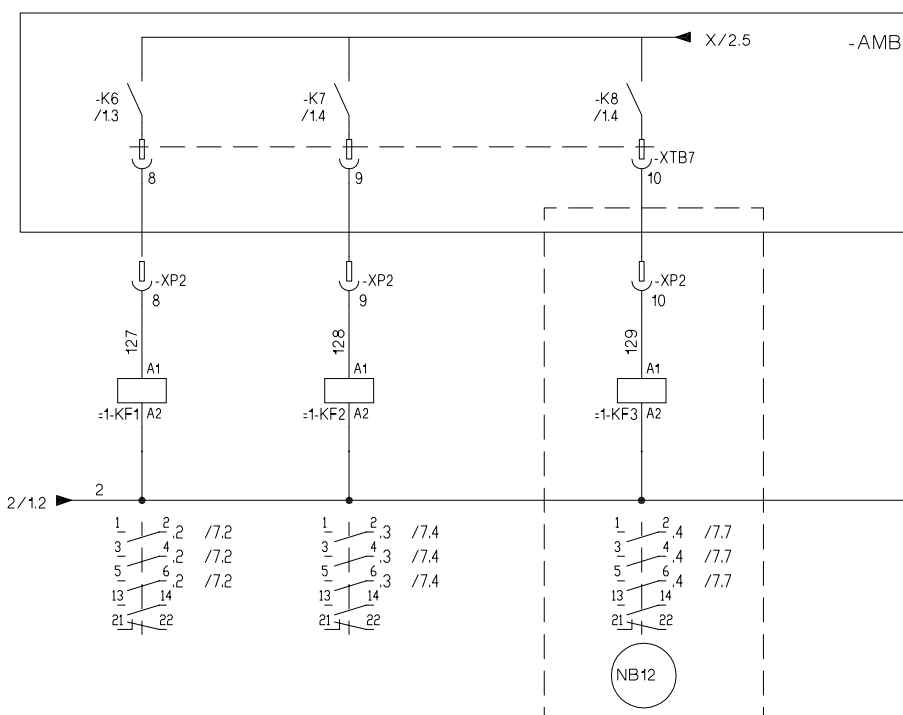


FIG. 14 – ELEMENTARY WIRING DIAGRAM, SHT 3

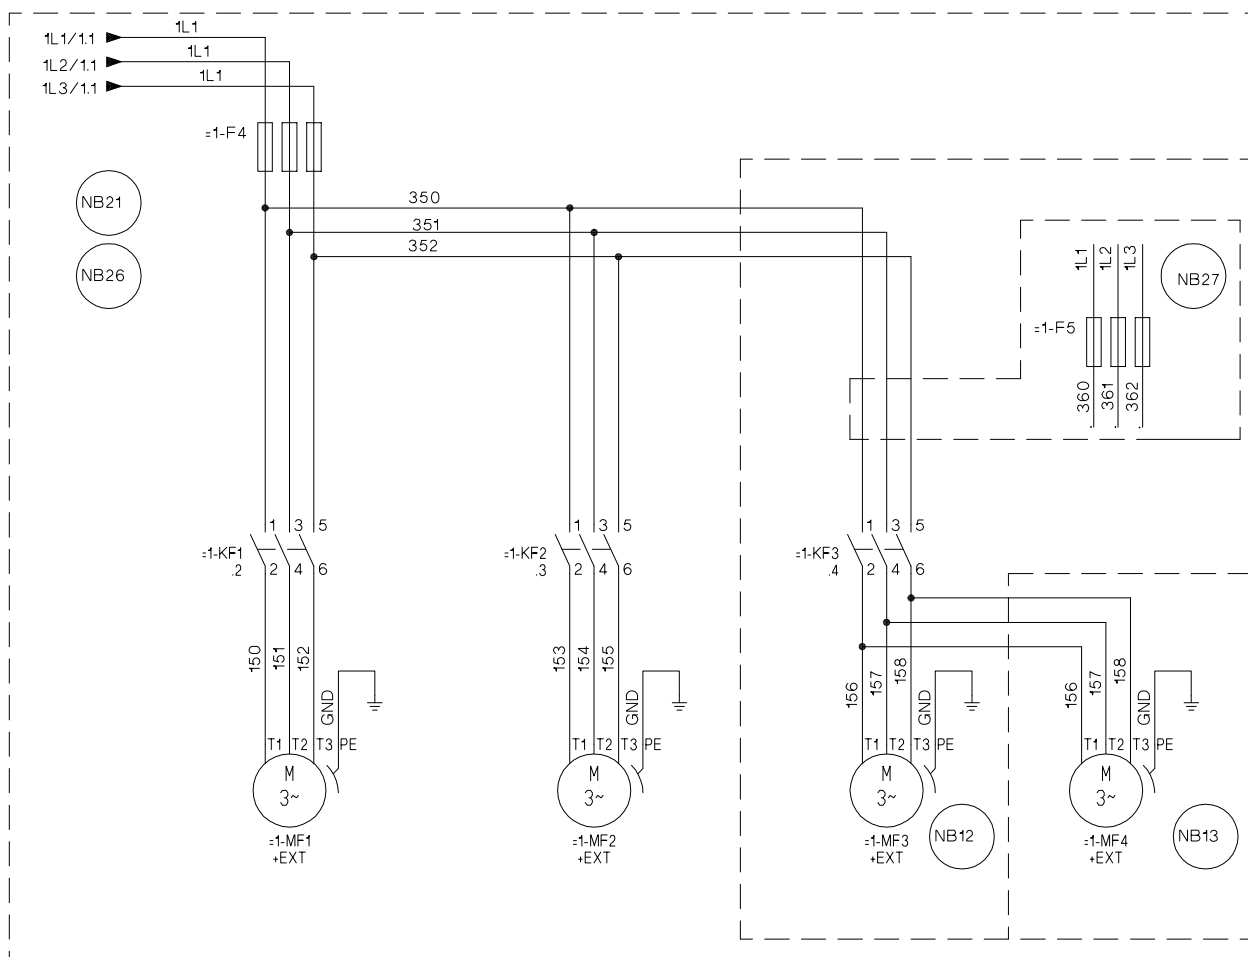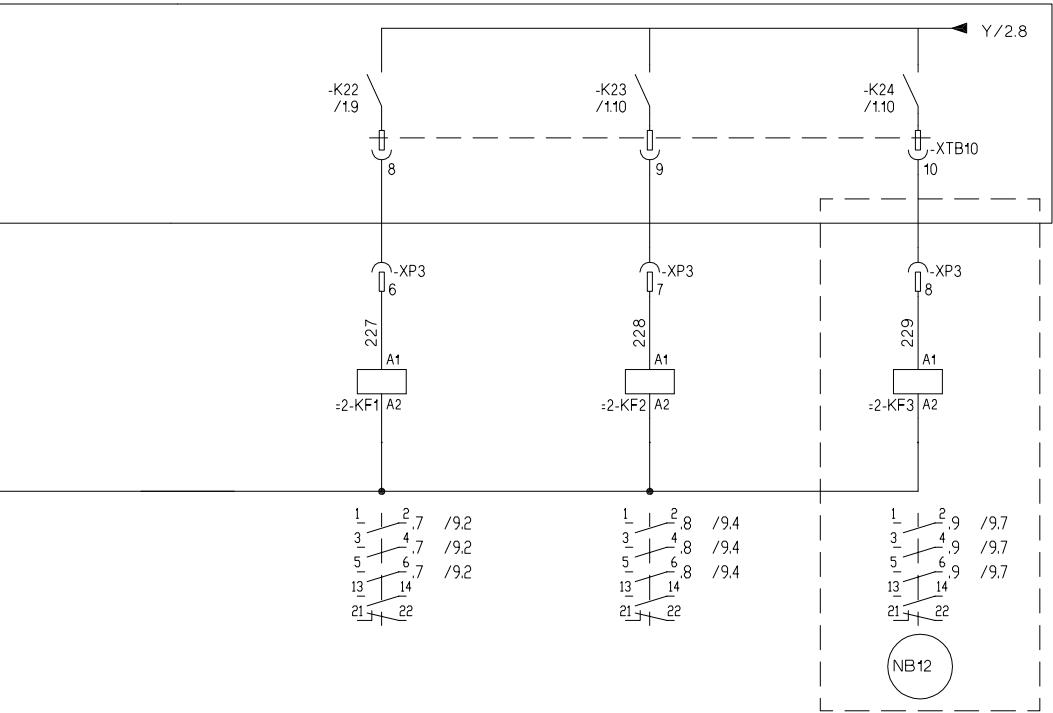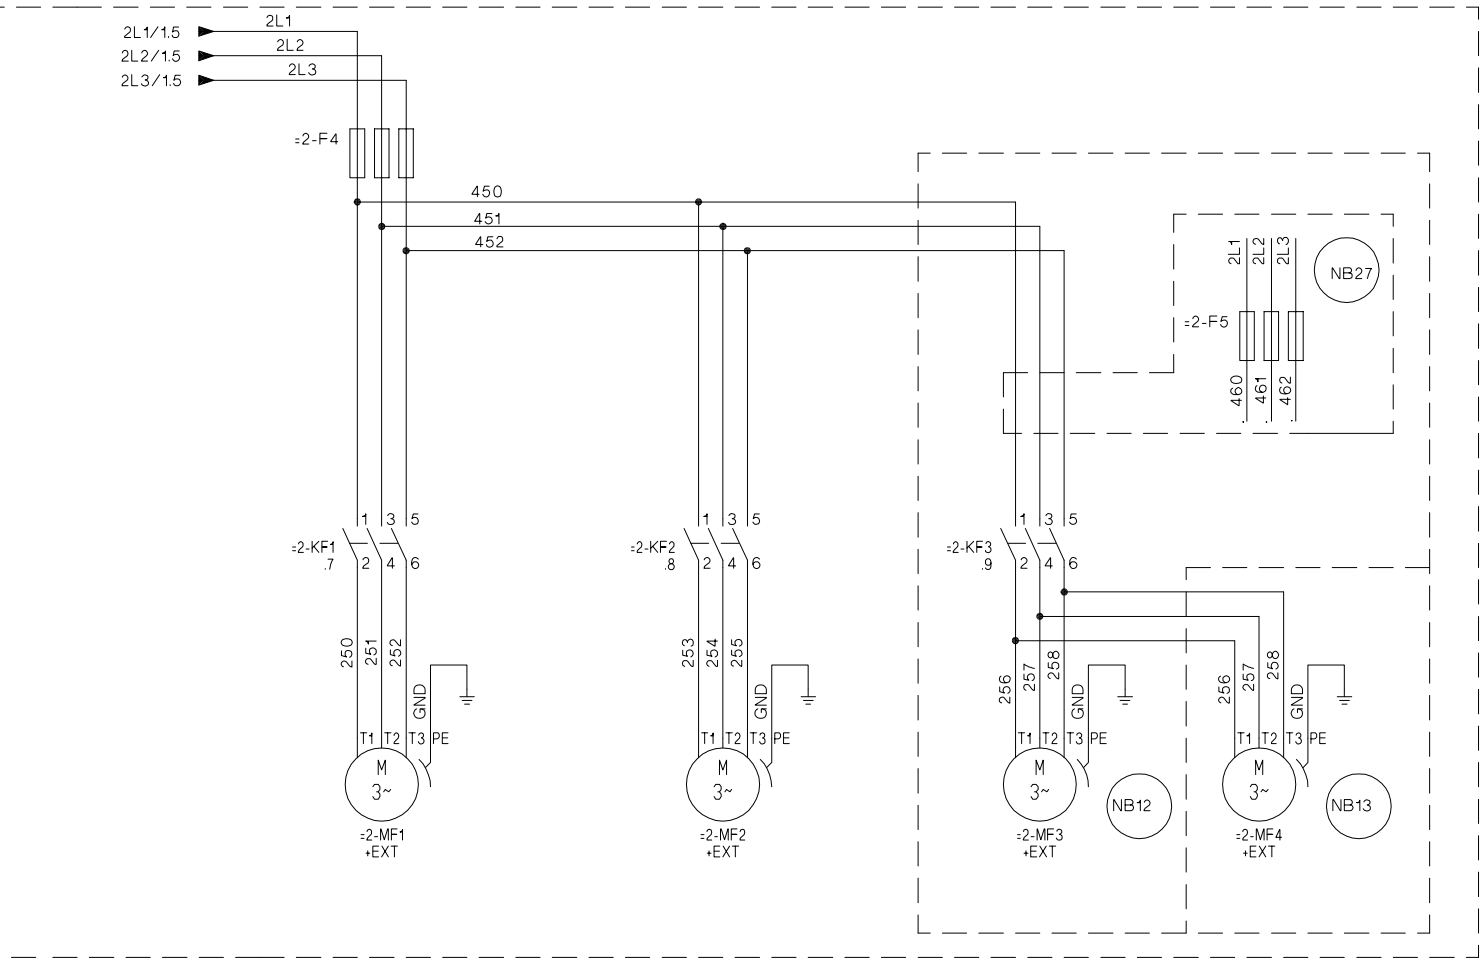

FAN WIRING (CONT'D)

035-21583-104 REV B



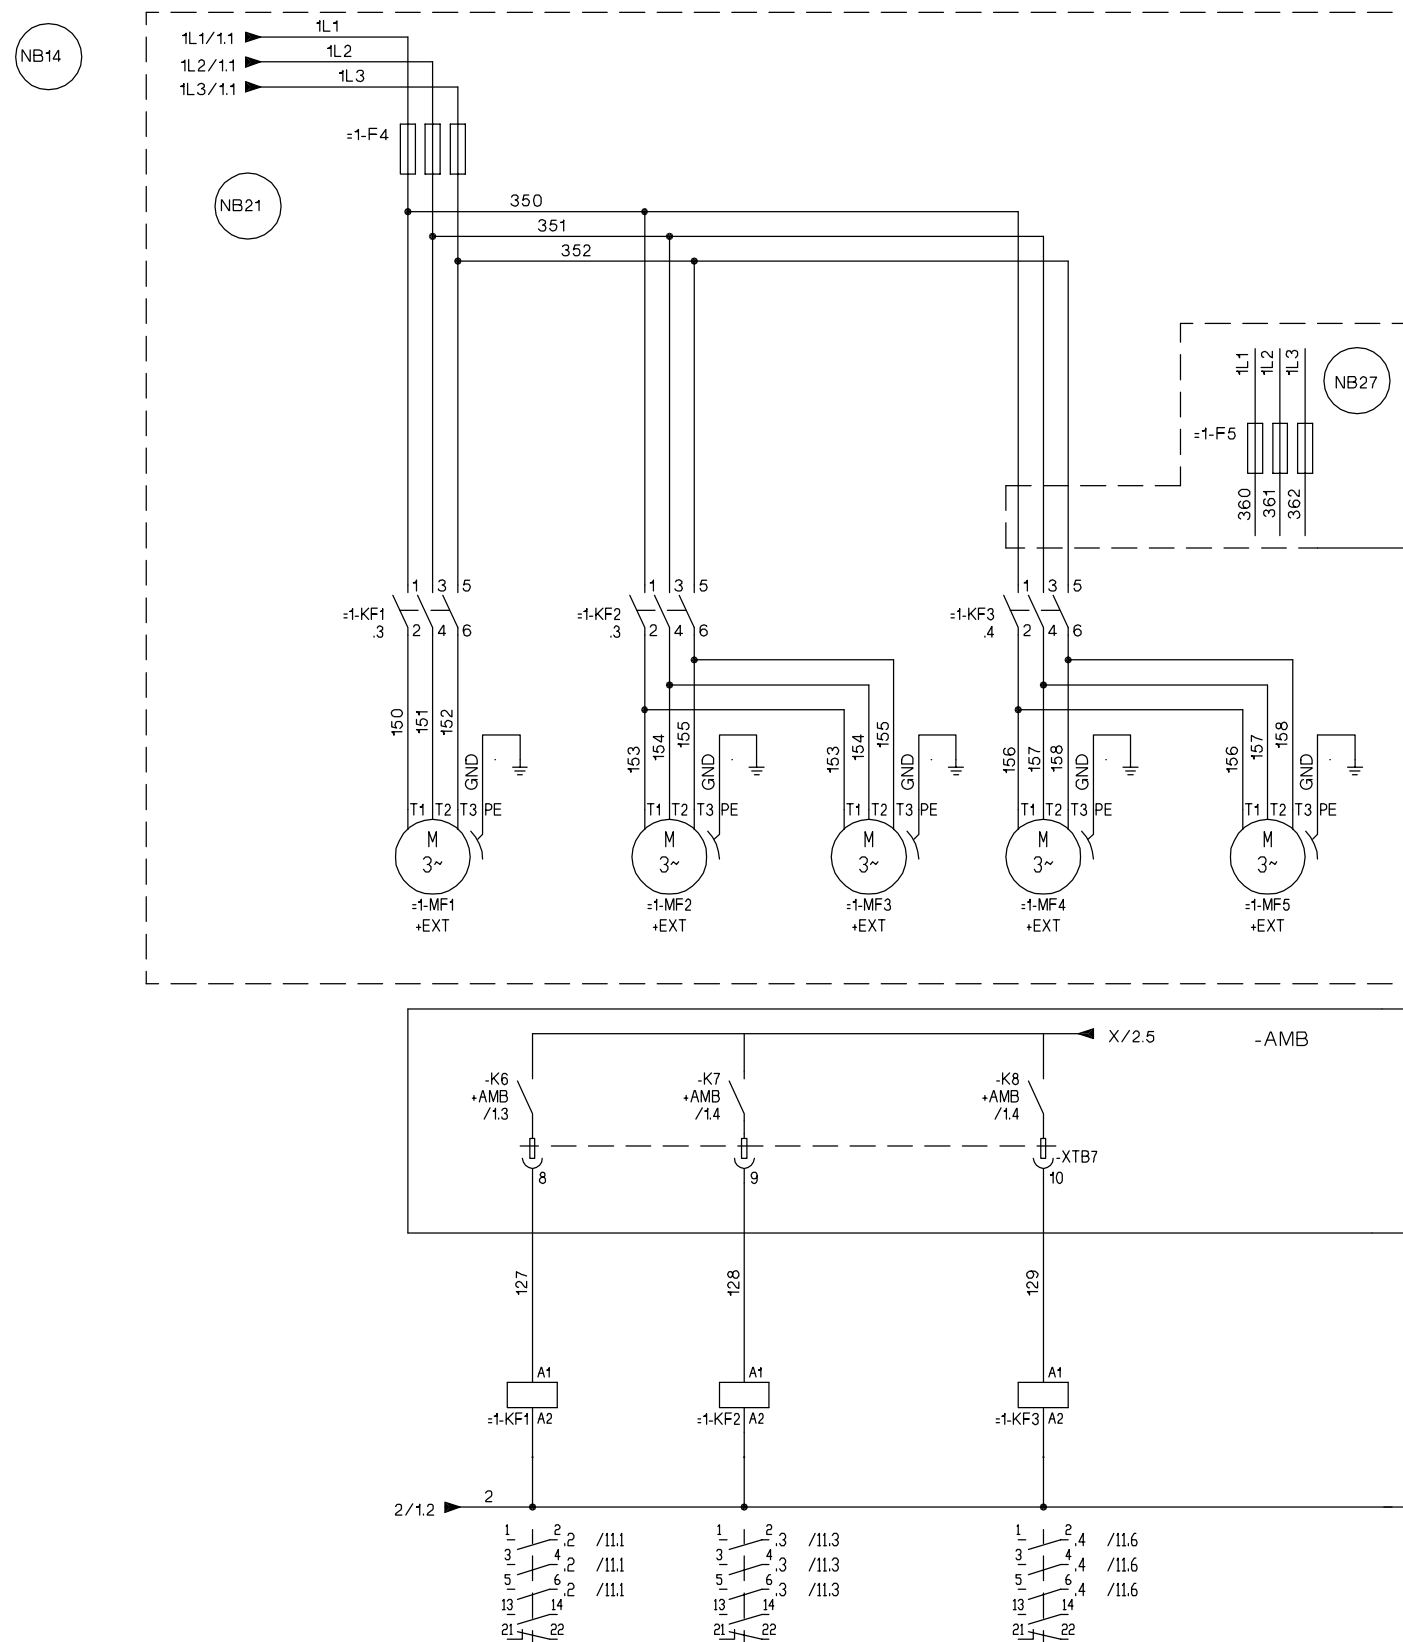


FIG. 15 – ELEMENTARY WIRING DIAGRAM, SHT 4

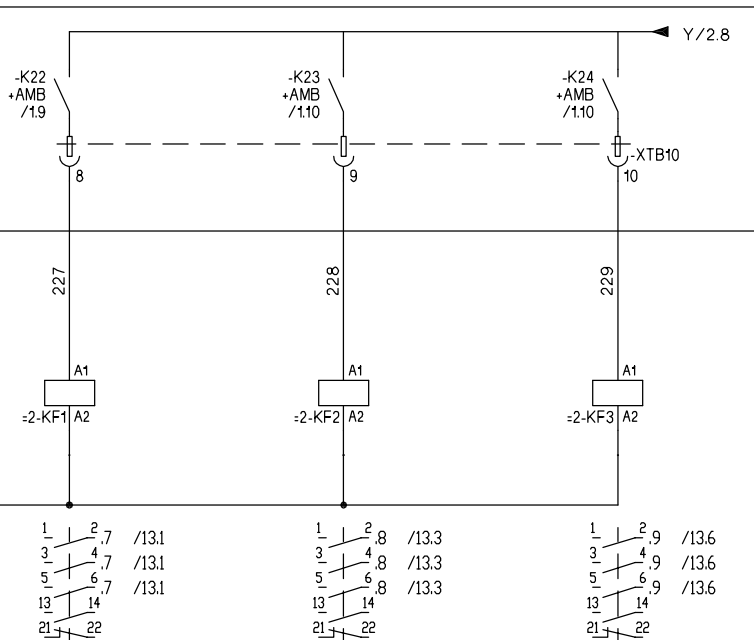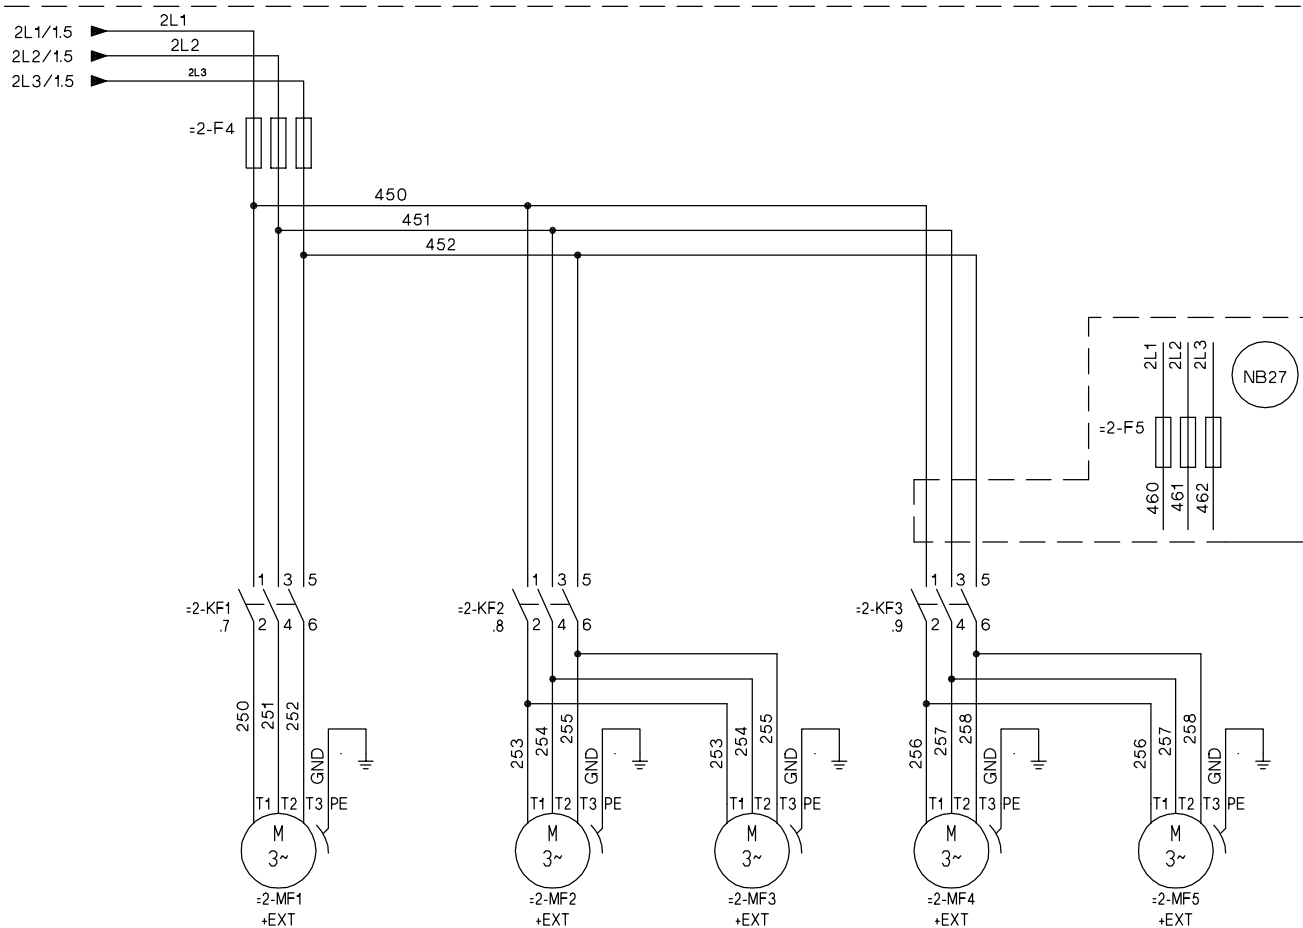

CONNECTION DIAGRAMS

POWER PANEL

035-21589-101 REV C


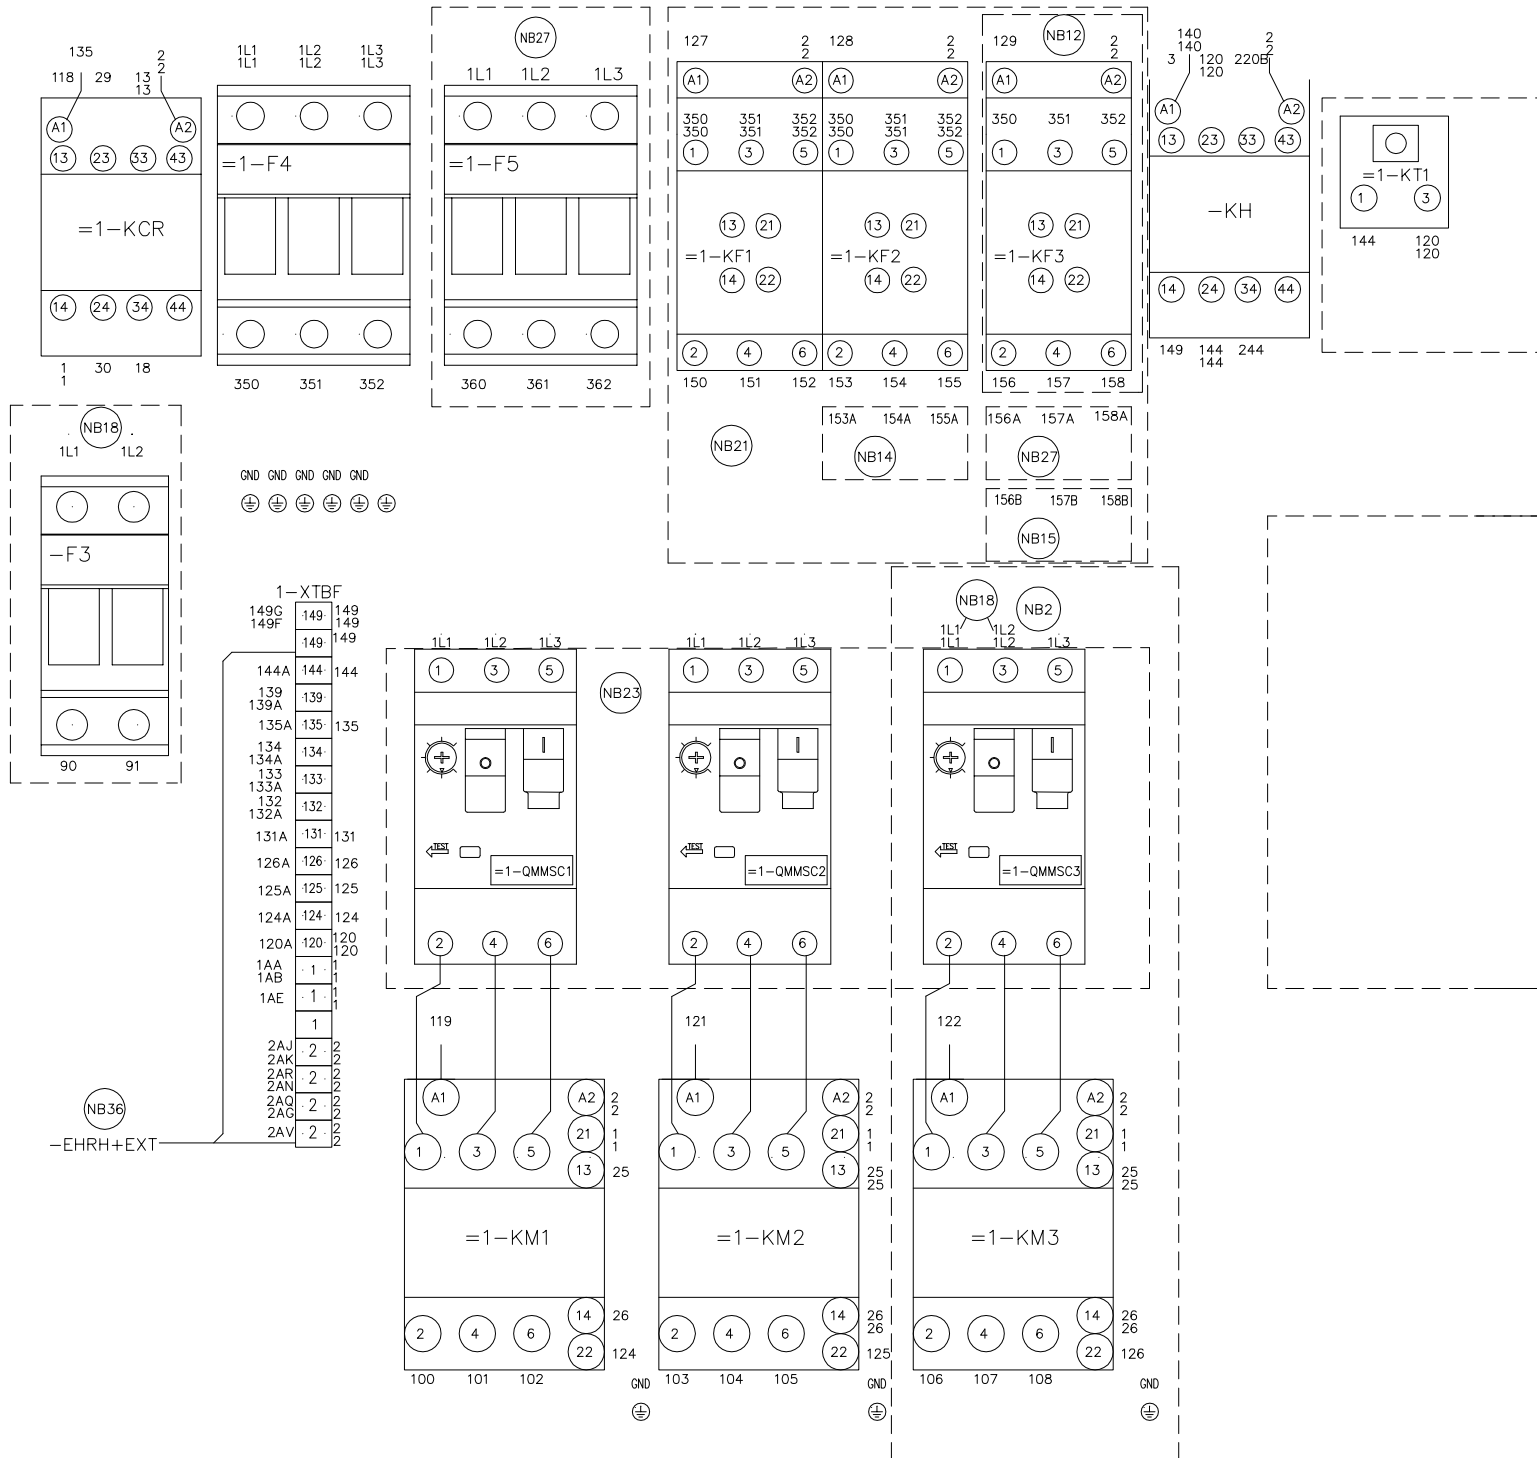


FIG. 16 – CONNECTION DIAGRAM, SHT 1

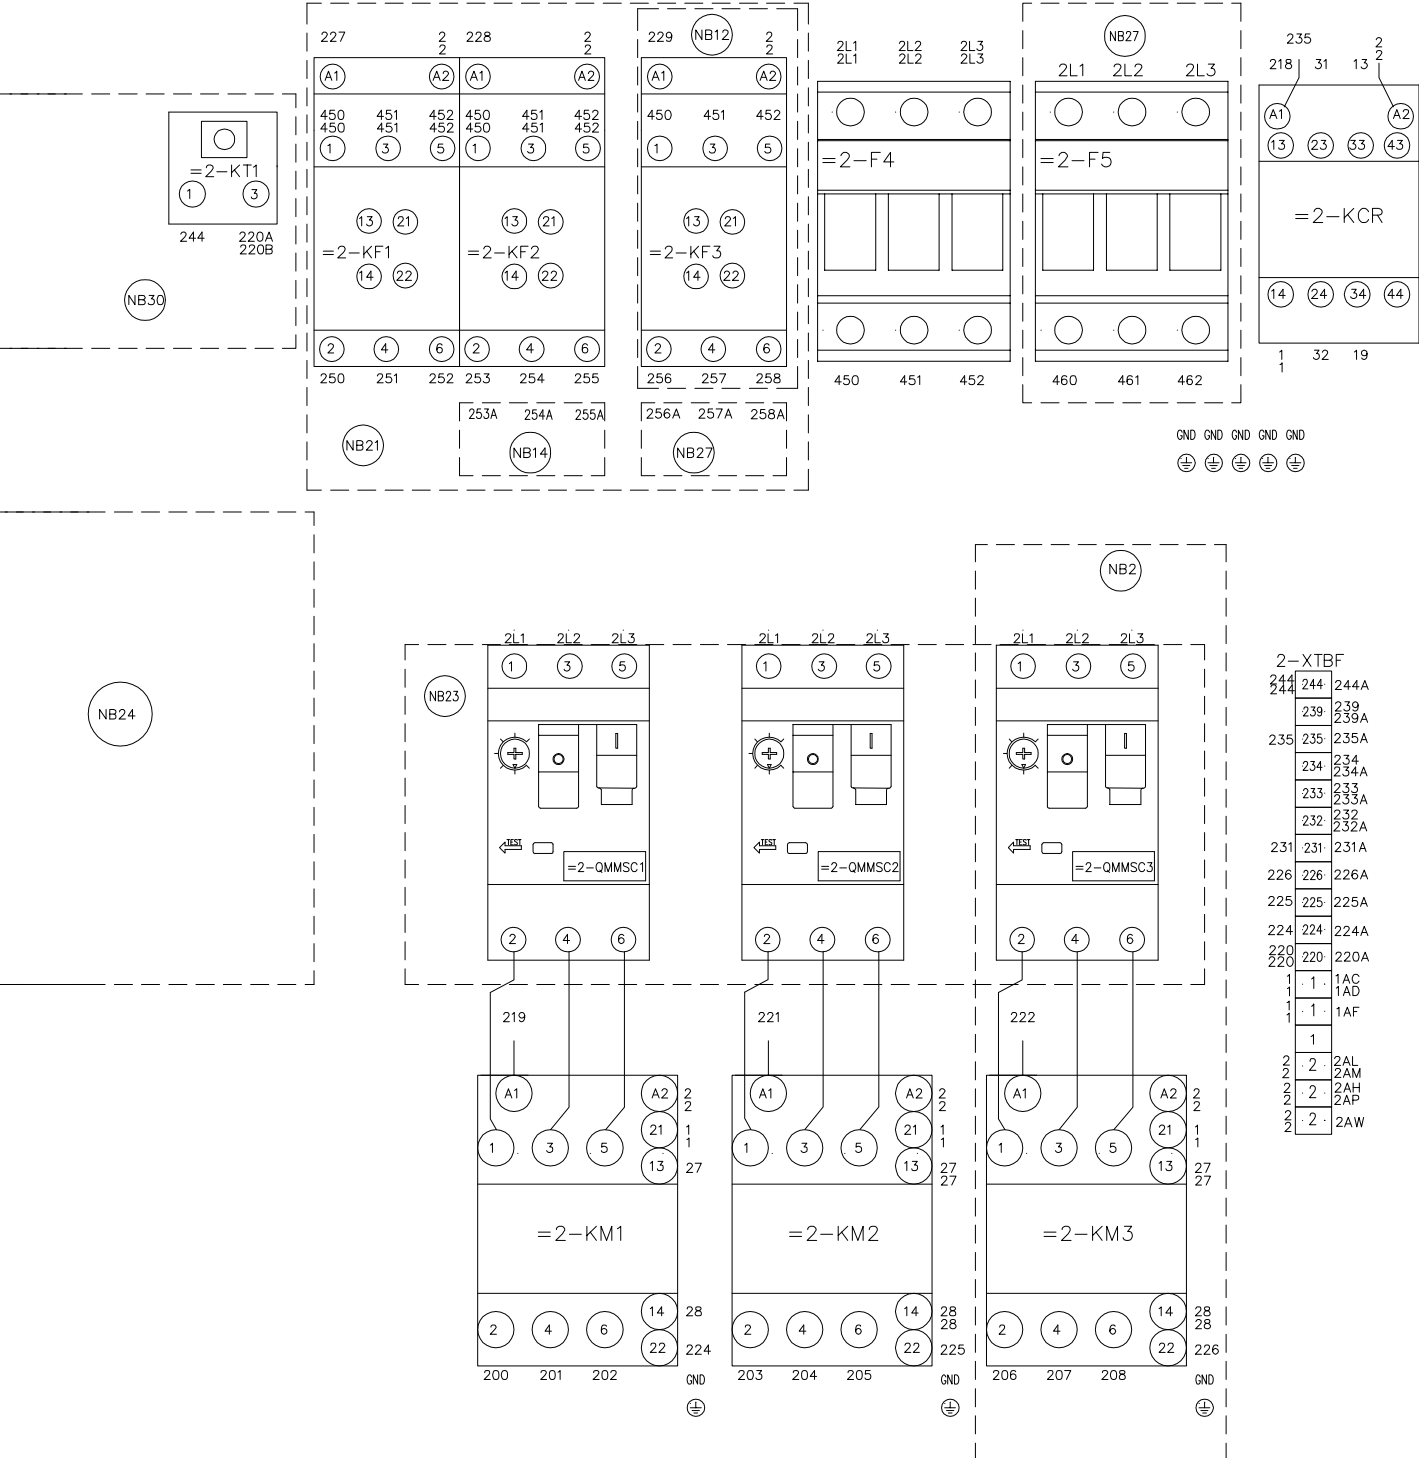

MICRO PANEL CONECTIONS

035-21589-102 REV D

-XP2				
1 1	2 2	3 118	4 119	5
6 121	7 122	8 127	9 128	10 129
11 131	12 25	13 26	14 29	15 30

-XP2				
11 131	12 25	13 26	14 29	15 30
6 121	7 122	8 127	9 128	10 129
1 1	2 2	3 118	4 119	5

-XP3				
1 218	2 219	3	4 221	5 222
6 227	7 228	8 229	9 231	10 27
11 28	12 31	13 32	14	15

-XP3				
11 28	12 31	13 32	14	15
6 227	7 228	8 229	9 231	10 27
1 218	2 219	3	4 221	5 222

-XP4	
3 19	4
1 13	2 18

-XP4	
1 13	2 18
3 19	4



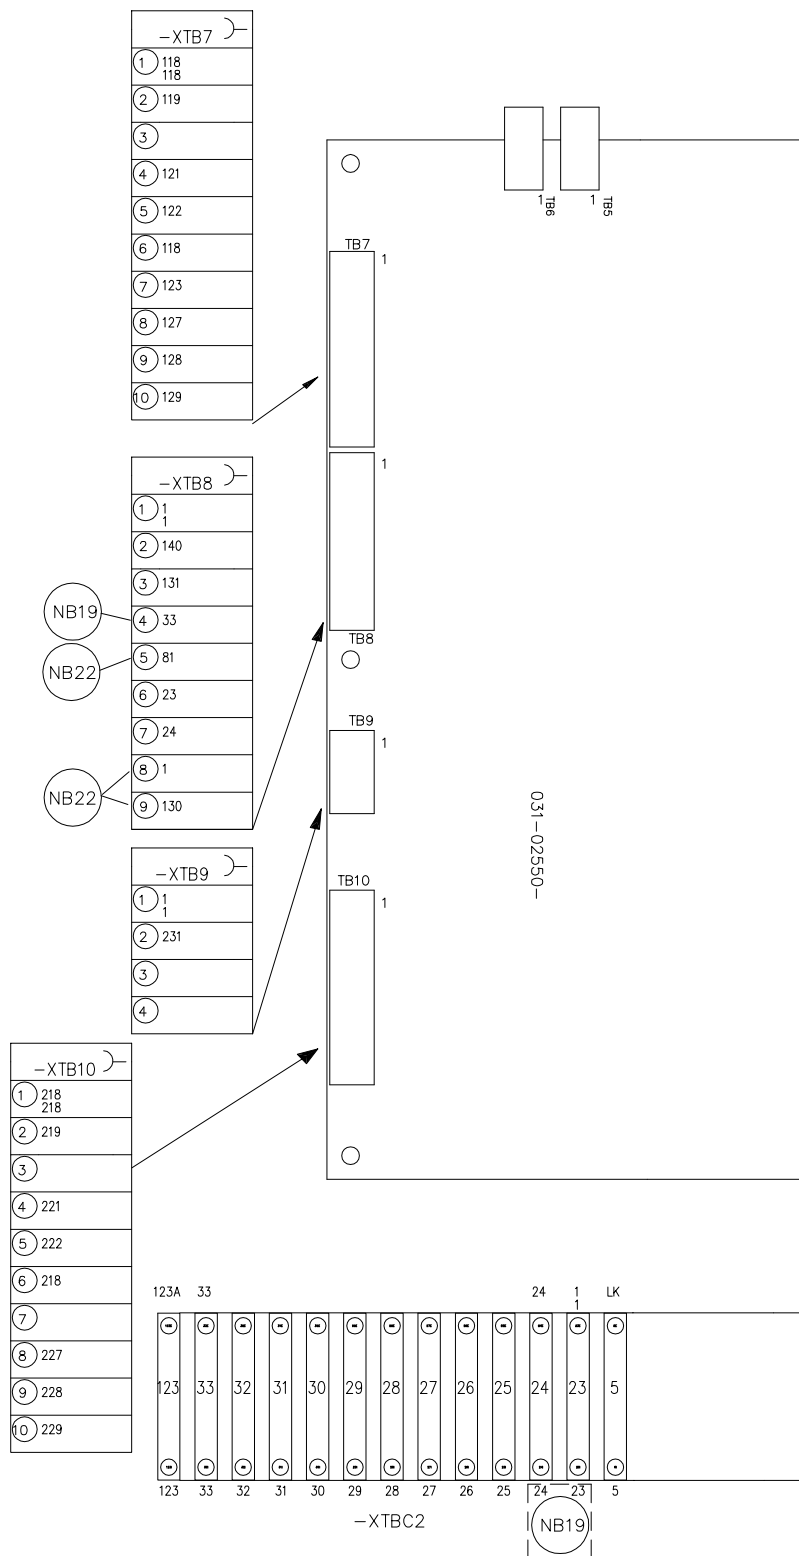


FIG. 17 – CONNECTION DIAGRAM, SHT 2

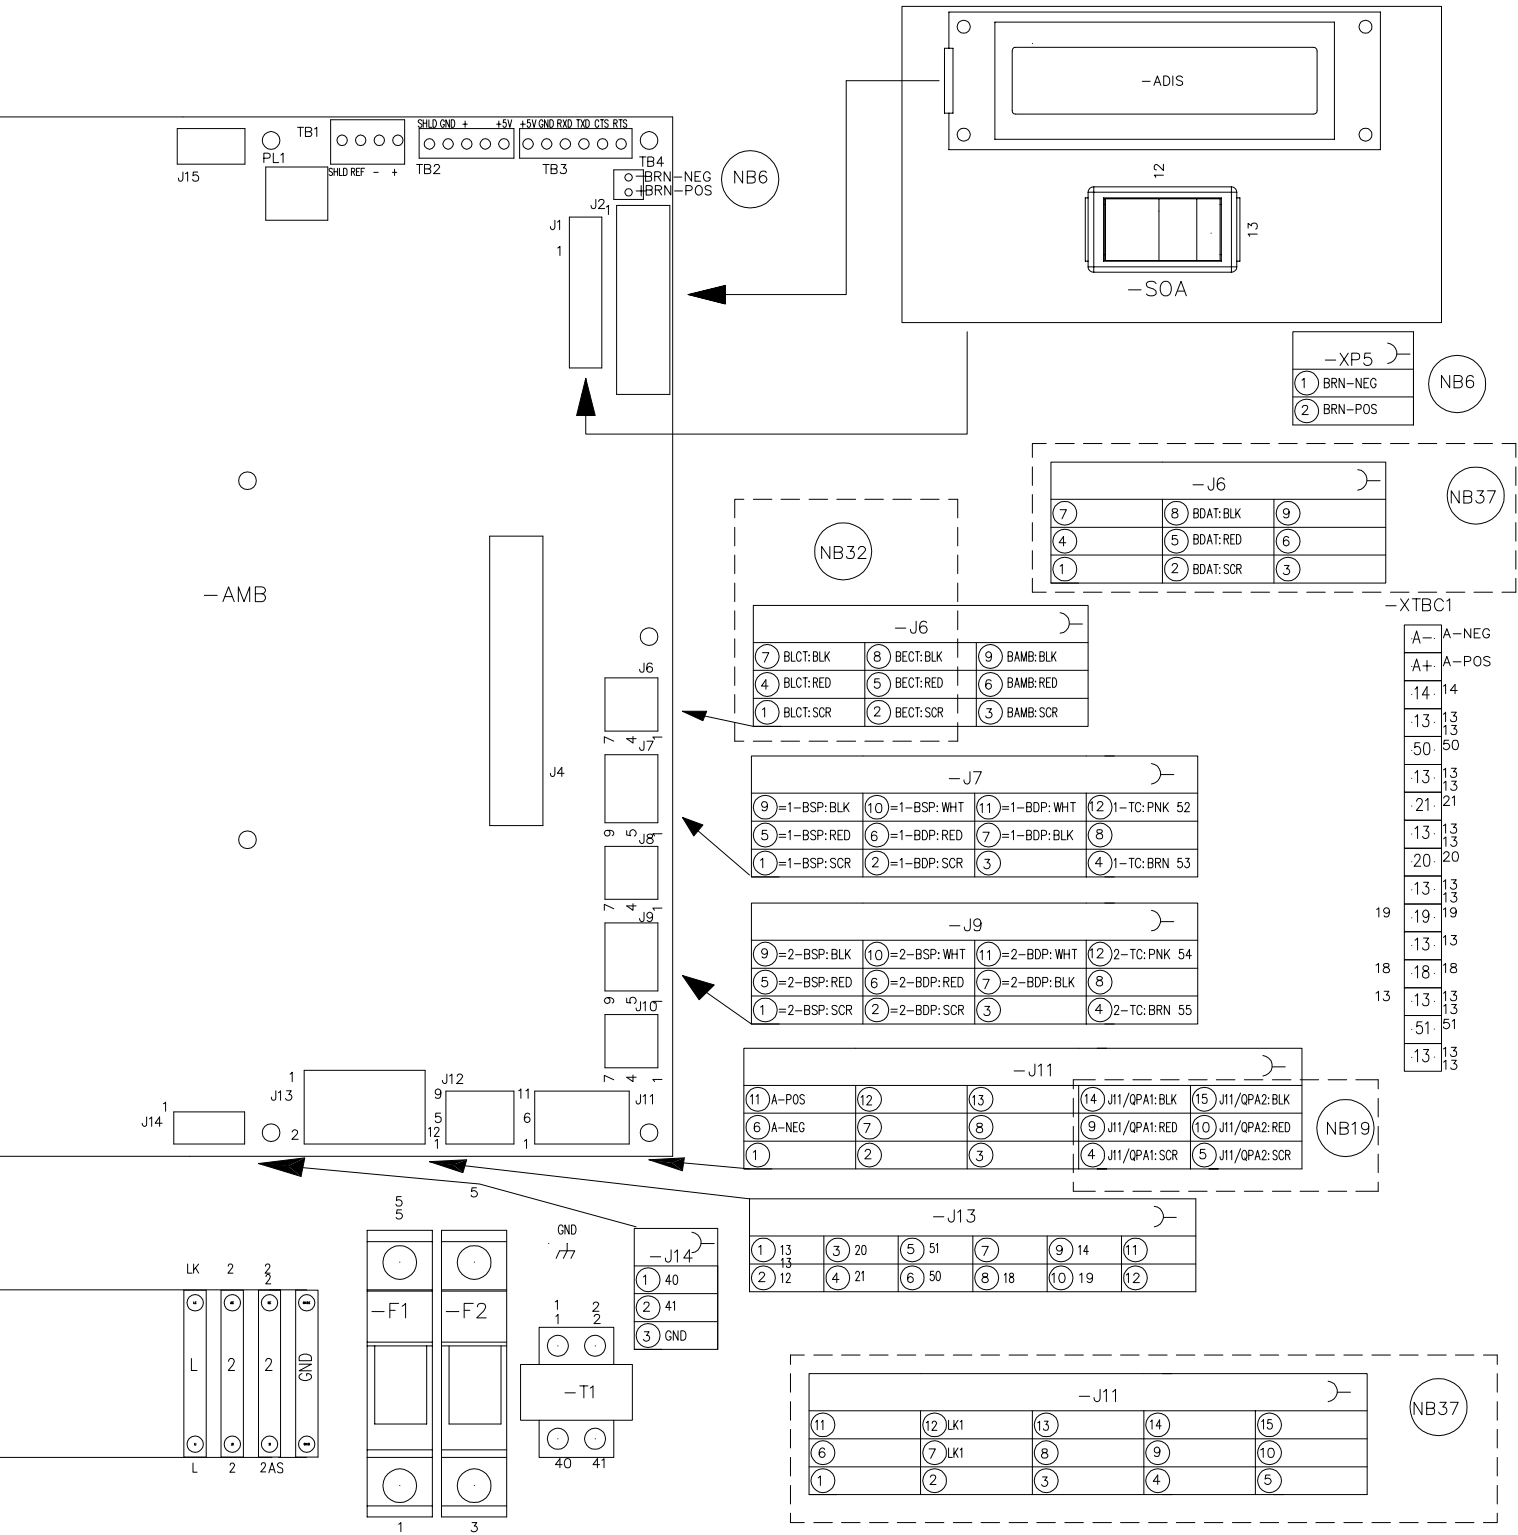



POWER OPTIONS CONNECTION DIAGRAM

035-21589-103 REV B

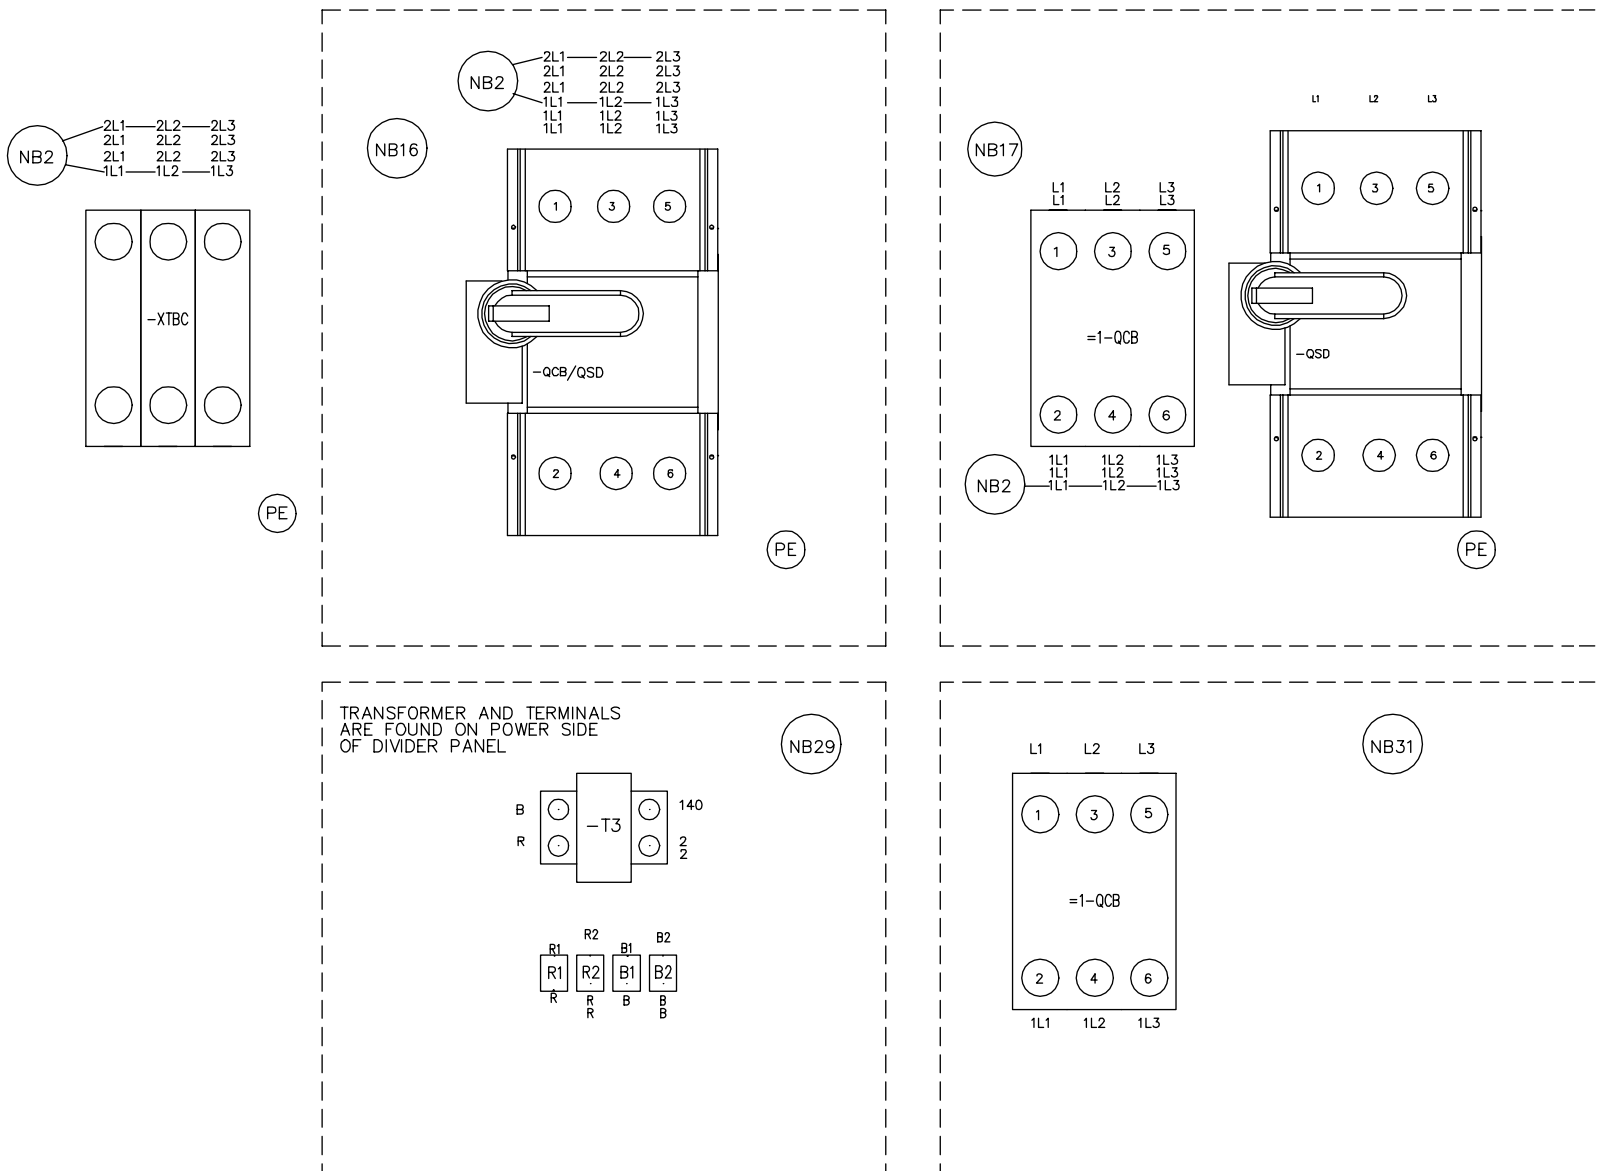

LD13234A

FIG. 18 – CONNECTION DIAGRAM, SHT 3

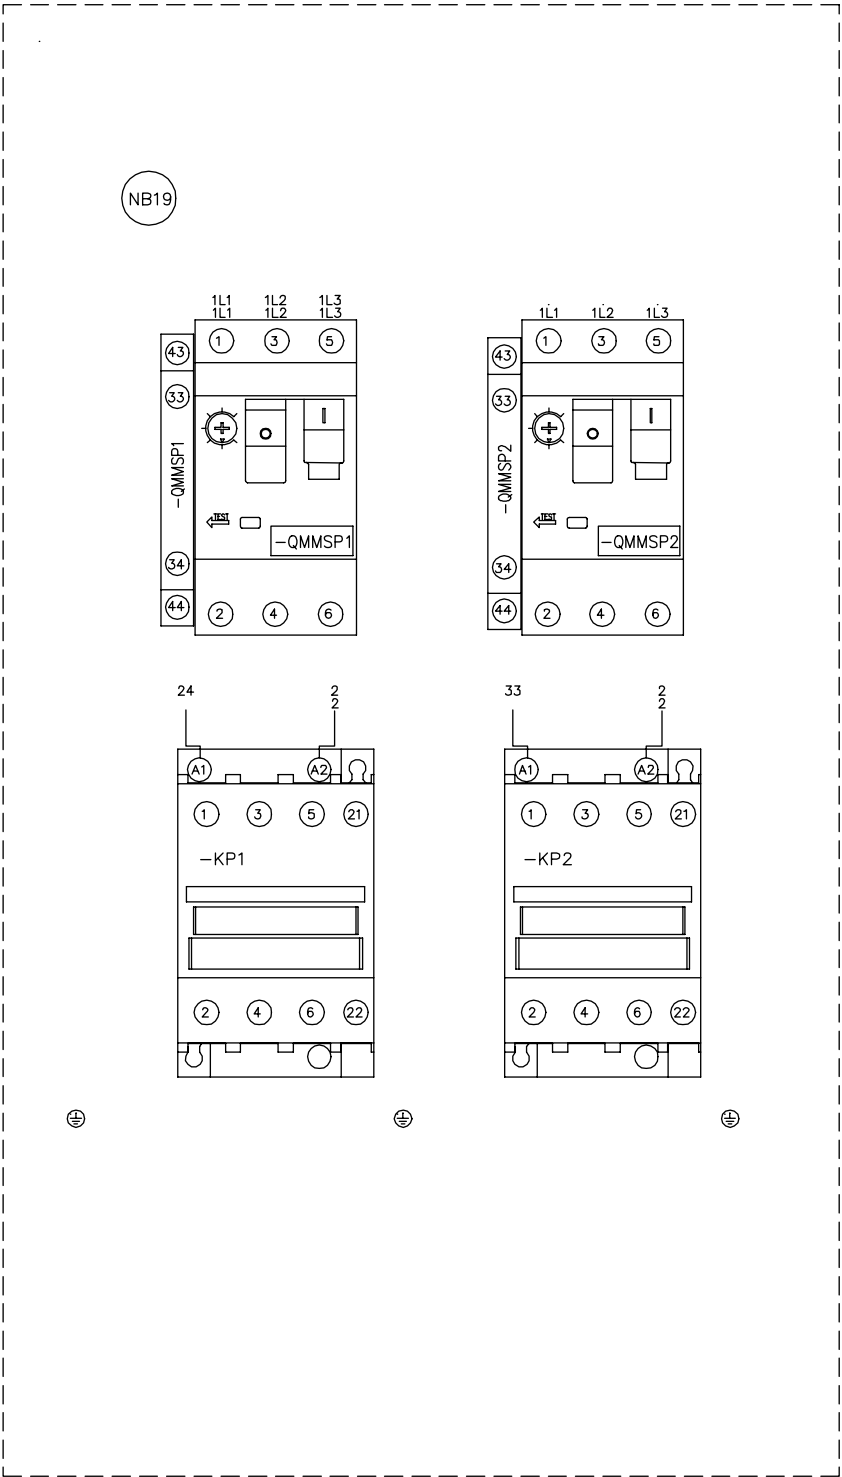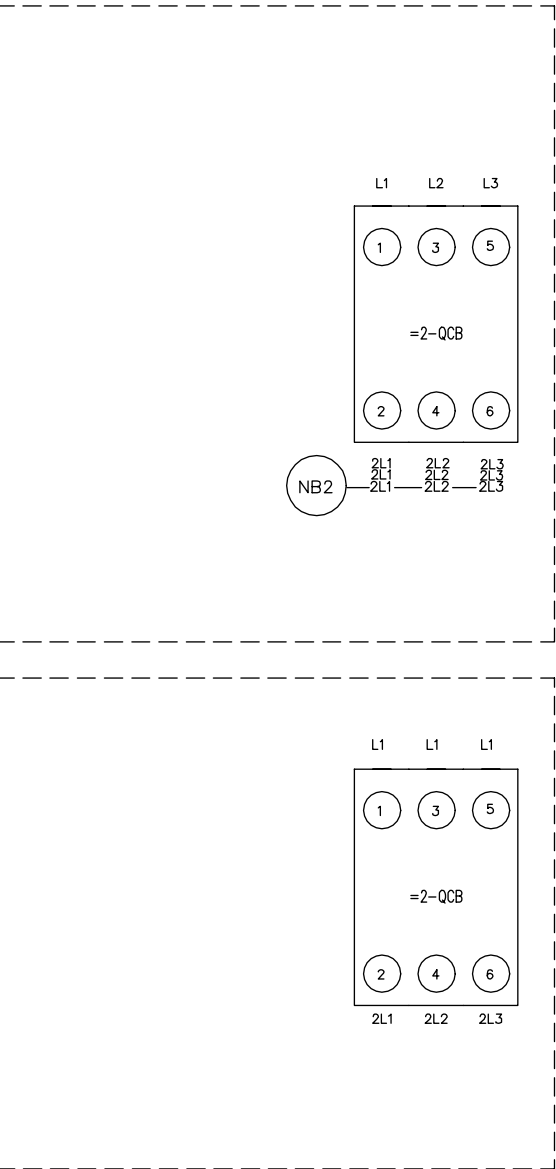

LD13901

COMPRESSOR WIRING

035-21589-106 REV E



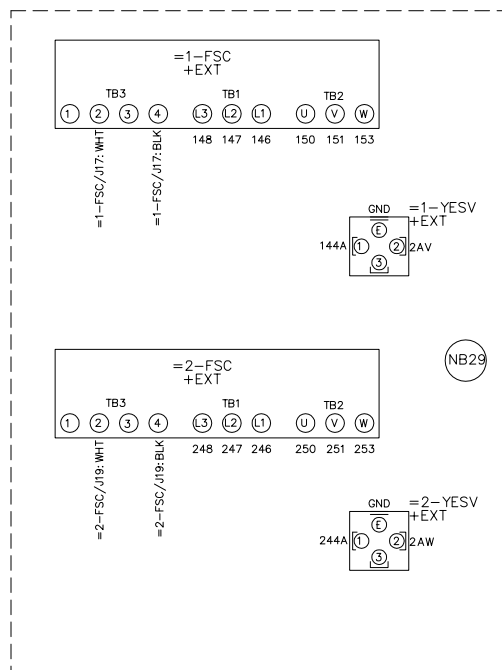


FIG. 19 – CONNECTION DIAGRAM, SHT 6

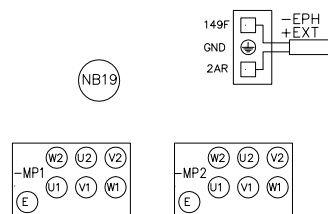

CONDENSER FAN MAPPING AND SEQUENCING


035-21589-107 REV A

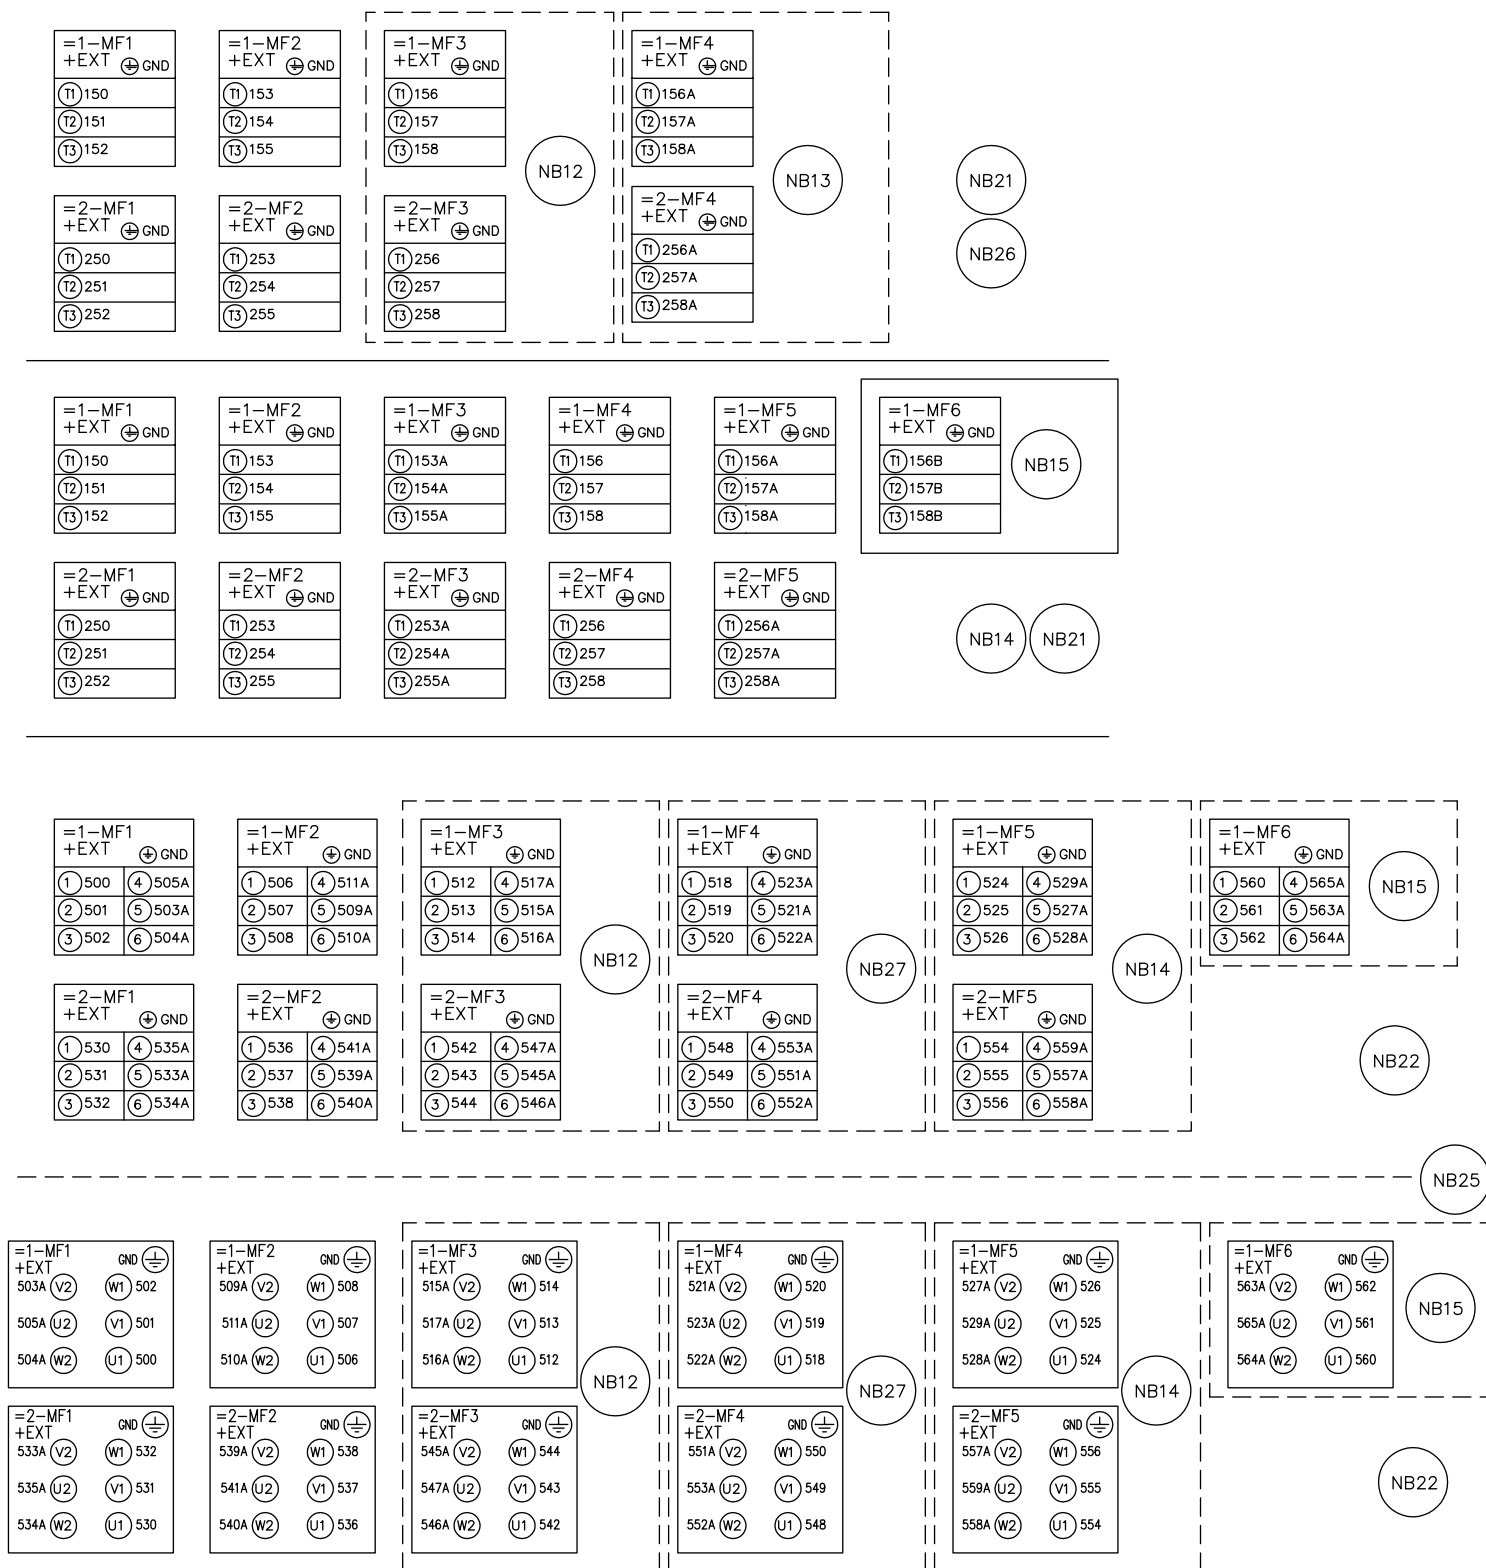


LD13147

FIG. 20 – CONNECTION DIAGRAM, SHT 7


YLAA0070SE
YLAA0071HE
YLAA0080SE
YLAA0090SE

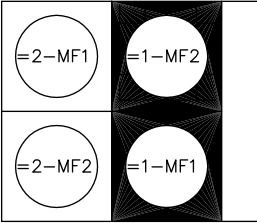


YLAA0100SE

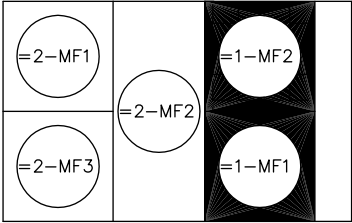


YLAA0101HE

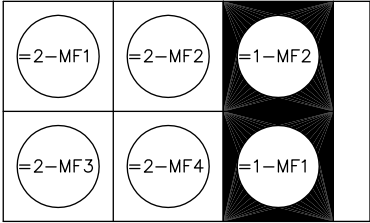


YLAA0091HE
YLAA0115SE
YLAA0120SE

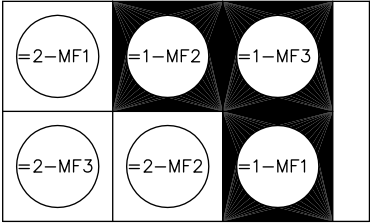


YLAA0125HE
YLAA0135SE
YLAA0150SE
YLAA0155SE

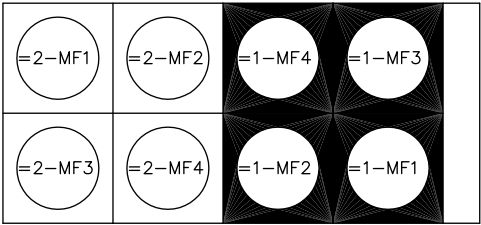


YLAA0141HE

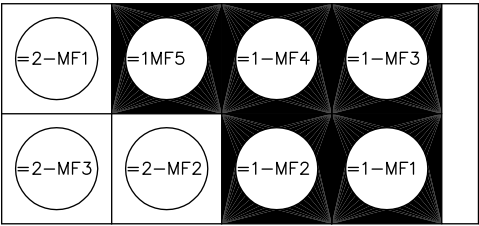

YLAA0175HE

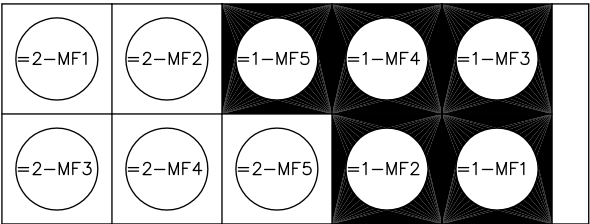

YLAA0156HE

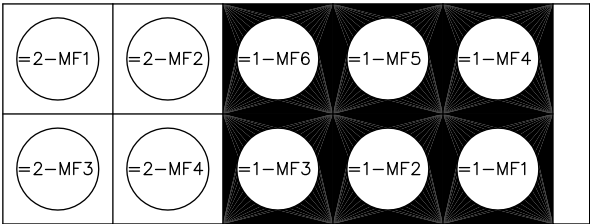

5

LD13232

DUAL PUMP WIRING

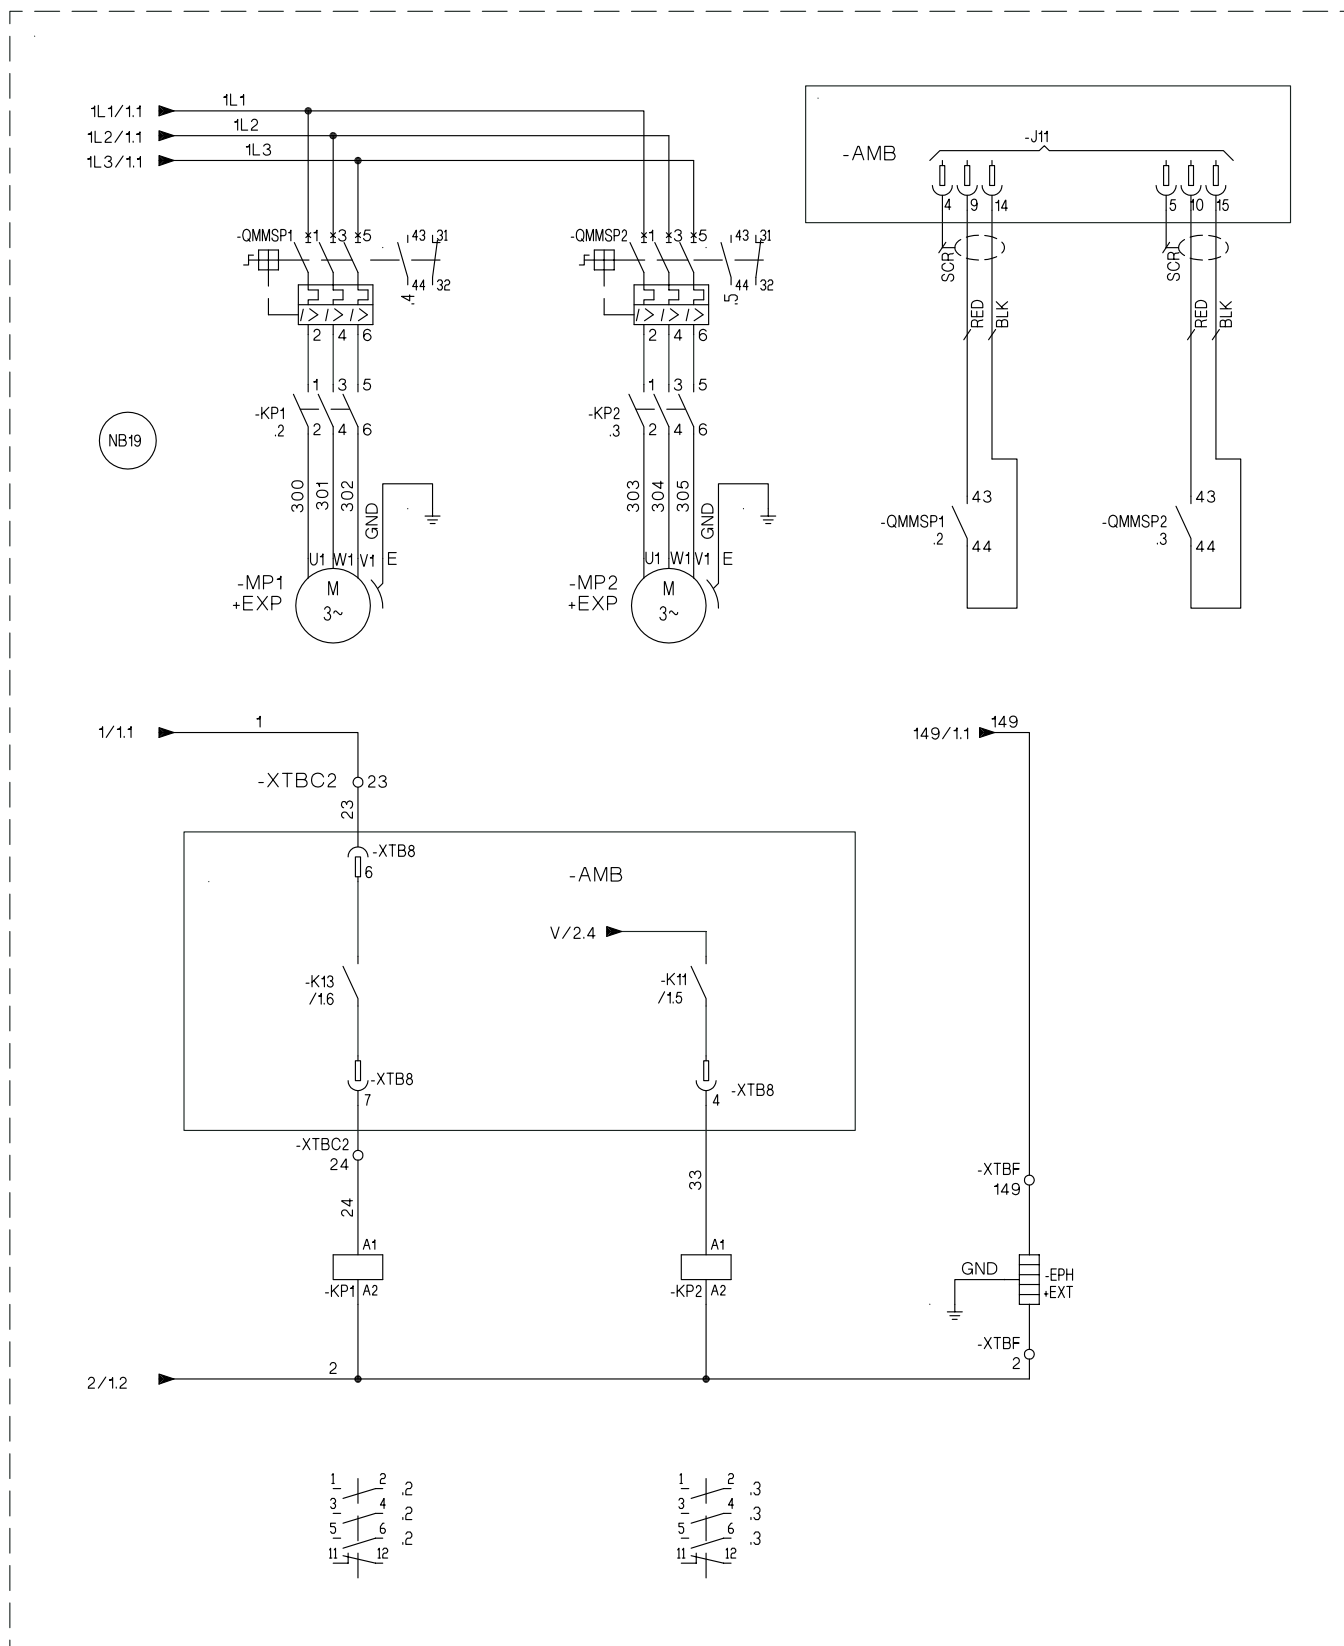


FIG. 21 – DUAL PUMP WIRING

LD13237

THIS PAGE INTENTIONALLY LEFT BLANK

WIRING



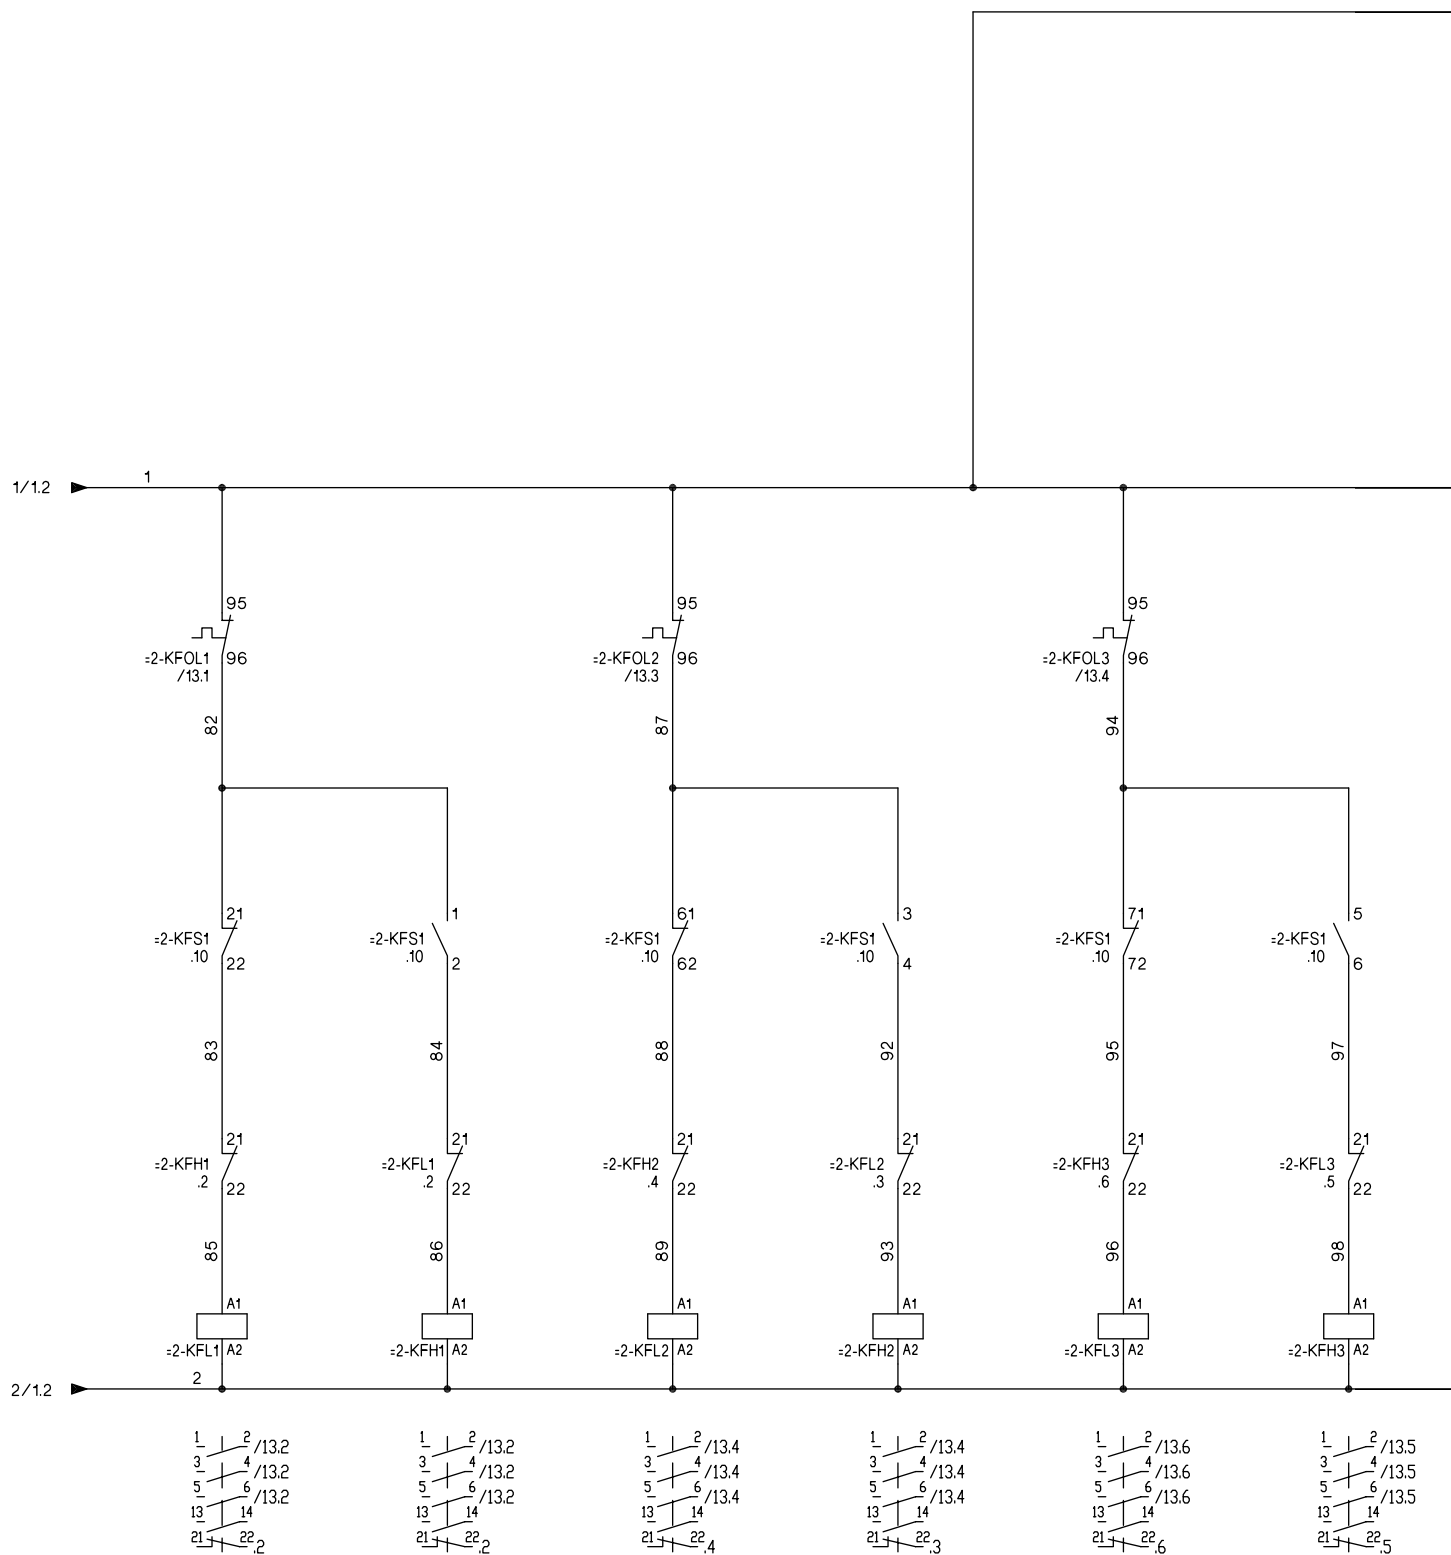


FIG. 22 – WIRING

LD13238

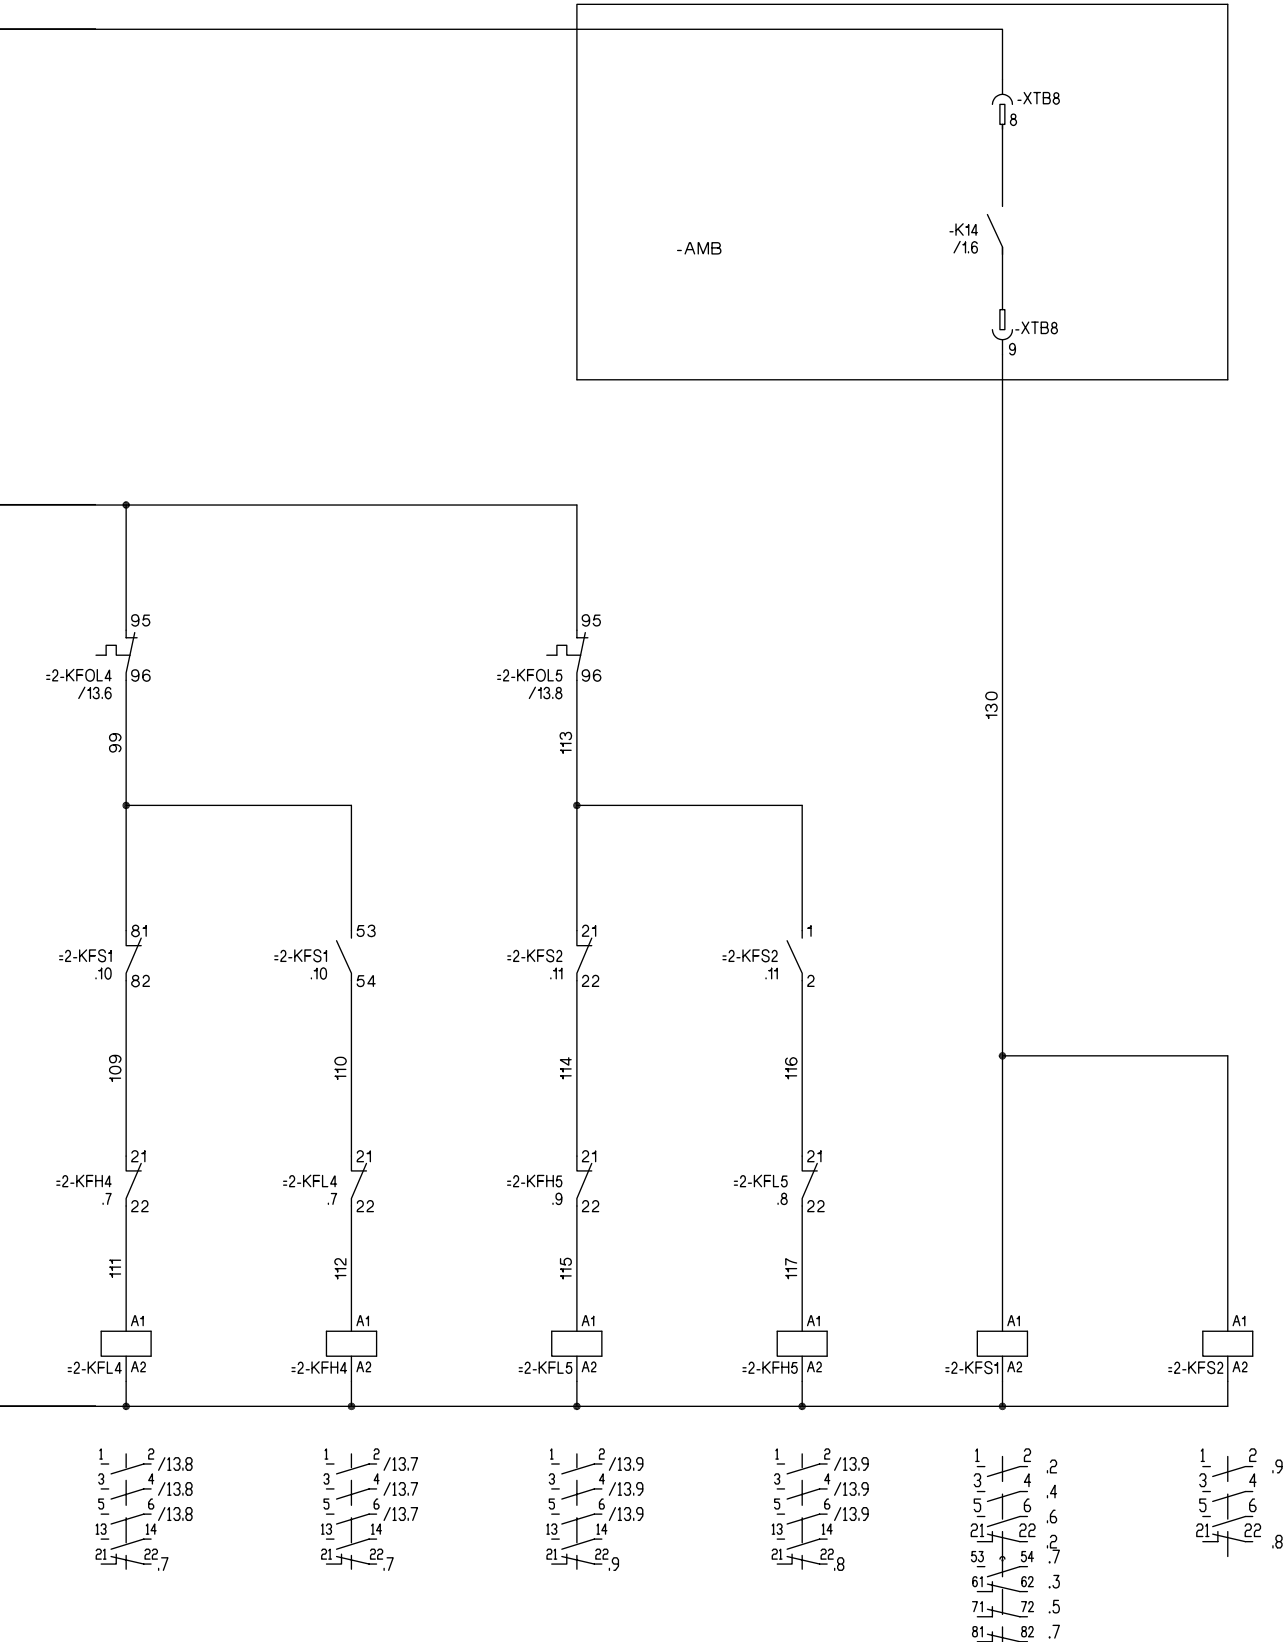

WIRING DIAGRAM - POWER SUPPLY

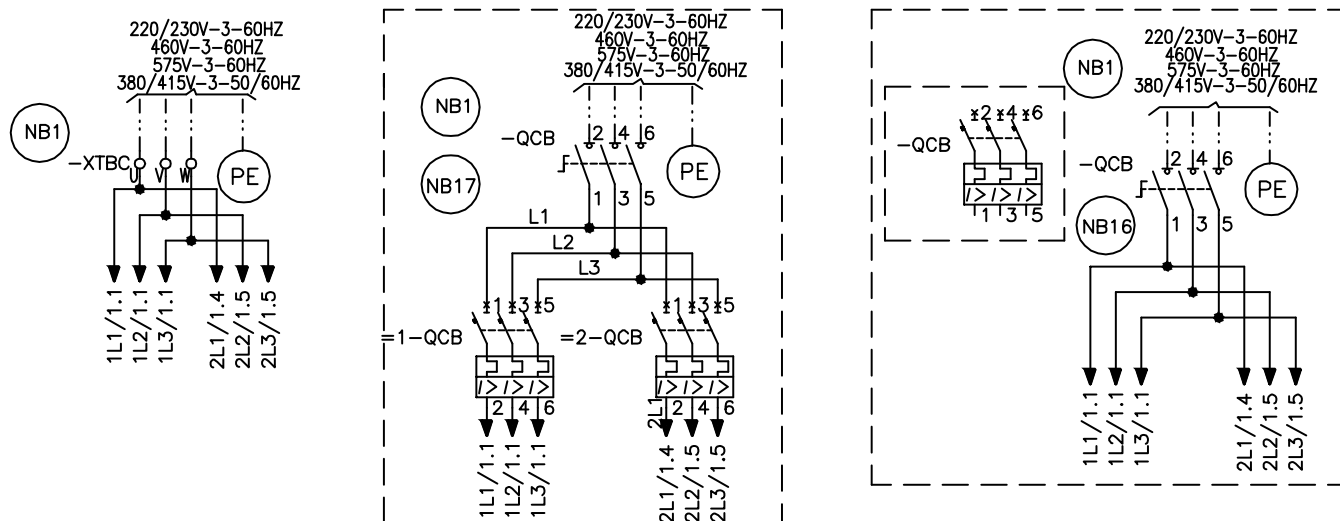

SINGLE POINT WIRING OPTIONS

FIG. 23 – WIRING DIAGRAM, SINGLE POINT WIRING OPTIONS

LAYOUT - POWER BLOCKS AND TRANSFORMERS


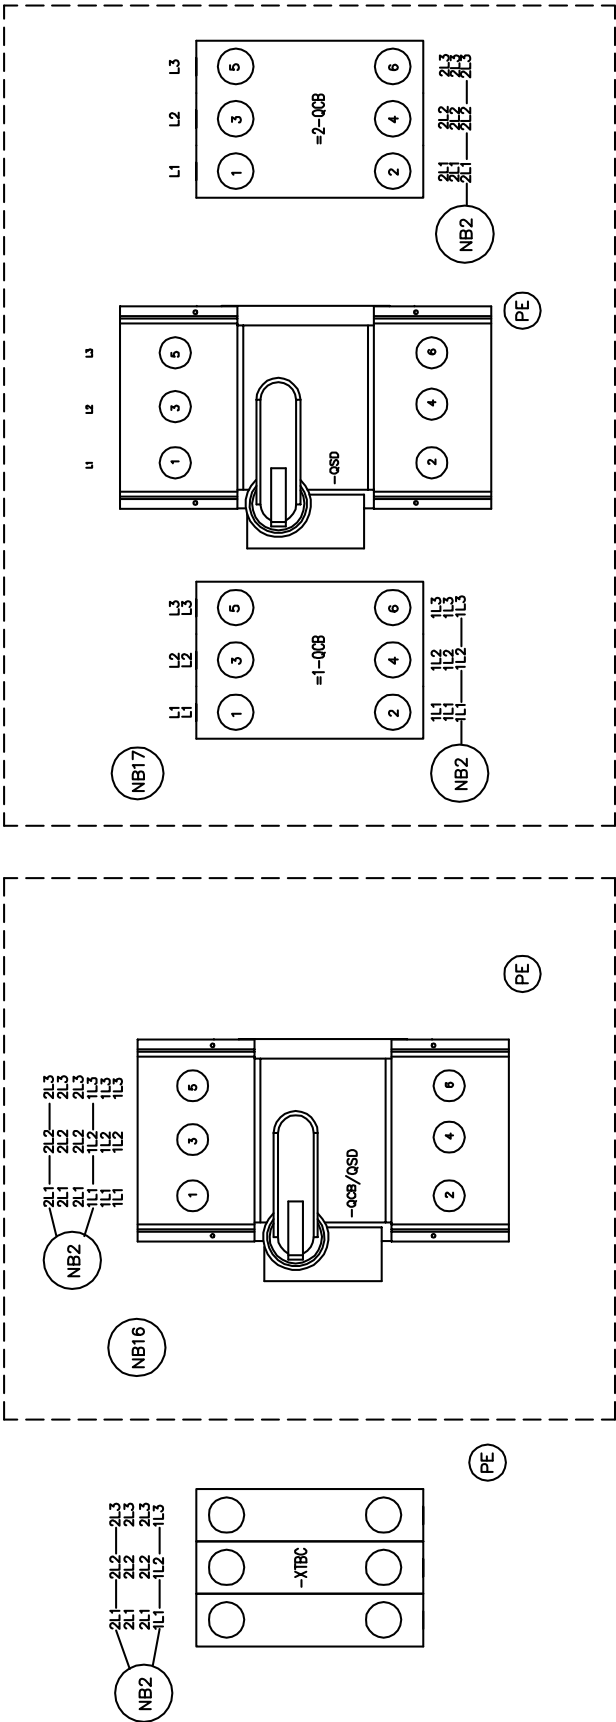


FIG. 24 – LAYOUT - POWER BLOCKS AND TRANSFORMERS

DIMENSIONS (ENGLISH) **FOUR FAN UNITS** **DIMENSIONS – YLAA0070 TO 0090 (ENGLISH)**

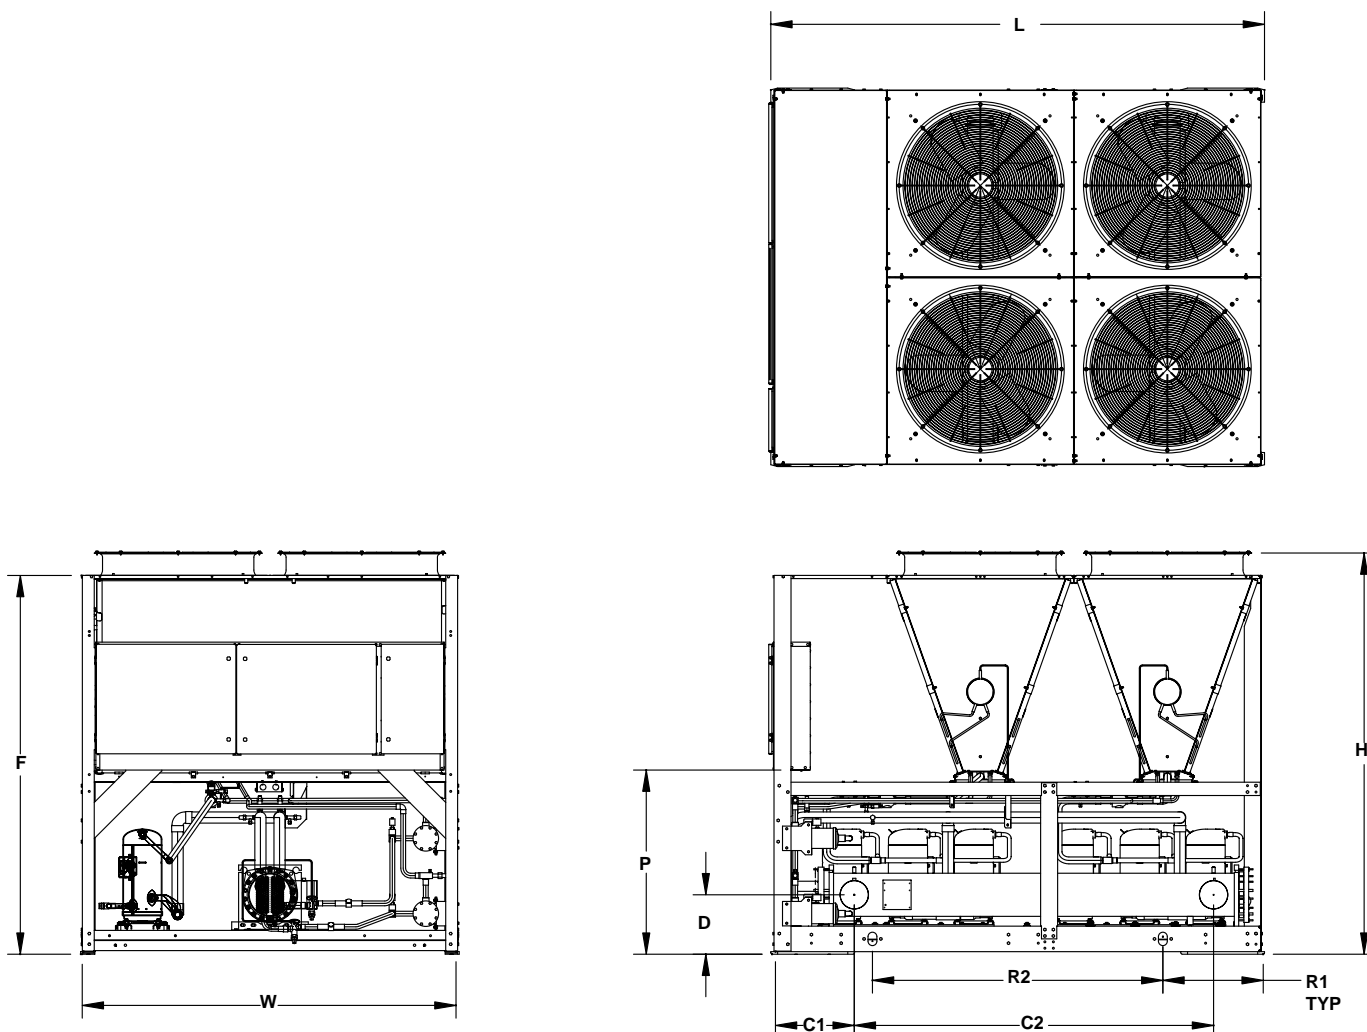


YLAA Model	L (length)	W (width)	H (height)	F	P	D	C1	C2	R2	R1
YLAA0070SE	116	88.3	94.2	88.5	42.8	13.4	19	84.5	68.3	23
YLAA0080SE	116	88.3	94.2	88.5	42.8	15	18.6	85	68.3	23
YLAA0090SE	116	88.3	94.2	88.5	42.8	16.3	19.6	83	68.3	23

NOTE:

Placement on a level surface of free of obstructions (including snow, for winter operation) or air circulation ensures rated performance, reliable operation, and ease of maintenance. Site restrictions may compromise minimum clearances indicated below, resulting in unpredictable airflow patterns and possible diminished performance. Johnson Controls unit controls will optimize operation without nuisance high-pressure safety cutouts; however, the system designer must consider potential performance degradation. Access to the unit control center assumes the unit is no higher than on spring isolators. Recommended minimum clearances: Side to wall – 6'; rear to wall – 6'; control panel to end wall – 4'0"; top – no obstructions allowed; distance between adjacent units – 10'. No more than one adjacent wall may be higher than the unit.

DIMENSIONS – YLAA00100 (ENGLISH)
FIVE FAN UNITS

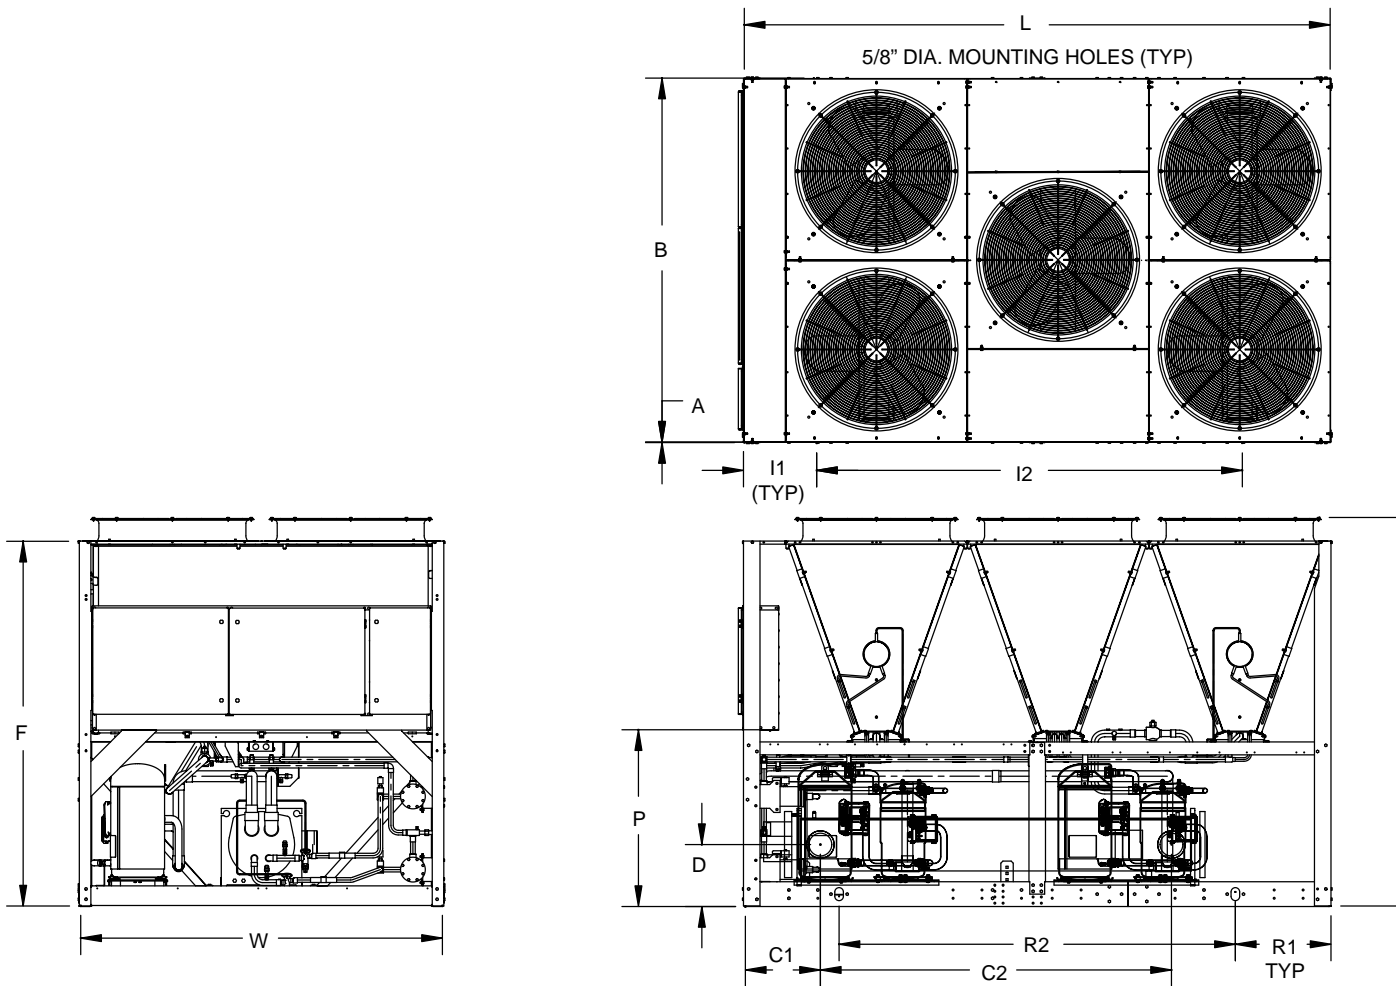

5

Water Connection Sizes are shown in the Physical Data Table




YLAA Model	L (length)	W (width)	H (height)	F	P	D	C1	C2	R4	R3	R2	R1
YLAA0100SE	143.5	88.25	94.2	88.5	42.75	15	18.6	85	NA	NA	96	23

NOTE:

Placement on a level surface of free of obstructions (including snow, for winter operation) or air circulation ensures rated performance, reliable operation, and ease of maintenance. Site restrictions may compromise minimum clearances indicated below, resulting in unpredictable airflow patterns and possible diminished performance. Johnson Controls unit controls will optimize operation without nuisance high-pressure safety cutouts; however, the system designer must consider potential performance degradation. Access to the unit control center assumes the unit is no higher than on spring isolators. Recommended minimum clearances: Side to wall – 6'; rear to wall – 6'; control panel to end wall – 4'0"; top – no obstructions allowed; distance between adjacent units – 10'. No more than one adjacent wall may be higher than the unit.

DIMENSIONS – YLAA0091 TO 0120 (ENGLISH)

SIX FAN UNITS

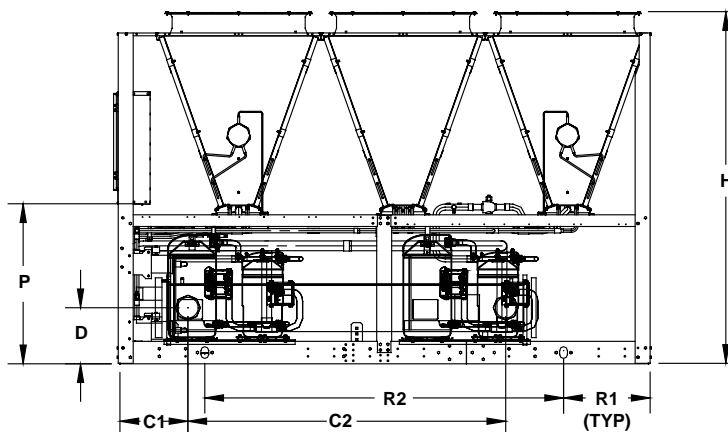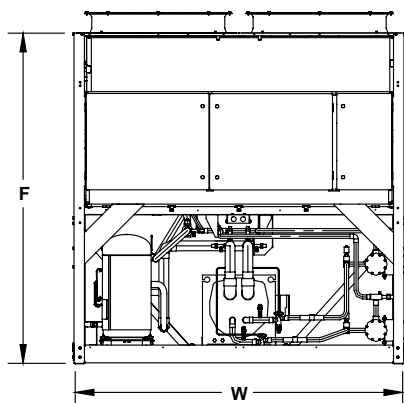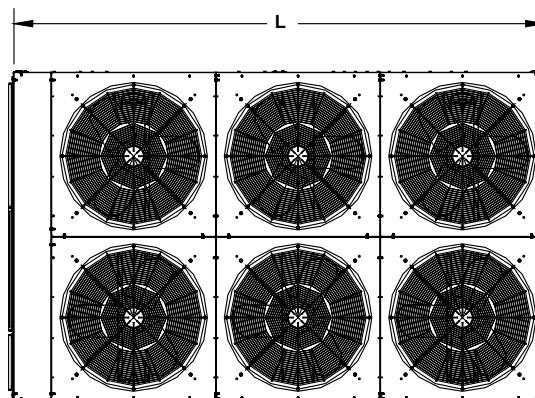

Water Connection Sizes are shown
in the Physical Data Table

YLAA Model	L (length)	W (width)	H (height)	F	P	D	C1	C2	R4	R3	R2	R1
YLAA0091HE	143.5	88.3	94.2	88.5	42.8	15	18.6	85	NA	NA	96	2.3
YLAA0101HE	143.5	88.3	94.2	88.5	42.8	15	18.6	85	NA	NA	96	23
YLAA0115SE	143.5	88.3	94.2	88.5	42.8	15	18.6	85	NA	NA	96	23
YLAA0120SE	143.5	88.3	94.2	88.5	42.8	17.3	22	102	NA	NA	96	23




NOTE:

Placement on a level surface of free of obstructions (including snow, for winter operation) or air circulation ensures rated performance, reliable operation, and ease of maintenance. Site restrictions may compromise minimum clearances indicated below, resulting in unpredictable airflow patterns and possible diminished performance. Johnson Controls unit controls will optimize operation without nuisance high-pressure safety cutouts; however, the system designer must consider potential performance degradation. Access to the unit control center assumes the unit is no higher than on spring isolators. Recommended minimum clearances: Side to wall – 6'; rear to wall – 6'; control panel to end wall – 4'0"; top – no obstructions allowed; distance between adjacent units – 10'. No more than one adjacent wall may be higher than the unit.

DIMENSIONS – YLAA0125 - 0155 (ENGLISH)

EIGHT FAN UNITS

Water connection sizes are shown in Physical Data (Table 4).

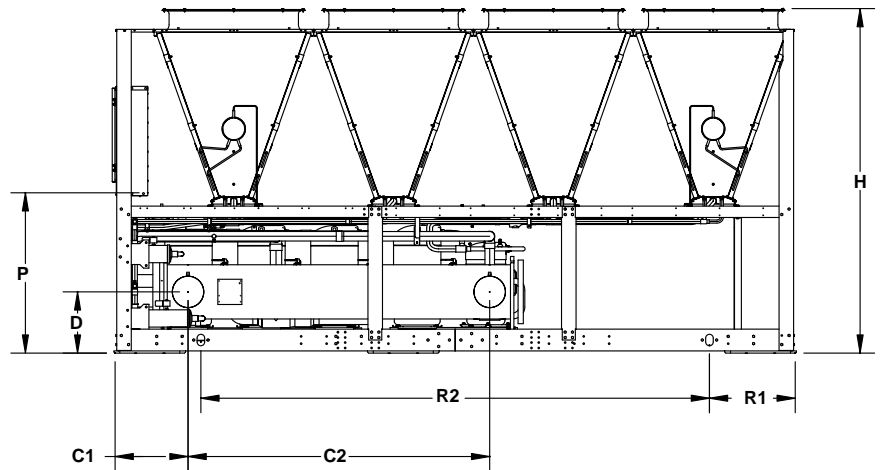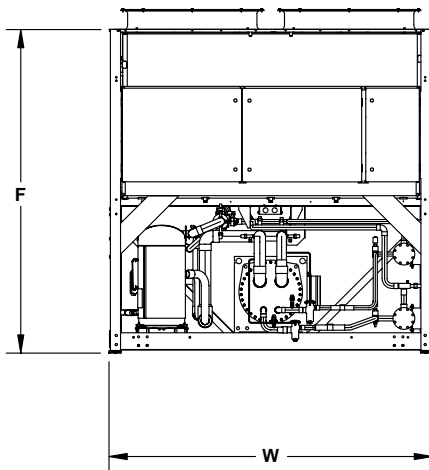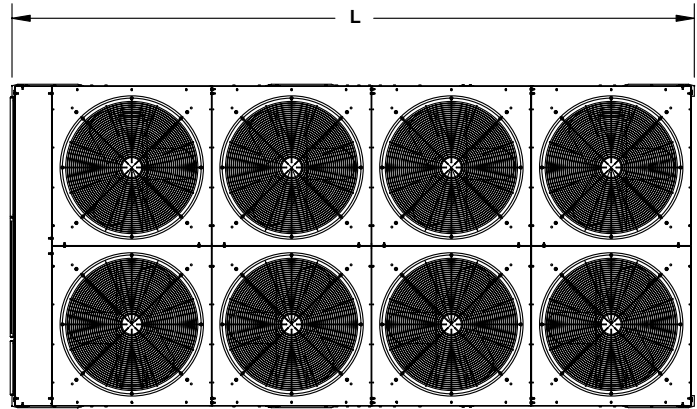

5


YLAA Models	L (length)	W (width)	H (height)	F	P	D	C1	C2	R4	R3	R2	R1
YLAA0125HE	187.5	88.3	94.2	88.5	42.8	15	18.6	85	NA	58	66	39
YLAA0135SE	187.5	88.3	94.2	88.5	42.8	16.3	19.6	83	NA	58	66	39
YLAA0141HE	187.5	88.3	94.2	88.5	42.8	16.3	22.1	102	NA	58	66	39
YLAA0150SE	187.5	88.3	94.2	88.5	42.8	16.3	19.6	83	NA	58	66	39
YLAA0155SE	187.5	88.3	94.2	88.5	42.8	16.3	22	102	NA	58	66	39

NOTE:

Placement on a level surface of free of obstructions (including snow, for winter operation) or air circulation ensures rated performance, reliable operation, and ease of maintenance. Site restrictions may compromise minimum clearances indicated below, resulting in unpredictable airflow patterns and possible diminished performance. Johnson Controls unit controls will optimize operation without nuisance high-pressure safety cutouts; however, the system designer must consider potential performance degradation. Access to the unit control center assumes the unit is no higher than on spring isolators. Recommended minimum clearances: Side to wall – 6'; rear to wall – 6'; control panel to end wall – 4'0"; top – no obstructions allowed; distance between adjacent units – 10'. No more than one adjacent wall may be higher than the unit.

DIMENSIONS – YLAA0156 - 0175 (ENGLISH)

TEN FAN UNITS

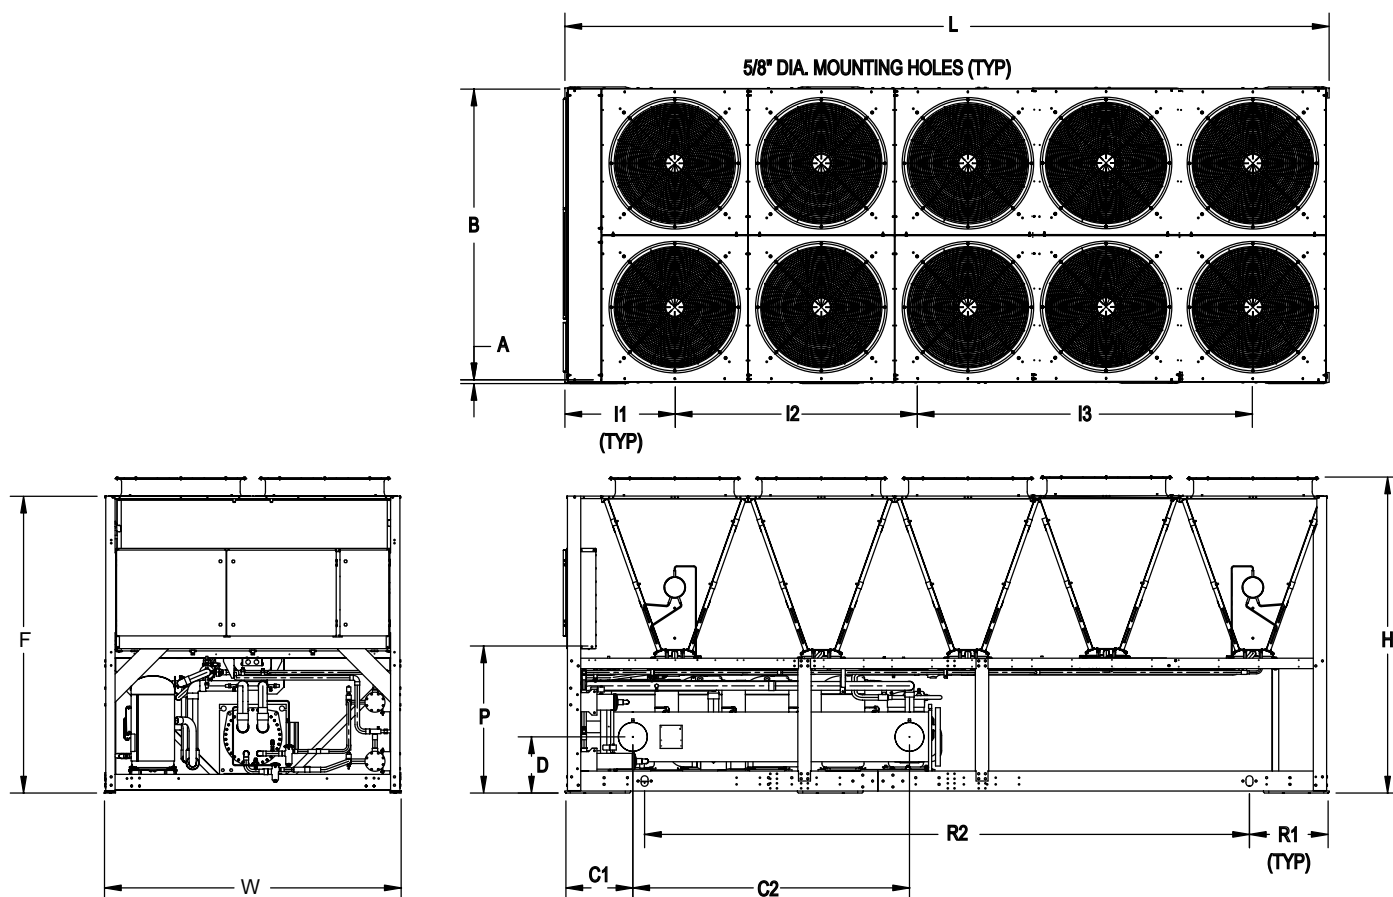


YLAA Model	L (length)	W (width)	H (height)	F	P	D	C1	C2	R4	R3	R2	R1
YLAA0156HE	232.7	88.25	94.2	88.5	42.75	16.25	19.6	83	58.0	43	83	23
YLAA0170SE	232.7	88.25	94.2	88.5	42.75	16.25	19.6	83	58.0	43	83	23
YLAA0175HE	232.7	88.25	94.2	88.5	42.75	17.25	22.13	102	58.0	43	83	23

NOTE:

Placement on a level surface of free of obstructions (including snow, for winter operation) or air circulation ensures rated performance, reliable operation, and ease of maintenance. Site restrictions may compromise minimum clearances indicated below, resulting in unpredictable airflow patterns and possible diminished performance. Johnson Controls unit controls will optimize operation without nuisance high-pressure safety cutouts; however, the system designer must consider potential performance degradation. Access to the unit control center assumes the unit is no higher than on spring isolators. Recommended minimum clearances: Side to wall – 6'; rear to wall – 6'; control panel to end wall – 4'0"; top – no obstructions allowed; distance between adjacent units – 10'. No more than one adjacent wall may be higher than the unit.

TECHNICAL DATA – CLEARANCES

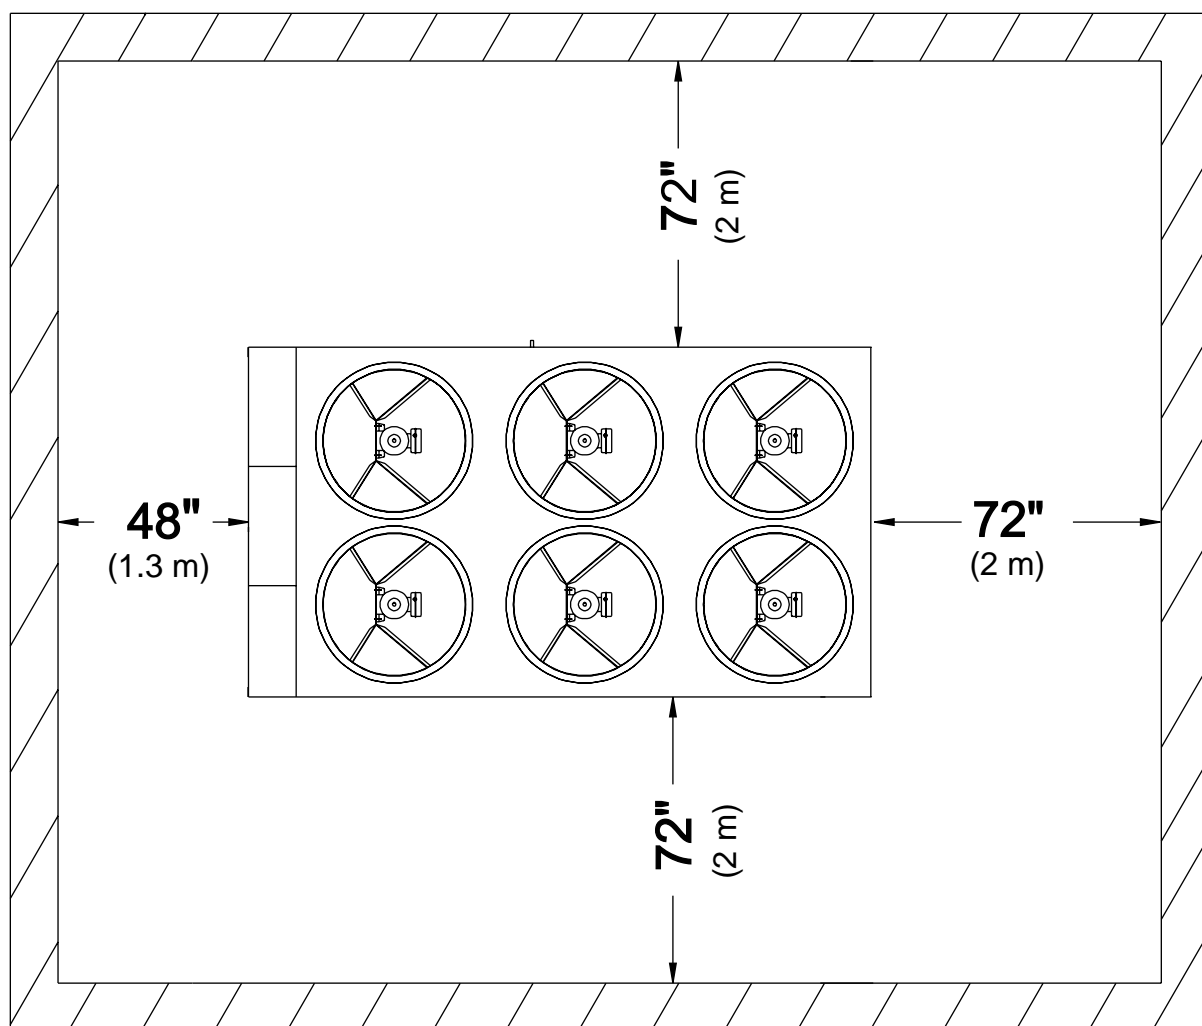

5

LD13243

NOTES:

1. No obstructions allowed above the unit.
2. Only one adjacent wall may be higher than the unit.
3. Adjacent units should be 10 feet (3 Meters) apart.

FIG. 25 – UNIT CLEARANCES – ALL MODELS

WEIGHT DISTRIBUTION AND ISOLATOR MOUNTING POSITIONS

General


Weights of specific chiller models vary significantly as options are added. As a result, total weights, weights at individual isolator positions, and actual isolator selection at each position cannot be published due to the vast number of possible combinations. This information will be available when the specific chiller/ option selection is made from the local Johnson Controls sales office. Be aware, weights will change with each option along with possible isolator changes. Weights and isolators may need to be recalculated when the option selections are changed.

Whenever the isolator option is ordered, the isolators will be shipped loose with the chiller. Packed with the isolators and also in the control panel information packet is a drawing and table specifically for each chiller, based on the option selection. The drawing and table will be similar to the two samples shown below and on the following page. The drawing will show the isolator locations along with the weight in pounds and kilograms at the specific location, isolator position, and location measurements for each isolator.

Sample Isolator Location Drawing

Order No: 082533060301
Line No: 1
Product: YLAA
Model: YLAA0101HE46XAA
Volatage: 46
Remote clr: X
Sound encl: X


Unit Shipping Weight (Display on unit data nameplate)	kg	lbs.
	2631	5801

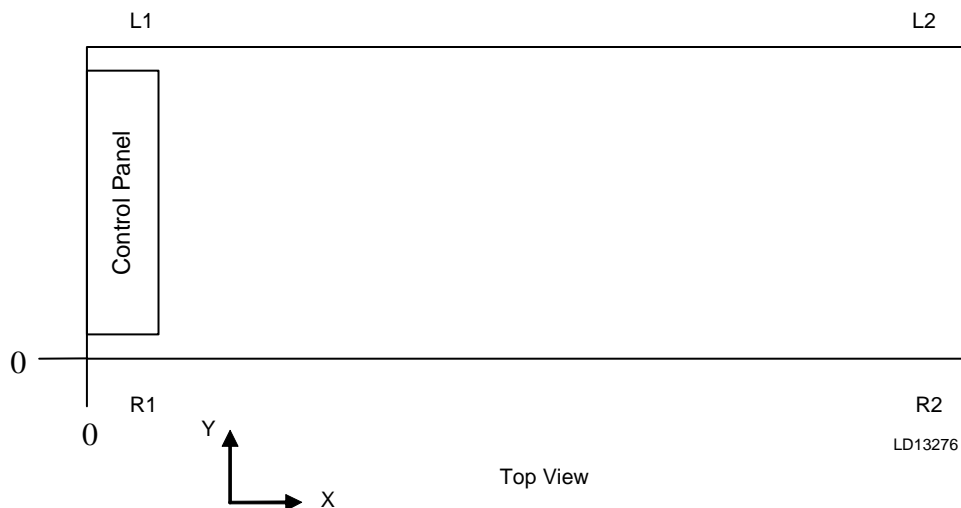

Location	X Distance inches (mm)	Y Distance inches (mm)	Vendor Number	Operating Weight lbs (kg)
R1	7.6 (193.0)	1.36 (34.5)	ND-D / Yellow	1312 (595.1)
L1	7.6 (193.0)	86.86 (2206.2)	ND-DS / Yellow	1843 (836.0)
R2	124.76 (3168.9)	1.36 (34.5)	ND-D / Yellow	1280 (580.6)
L2	124.76 (3168.9)	86.86 (2206.2)	ND-DS / Yellow	1793 (813.3)


SAMPLE PRINTOUT SUPPLIED IN THE ISOLATOR PACKAGE AND IN THE CHILLER PANEL LITERATURE PACKET.

ISOLATOR LOCATIONS

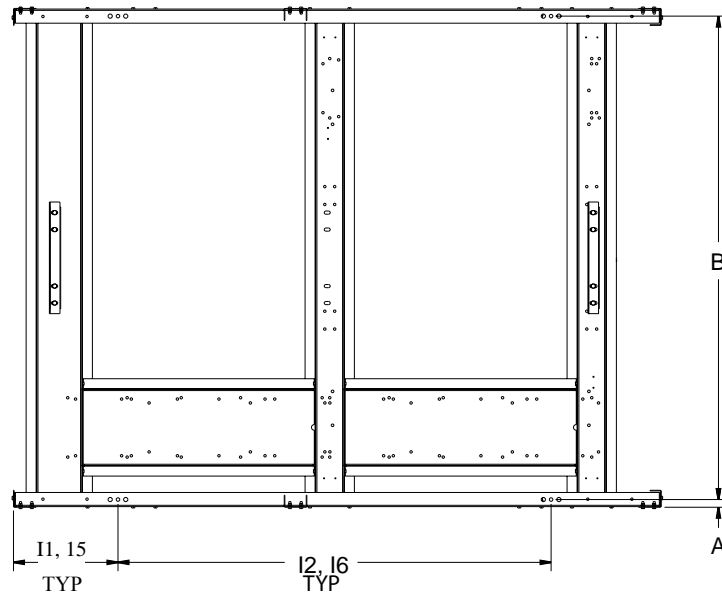

YLAA Model	AVM LOCATIONS									
	I1	I2	I3	I4	I5	I6	I7	I8	A	B
YLAA0070SE	19.5	76.6			19.5	76.6			1.4	85.5
YLAA0080SE	19.5	76.6			19.5	76.6			1.4	85.5
YLAA0090SE	19.5	76.6			19.5	76.6			1.4	85.5


5

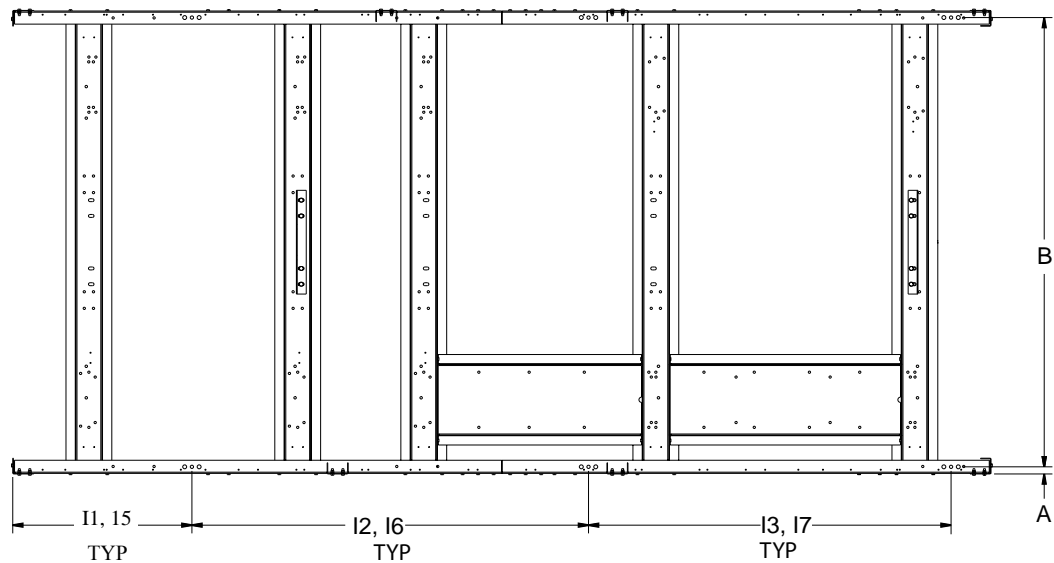

YLAA Model	AVM LOCATIONS									
	I1	I2	I3	I4	I5	I6	I7	I8	A	B
YLAA0091HE	7.6	117.2			7.6	117.2			1.4	85.5
YLAA0100SE	7.6	117.2			7.6	117.2			1.36	85.5
YLAA0101HE	7.6	117.2			7.6	117.2			1.36	85.5
YLAA0115SE	7.6	117.2			7.6	117.2			1.36	85.5
YLAA0120SE	7.6	117.2			7.6	117.2			1.36	85.5

NOTE: All dimensions in inches.


ISOLATOR LOCATIONS (CONT'D)

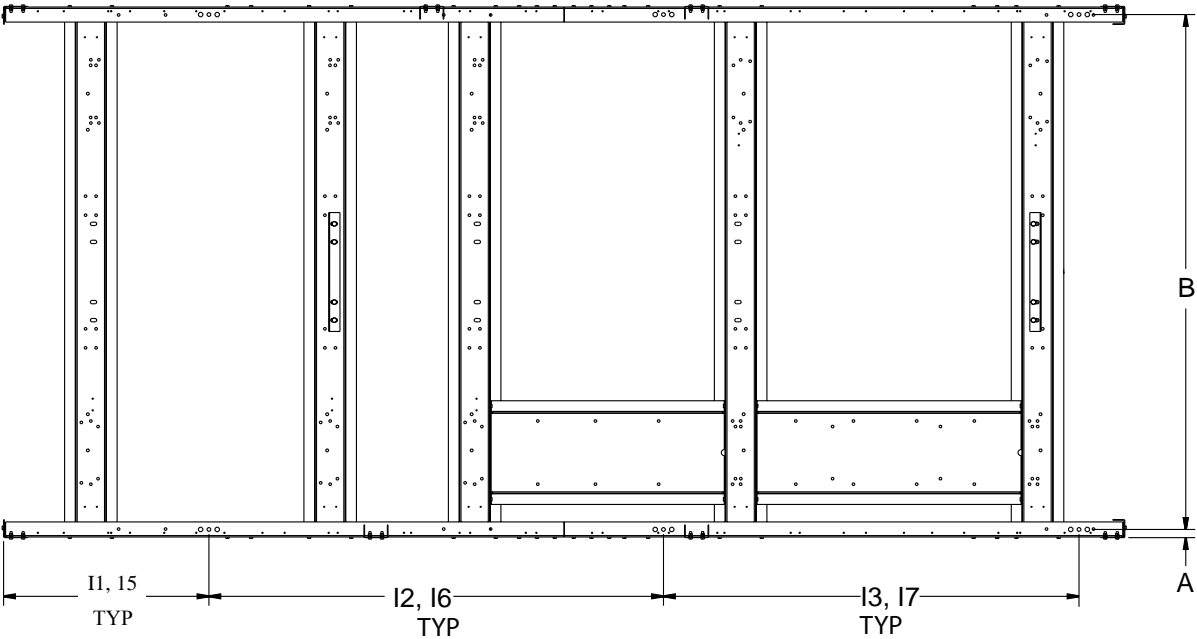

YLAA Model	AVM LOCATIONS									
	I1	I2	I3	I4	I5	I6	I7	I8	A	B
YLAA0125HE	7.6	69	80		7.6	69	80		1.4	85.5
YLAA0135SE	7.6	69	80		7.6	69	80		1.4	85.5
YLAA0141HE	7.6	69	80		7.6	69	80		1.4	85.5
YLAA0150SE	7.6	69	80		7.6	69	80		1.4	85.5
YLAA0155SE	7.6	69	80		7.6	69	80		1.4	85.5

NOTE: All dimensions in inches.

ISOLATOR LOCATIONS (CONT'D)

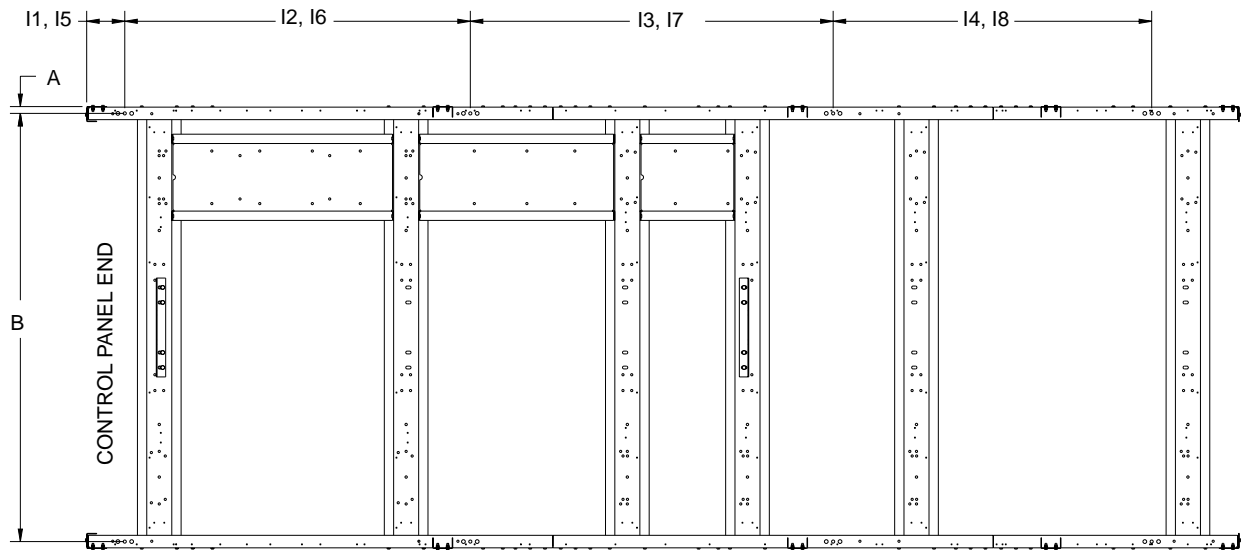

YLAA Model	AVM LOCATIONS									
	I1	I2	I3	I4	I5	I6	I7	I8	A	B
YLAA0156HE	7.6	69	72.5	63.6	7.6	69	72.5	63.6	1.36	85.5
YLAA0170SE	7.6	69	72.5	63.6	7.6	69	72.5	63.6	1.36	85.5
YLAA0175HE	7.6	69	72.5	63.6	7.6	69	72.5	63.6	1.36	85.5


NOTE: All dimensions in inches.

ISOLATOR INFORMATION

(For units shipped on or after June 15, 2008)

ONE INCH DEFLECTION SPRING ISOLATOR CROSS-REFERENCE

CP

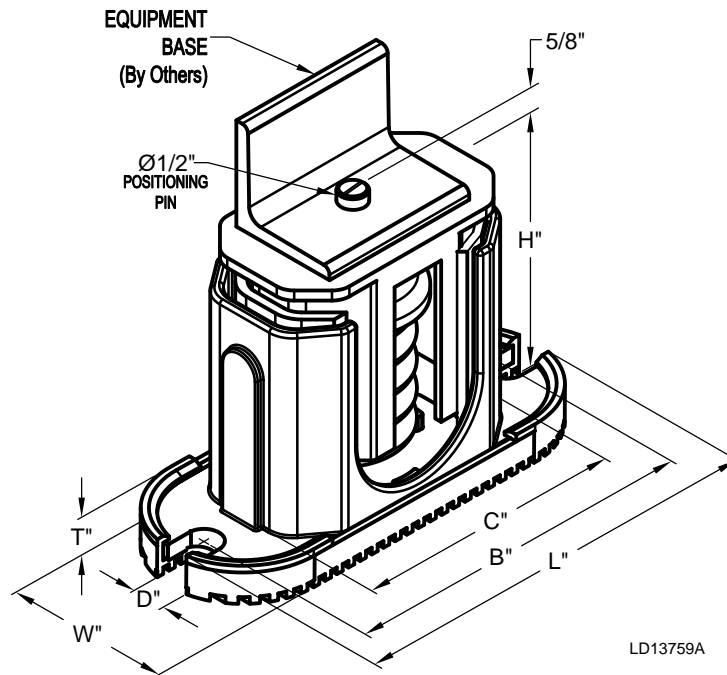

Mount Type	Dimension Data (Inches)						
	W	D	L	B	C	T	H
CP1	3	5/8	7-3/4	6-1/2	4-3/4	1/2	5-5/8
CP2	3	5/8	10-1/2	9-1/4	7-3/4	9/16	6


MODEL NUMBER	RATED CAPACITY (LBS)	DEFLECTION RATED (IN)	COLOR CODE
CP1-1D-85	85	1.360	LT. PURPLE
CP1-1D-120	120	1.200	DK. YELLOW
CP1-1D-175	175	1.170	DK. BLUE
CP1-1D-250	250	1.400	YELLOW
CP1-1D-340	340	1.130	RED
CP1-1D-510	510	1.020	BLACK
CP1-1D-675	675	1.320	DK. PURPLE
CP1-1D-900	900	1.020	DK. GREEN
CP1-1D-1200	1200	0.900	GRAY
CP1-1D-1360	1360	0.770	WHITE
CP1-1D-1785N	1785	0.880	GRAY/RED

MODEL NUMBER	RATED CAPACITY (LBS)	DEFLECTION RATED (IN)	COLOR CODE
CP2-1D-1020	1020	1.020	BLACK
CP2-1D-1350	1350	1.320	DK. PURPLE
CP2-1D-1800	1800	1.020	DK. GREEN
CP2-1D-2400	2400	0.900	GRAY
CP2-1D-2720	2720	0.770	WHITE
CP2-1D-3570N	3570	0.880	GRAY / RED

ONE INCH DEFLECTION SPRING ISOLATORS INSTALLATION INSTRUCTIONS

Units shipped on or after June 15, 2008


1. Read instructions in their entirety before beginning installation.
2. Isolators are shipped fully assembled and are to be positioned in accordance with the submittal drawings or as otherwise recommended.
3. Set isolators on floor, housekeeping pad or sub-base, ensuring that all isolators centerlines match the equipment mounting holes. The VMC group recommends that the isolator base ("B") be installed on a level surface. Shim or grout as required, leveling all isolator bases to the same elevation (1/4-inch maximum difference can be tolerated).
4. Bolt or anchor all isolators to supporting structure utilizing base slotted holes ("C").
5. Place equipment on top of isolators making sure that mounting holes of the equipment line up with isolator positioning pin ("H").
6. The adjustment process can only begin after the equipment or machine is at its full operating weight.
7. Adjust each isolator in sequence by turning spring adjusting bolt ("D") one full counterclockwise turn at a time. Repeat this procedure on all isolators, one at a time.
8. Continue adjusting each isolator until a minimum of 1/4" clearance is achieved between the lower housing and upper housing. (See drawing below).
9. Fine adjust isolators to level equipment.
10. Installation is complete.

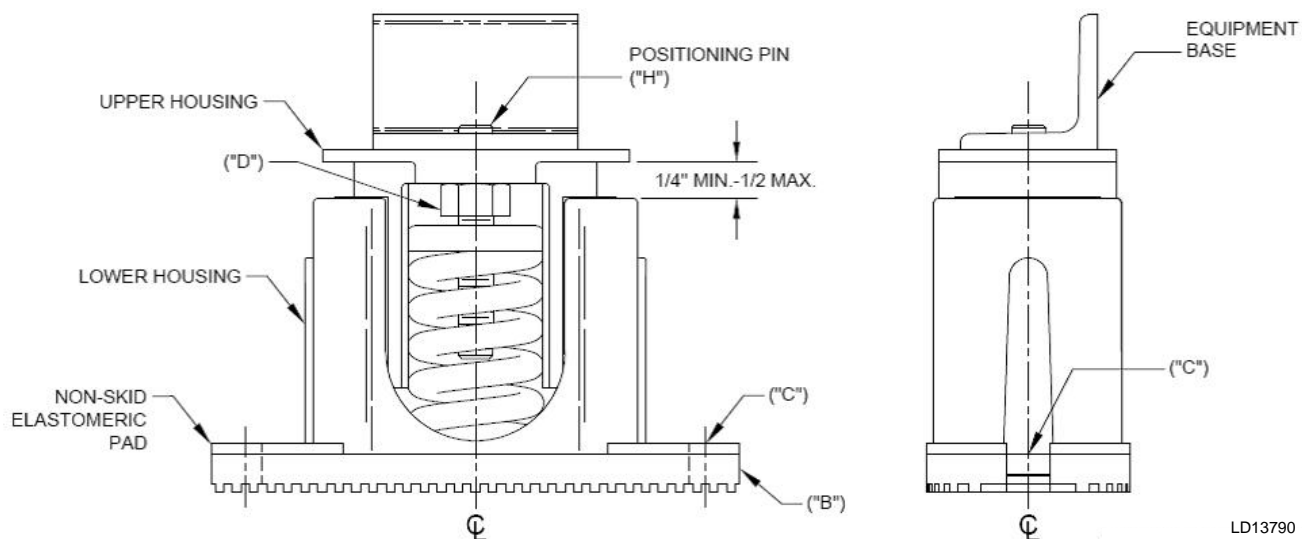

LD13790

SEISMIC ISOLATOR CROSS-REFERENCE

Units shipped on or after June 15, 2008

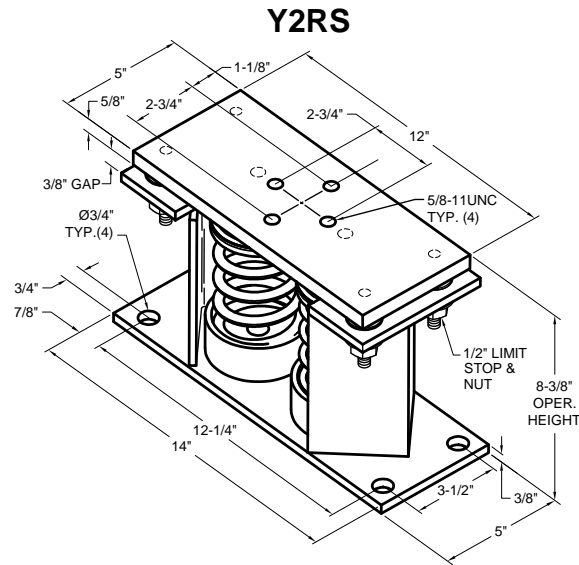

LD13761A

Notes:

1. All dimensions are in inches, interpret per ANSI Y14.
2. Standard finish: housing-powder coated (color, black), spring-powder coated (color, see table below) hardware - zinc-electroplate.
3. Equipment must be bolted or welded to the top plate to meet allowable seismic ratings.
4. All springs are designed for 50% overload capacity with exception of the 2D-3280N and 2D-2870.
5. *Refer to next page for installation instructions.*
6. Consult factory for concrete installation.


MODEL Y2RSI-2D SEISMICALLY RESTRAINED VIBRATION ISOLATOR FOR 2" DEFLECTION

SEISMIC MOUNT SIZE	RATED LOAD (LBS)	RATED DEFLECTION (IN)	SPRING RATE (LBS/IN)	SOLID LOAD (LBS)	COLOR CODE	ALLOWABLE G RATING HORIZONTAL
Y2RSI-2D-150	150	2.4	62	234	WHITE	34.7
Y2RSI-2D-320	320	2.3	140	490	YELLOW	16.3
Y2RSI-2D-460	460	2.3	200	688	GREEN	11.3
Y2RSI-2D-710	710	2.2	330	1072	DK BROWN	7.3
Y2RSI-2D-870	870	1.9	460	1312	RED	6
Y2RSI-2D-1200N	1200	1.9	638	1818	RED/BLACK	4.3
Y2RSI-2D-1450	1450	1.8	900	2450	TAN	3.6
Y2RSI-2D-1690	1690	1.7	1140	2892	PINK	3.1
Y2RSI-2D-2000N	2000	1.7	1318	3342	PINK/BLACK	2.6
Y2RSI-2D-2640N	2640	1.5	1854	4283	PINK/GRAY	2
Y2RSI-2D-2870N	3080	1.5	2004	4629	PINK/GRAY/ ORANGE	1.7
Y2RSI-2D-3280N	3740	1.8	2134	4930	PINK/GRAY/DK BROWN	1.4

SEISMIC ISOLATOR INSTALLATION AND ADJUSTMENT

Units shipped on or after June 15, 2008

1. Read instructions in their entirety before beginning installation.
2. Isolators are shipped fully assembled and are to be positioned in accordance with the submittal drawings or as otherwise recommended.
3. Set isolators on floor, housekeeping pad, or sub-base, ensuring that all isolator centerlines match the equipment mounting holes. The VMC group recommends that the isolator base plates ("B") be installed on a level surface. Shim or grout as required, leveling all isolator base plates to the same elevation (1/4-inch maximum difference can be tolerated).
4. Bolt or anchor all isolators to supporting structure utilizing base plate thru holes ("C") or weld base plate to supporting structure with 3/8 fillet weld 2" long @ 4" on center around entire base plate or as engineered for specific load and or field conditions.
5. Isolators are shipped to the job site with (2) removable spacer shims ("E") between the top plate and the housing. These shims must be in place when the equipment is positioned over the isolators.
6. With all shims ("E") in place, position equipment on top of plate ("A") of isolator. Bolt equipment securely to top plate of isolator using a minimum of (2) 5/8 UNC A325 grade 5 SAE bolts or weld equipment or bracket to the top plate ("A") of isolator with a minimum of 3/8 fillet welds 2" long @ 3" on center for a minimum total weld of 10". (All sides of equipment or bracket resting on top plate ("A") must be welded).
7. The adjustment process can only begin after the equipment or machine is at its full operating weight.
8. Back off each of the (4) limit stop lock nuts ("F") on isolators 1/2".
9. Adjust each isolator in sequence by turning spring adjusting nuts ("G") one full clockwise turn at a time. Repeat this procedure on all isolators, one at a time. Check the limit stop lock nuts ("F") periodically to ensure that clearance between the washer and rubber grommet is maintained. Stop adjustment of isolator only when the top plate ("A") has risen just above the shim ("E").
10. Remove all spacer shims ("E").
11. Fine adjust isolators to level equipment.
12. Adjust all limit stop lock nuts ("F") per isolator, maintaining a 1/4 to 3/8 inch gap. The limit stop nuts must be kept at this gap to ensure uniform bolt loading during uplift (as the case when equipment is drained).
13. Installation is complete.

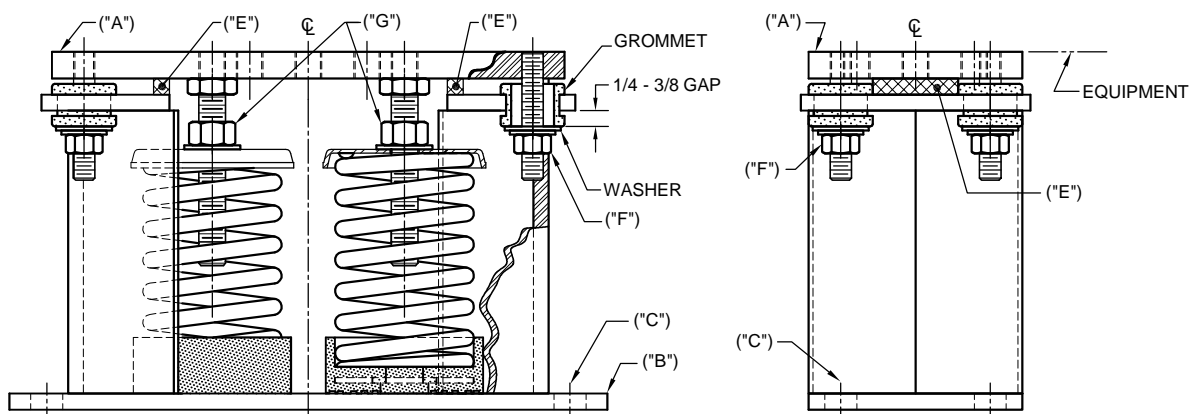


LD13763B

DURALENE ISOLATOR CROSS-REFERENCE

Units shipped on or after June 15, 2008

RD-Style Isolators

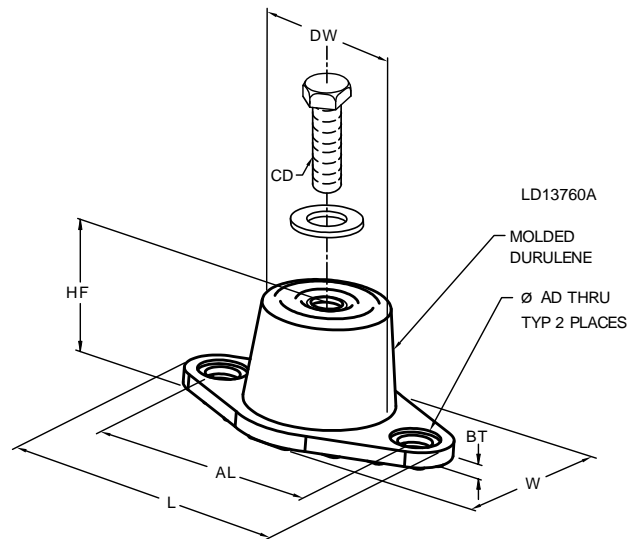

1. All dimensions are inches, interpreted per ANSI Y14.
2. Refer to next page for installation instructions.
3. Mount molded in weather resistant duralene compound as standard. Also available in other materials such as natural rubber, extreme high temperature silicone, high-damped silicone, nitrile and EDPM.
4. AL = Mounting hole center to center spacing.
5. HF = Free height of mount, prior to loading. Operating height calculated by the free height less the static deflection under load. All dimensions for reference only.
6. Hardware zinc-electroplated.

MOUNT TYPE	DIMENSION DATA (INCHES)							
	L	W	HF	AL	AD	BT	CD	DW
RD1-WR	3.13	1.75	1.25	2.38	0.34	0.19	5/16-18 UNC X 3/4	1.25
RD2-WR	3.88	2.38	1.75	3.00	0.34	0.22	3/8-16 UNC X 1	1.75
RD3-WR	5.50	3.38	2.88	4.13	0.56	0.25	1/2-13 UNC X 1	2.50
RD4-WR	6.25	4.63	2.75	5.00	0.56	0.38	1/2-13 UNC X 1	3.00

MODEL NUMBER	RATED CAPACITY (LBS)	RATED DEFLECTION (IN)	DURO (± 5)
RD2-LIGHT BLUE-WR	35	0.4	30
RD2-BROWN-WR	45	0.4	40
RD2-BRICK RED-WR	70	0.4	50
RD 2-LIME-WR	120	0.4	60

MODEL NUMBER	RATED CAPACITY (LBS)	RATED DEFLECTION (IN)	DURO (± 5)
RD3-BROWN-WR	250	0.5	40
RD3-BRICK RED-WR	525	0.5	50
RD3-LIME-WR	750	0.5	60
RD3 CHARCOAL-WR	1100	0.5	70



MODEL NUMBER	RATED CAPACITY (LBS)	RATED DEFLECTION (IN)	DURO (± 5)
RD2-LIGHT BLUE-WR	135	0.5	30
RD2-BROWN-WR	170	0.5	40
RD2-BRICK RED-WR	240	0.5	50
RD 2-LIME-WR	380	0.5	60
RD2 CHARCOAL-WR	550	0.5	70

MODEL NUMBER	RATED CAPACITY (LBS)	RATED DEFLECTION (IN)	DURO (± 5)
RD4-BROWN-WR	1500	0.5	40
RD4-BRICK RED-WR	2250	0.5	50
RD4-LIME-WR	3000	0.5	60
RD4 CHARCOAL-WR	4000	0.5	70

INSTALLATION OF DURULENE VIBRATION ISOLATORS

Units shipped on or after June 15, 2008

1. Read instructions in their entirety before beginning installation.
2. Isolators are shipped fully assembled and are to be positioned in accordance with the submittal drawings or as otherwise recommended.
3. Set isolators on floor, housekeeping pad, or sub-base, ensuring that all isolator centerlines match the equipment mounting holes. The VMC group recommends that the isolator base ("A") be installed on a level surface. Shim or grout as required, leveling all isolator bases to the same elevation (1/32-inch maximum difference can be tolerated).
4. Bolt or anchor all isolators to supporting structure utilizing base thru holes ("B").
5. Remove top bolt and top washer. Place equipment on top of isolators so that mounting holes in equipment or base line up with threaded hole ("C").
6. Reinstall top bolt and washer and tighten down.
7. Installation is complete.

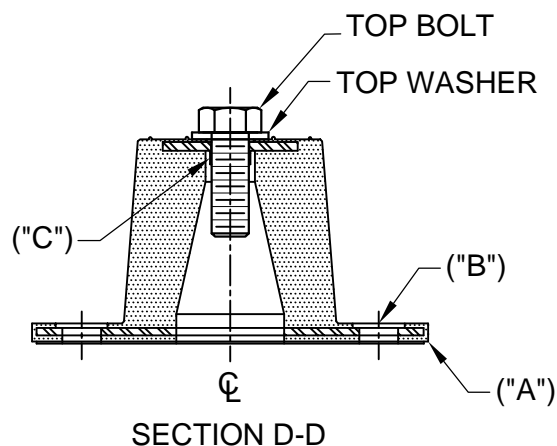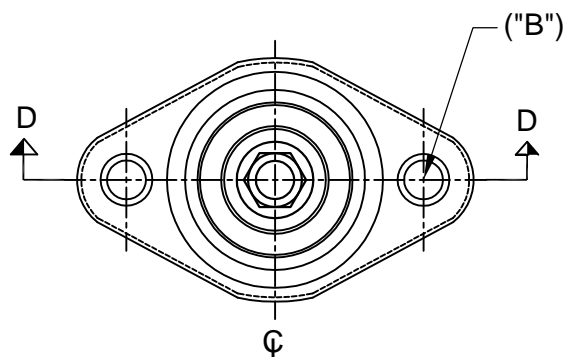


LD13762B

ISOLATOR INFORMATION

(For units shipped before June 15, 2008)

SLRS SEISMIC ISOLATOR SPECIFICATIONS

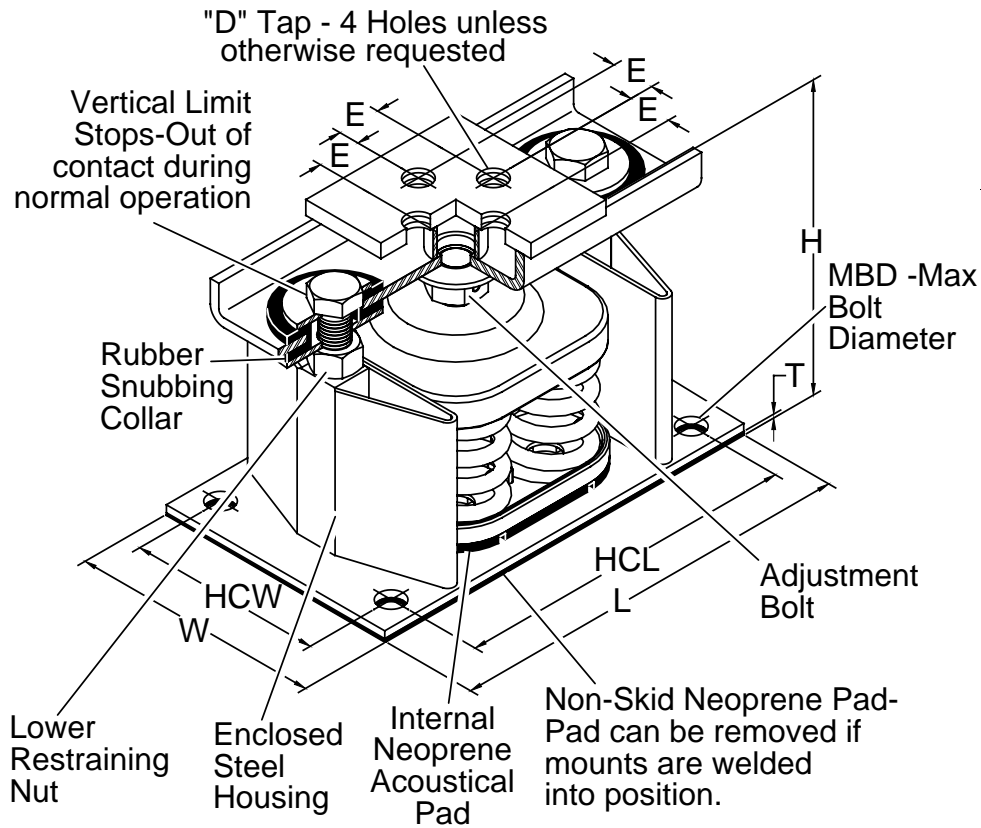

LD10509

NOTES: Illustration above shows a SLRS-4-C2 (4 Springs). SLRS-8-2 & C2 have one spring, and SLRS-2-C2 has two springs. SLRS-6-C2 has six springs and SLRS-9-C2 has nine springs.

PIN 54 = S				
*Weight Range (lbs)	*Weight Range (kg)	Vendor P/N	COLOR	YORK P/N
UP TO 358 LBS	Up to 162 kg	SLRS-2-C2-420	Red	029-24585-006
358-442 LBS	162 to 201 kg	SLRS-2-C2-520	White	029-24585-007
443-581 LBS	201 to 264 kg	SLRS-2-C2-660	Black	029-24585-008
582-782 LBS	264 to 335 kg	SLRS-2-C2-920	Blue	029-24585-009
783-1037 LBS	335 to 471 kg	SLRS-2-C2-1220	Green	029-24585-010
1038-1496 LBS	471 to 679 kg	SLRS-2-C2-1760	Gray	029-24585-011
1497-2057 LBS	679 to 933 kg	SLRS-2-C2-2420	Silver	029-24585-012
2058-2618 LBS	933 to 1188 kg	SLRS-2-C2-3080	Gray w/ Red	029-24585-013
2619-3179 LBS	1188 to 1442 kg	SLRS-2-C2-3740	Silver w/ Red	029-24585-014

* Value is de-rated by 15%

SLRS SEISMIC ISOLATOR INSTALLATION AND ADJUSTMENT



Units shipped before June 15, 2008

To install and adjust mounts:

1. Supports for mountings must be leveled to installation's acceptable tolerances.
2. Mountings not subjected to seismic or wind forces do not require bolting to supports.
3. Mountings subjected to seismic or wind forces must be bolted or welded in position.
4. If mountings are welded in position, remove lower friction pad before welding.
5. Set mountings with top channels held in place by the lower restraining nuts and limit stops.
6. Place equipment on mountings and secure by bolting or welding.
7. Hold lower restraining nut in place and turn vertical limit stop bolt counter-clockwise until there

is a 1/8" gap between the bolt head and the steel washer.

8. Turn adjustment bolt 8 turns on each mount.
9. Take one additional complete turn on each adjustment bolt in sequence until the top plate lifts off of the lower restraining nuts. Take no additional turns on that mount. Continue with equal turns on the other mounts until the top plates lift off of the lower restraining nuts of all mounts.
10. Hold the limit stop bolt in place and turn the lower restraining nut clockwise and tighten it against the stanchion. Repeat the same procedure on all mounts.
11. Top plate should remain at a fixed elevation, plus or minus 1/8".

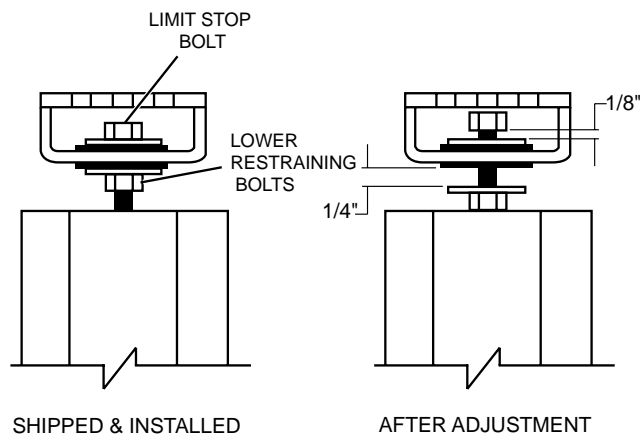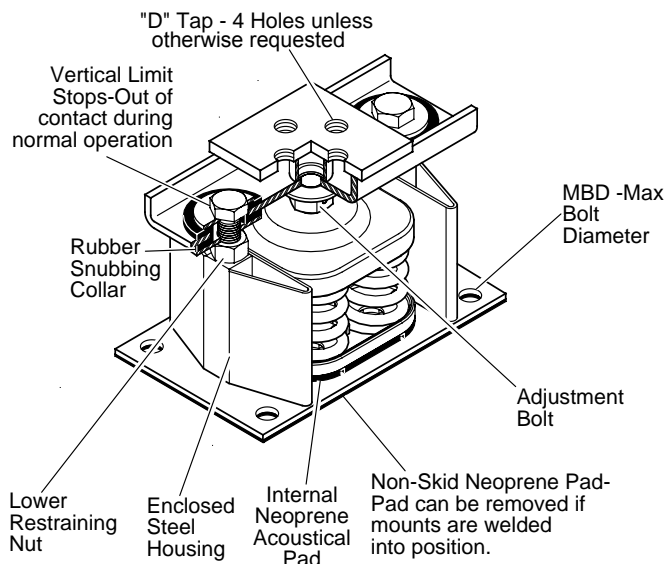


LD10568

ONE INCH DEFLECTION SPRING ISOLATOR CROSS-REFERENCE

Units shipped before June 15, 2008

CIP-X-

Illustration shows single spring CIP-B or CIP-C mount.

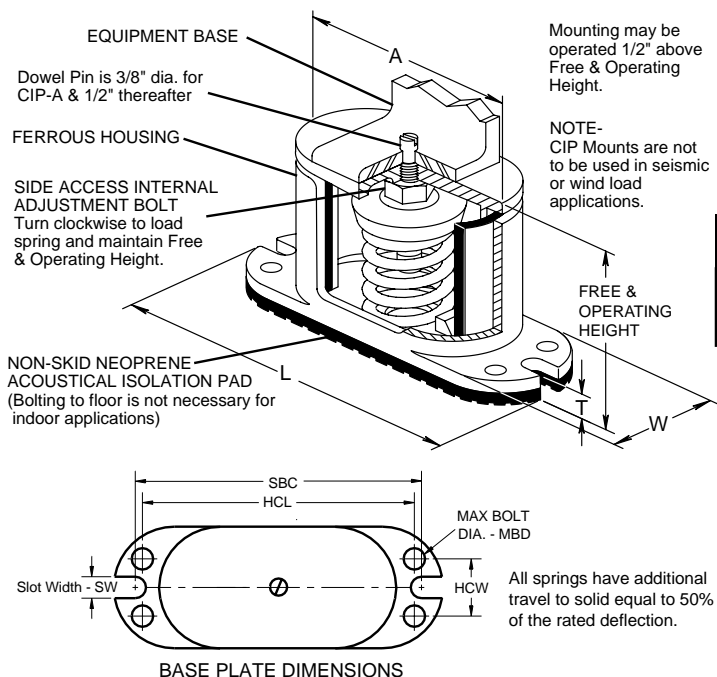

TYPE CIP DIMENSIONS (inches)†

Size	A	L	T	W	SW	HCL	HCW	MBD	SBC	Free Ht.	Min Ht.
CIP-B	5 ³ / ₄	8 ¹ / ₄	1 ¹ / ₂	2 ³ / ₄	7 ¹ / ₁₆	6 ¹ / ₂	1 ¹ / ₂	3 ⁸ / ₈	7 ¹ / ₄	6 ¹ / ₈	5 ¹ / ₄
CIP-C	6 ⁵ / ₈	8 ⁷ / ₈	9 ¹ / ₁₆	3 ¹ / ₂	7 ¹ / ₁₆	7 ¹ / ₄	1 ³ / ₄	3 ⁸ / ₈	7 ⁷ / ₈	6 ³ / ₄	6 ³ / ₄

†Casting dimensions may vary ±1/8"


FOR UNITS WITH <u>ALL</u> POINT LOADS LESS THAN 1404 LBS (637 KG)				
Weight Range (lbs)	Weight Range (kg)	Model Number	Color	YORK P/N
239 to 384 lbs	108 to 174 kg	CIP-B-	Red	029-24583-002
384 to 639 lbs	174 to 290 kg	CIP-B-	White	029-24583-003
639 to 851 lbs	290 to 386 kg	CIP-B-	Blue	029-24583-004
851 to 1064 lbs	386 to 483 kg	CIP-B-	Gray	029-24583-005
1064 to 1404 lbs	483 to 637 kg	CIP-B-	Black	029-24583-006

FOR UNITS WITH <u>ANY</u> POINT LOAD ABOVE 1404 LBS (637 KG)				
Weight Range (lbs)	Weight Range (kg)	Model Number	Color	YORK P/N
Up to 851 lbs	Up to 386 kg	CIP-C-	Black	029-24583-007
851 to 1149 lbs	386 to 521 kg	CIP-C-	Yellow	029-24583-008
1149 to 1489 lbs	521 to 675 kg	CIP-C-	Red w/Black	029-24583-009
1489 to 1786 lbs	675 to 910 kg	CIP-C-	Yellow w/ Red	029-24583-010
1786 to 2028 lbs	910 to 920 kg	CIP-C-	Green w/ Yellow	029-24583-011
2028 to 2254 lbs	920 to 1022 kg	CIP-C-	Red w/ Red	029-24583-012
2254 to 2936 lbs	1022 to 1332 kg	CIP-C-	Green w/ Red	029-24583-013

INSTALLATION OF 1" DEFLECTION MOUNTS

Units shipped before June 15, 2008

1. Floor or steel frame should be level and smooth.
2. For pad installations, isolators do not normally require bolting. If necessary, anchor isolators to floor through bolt holes in the base plate.
3. Lubricate the threads of adjusting bolt. Loosen the hold down bolts to allow for isolator adjustment.
4. Block the equipment 10mm (1/4") higher than the specified free height of the isolator. To use the isolator as blocking for the equipment, insert a 10mm (1/4") shim between the upper load plate and vertical uprights. Lower the equipment on the blocking or shimmed isolators.
5. Complete piping and fill equipment with water, refrigerant, etc.
6. Turn leveling bolt of first isolator four full revolutions and proceed to each mount in turn.
7. Continue turning leveling bolts until the equipment is fully supported by all mountings and the equipment is raised free of the spacer blocks or shims. Remove the blocks or shims.
8. Turn the leveling bolt of all mountings in either direction in order to level the installation.
9. Tighten the nuts on hold down bolts to permit a clearance of 2mm (1/8") between resilient washer and underside of channel cap plate.
10. Installation is now complete.

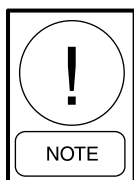


Isolators must be bolted to the sub-structure and the equipment must be bolted to the isolators when outdoor equipment is exposed to wind forces.

NEOPRENE ISOLATOR CROSS-REFERENCE

Units shipped before June 15, 2008

ND-X

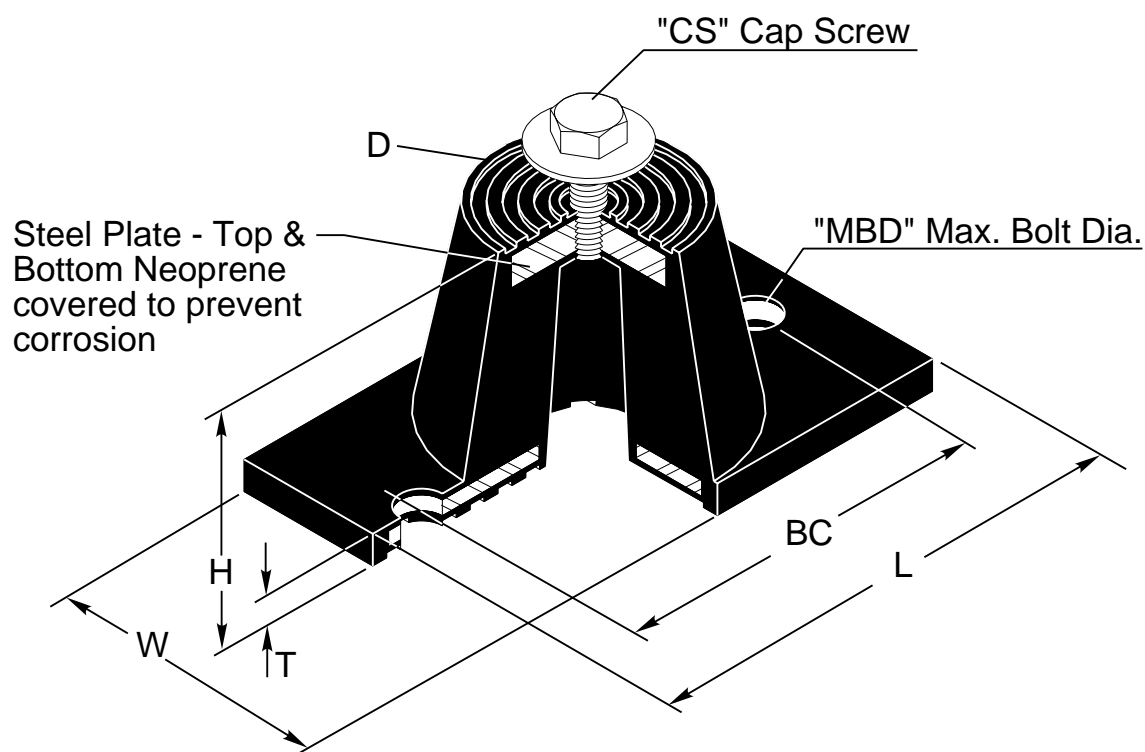

ENGLISH (Inches)								
Size	D	H	L	T	W	BC	CS	MBD
ND-C	2-9/16	2-3/4	5-1/2	1/4	2-5/16	4-1/8	1/2-13 x 1	1/2
ND-D	3-3/8	2-3/4	6-1/4	5/16	4	5	1/2-13 x 1	1/2
ND-DS	3-3/8	2-3/4	6-1/4	5/16	4	5	1/2-13 x 1	1/2


SI (mm)								
Size	D	H	L	T	W	BC	CS	MBD
ND-C	65.1	69.9	139.7	6.4	58.7	101.9	1/2- 13 x 1"	12.7
ND-D	85.7	69.9	158.8	7.9	101.6	127.0	1/2- 13 x 1"	12.7
ND-DS	85.7	69.9	158.8	7.9	101.6	127.0	1/2- 13 x 1"	12.7

Weight Range (lbs)	Weight Range (kg)	Model Number	Color	YORK P/N
Up to 751 lbs	Up to 341 kg	ND-C	Yellow	029-24584-001
751 to 1651 lbs	341 to 749 kg	ND-D	Yellow	029-24584-002
1651 to 3226 lbs	749 to 1463 kg	ND-DS	Yellow	029-24584-004

TWO INCH DEFLECTION, SEISMIC SPRING ISOLATOR CROSS-REFERENCE - SLRS

Units shipped before June 15, 2008

SLRS-2-C2 has 2 springs.

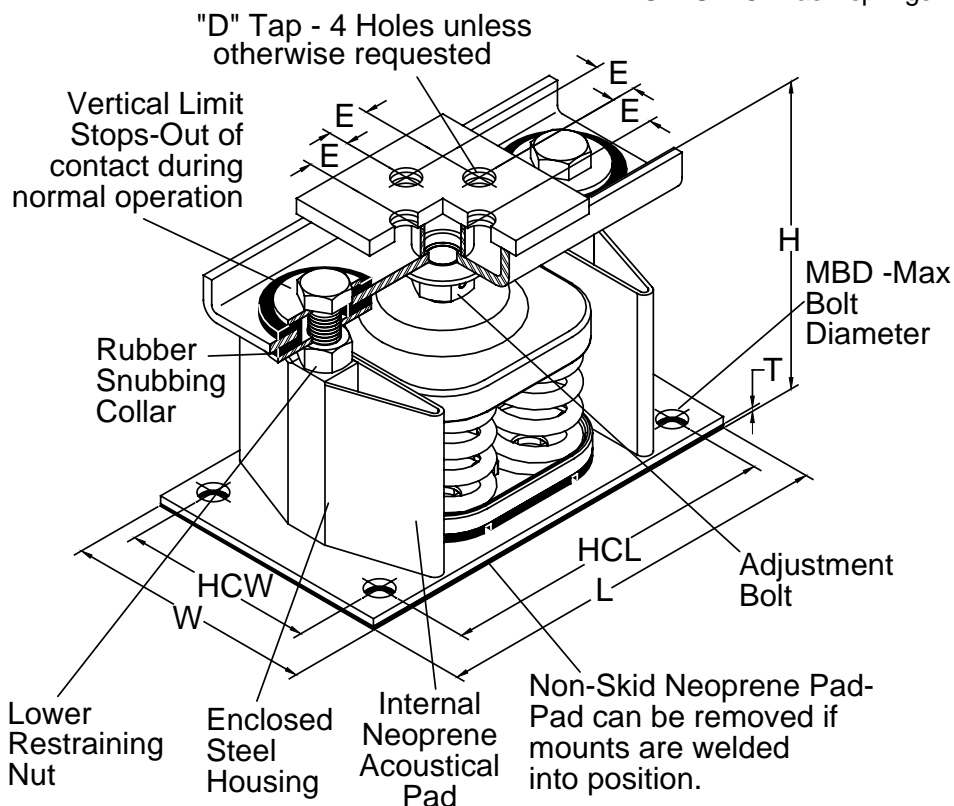

NOTES: Illustration above shows a SLRS-4-C2 (4 springs). SLRS-8-2 & C2 have 1 spring, and SLRS-2-C2 has two springs. SLRS-6-C2 has six springs and SLRS-9-C2 has nine springs.

ENGLISH									
SIZE	H	T	D	E	L	HCL	W	HCW	MBD
2-C2	8-1/2"	3/8"	5/8"	1-3/8"	14"	12-1/4"	5-1/4"	3-1/2"	5/8"

SI									
SIZE	H	T	D	E	L	HCL	W	HCW	MBD
2-C2	215.9	9.5	15.9	34.9	355.6	311.2	133.4	88.9	5/8"

*Weight Range (lbs)	Weight Range (kg)	Model Number	Color	YORK P/N
Up to 358 lbs	Up to 162 kg	SLRS-2-C2-	Red	029-24585-006
358 to 443 lbs	162 to 201 kg	SLRS-2-C2-	White	029-24585-007
443 to 582 lbs	201 to 264 kg	SLRS-2-C2-	Black	029-24585-008
582 to 783 lbs	264 to 335 kg	SLRS-2-C2-	Blue	029-24585-009
783 to 1038 lbs	335 to 471 kg	SLRS-2-C2-	Green	029-24585-010
1038 to 1497 lbs	471 to 679 kg	SLRS-2-C2-	Gray	029-24585-011
1497 to 2058 lbs	679 to 933 kg	SLRS-2-C2-	Silver	029-24585-012
2058 to 2619 lbs	933 to 1188 kg	SLRS-2-C2-	Gray w/ red	029-24585-013
2619 to 3180 lbs	1188 to 1442 kg	SLRS-2-C2-	Silver w/ red	029-24585-014

*Value is de-rated by 15%

SLRS SEISMIC ISOLATOR INSTALLATION AND ADJUSTMENT



Units shipped before June 15, 2008

To install and adjust mounts:

1. Supports for mountings must be leveled to installation's acceptable tolerances.
2. Mountings not subjected to seismic or wind forces do not require bolting to supports.
3. Mountings subjected to seismic or wind forces must be bolted or welded in position.
4. If mountings are welded in position, remove lower friction pad before welding.
5. Set mountings with top channels held in place by the lower restraining nuts and limit stops.
6. Place equipment on mountings and secure by bolting or welding.
7. Hold lower restraining nut in place and turn vertical limit stop bolt counter-clockwise until there


is a 1/8" gap between the bolt head and the steel washer.

8. Turn adjustment bolt 8 turns on each mount.
9. Take one additional complete turn on each adjustment bolt in sequence until the top plate lifts off of the lower restraining nuts. Take no additional turns on that mount. Continue with equal turns on the other mounts until the top plates lift off of the lower restraining nuts of all mounts.
10. Hold the limit stop bolt in place and turn the lower restraining nut clockwise and tighten it against the stanchion. Repeat the same procedure on all mounts.
11. Top plate should remain at a fixed elevation, plus or minus 1/8".

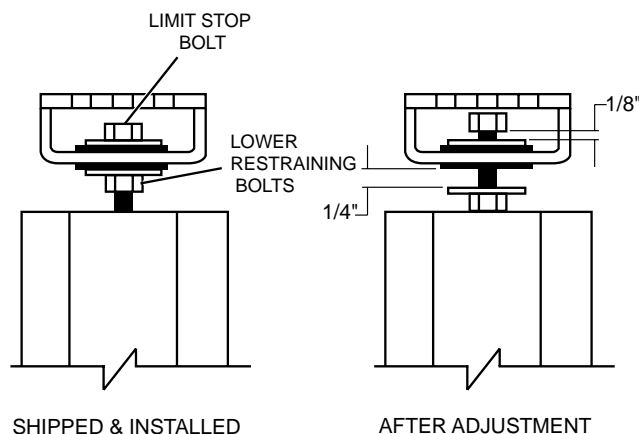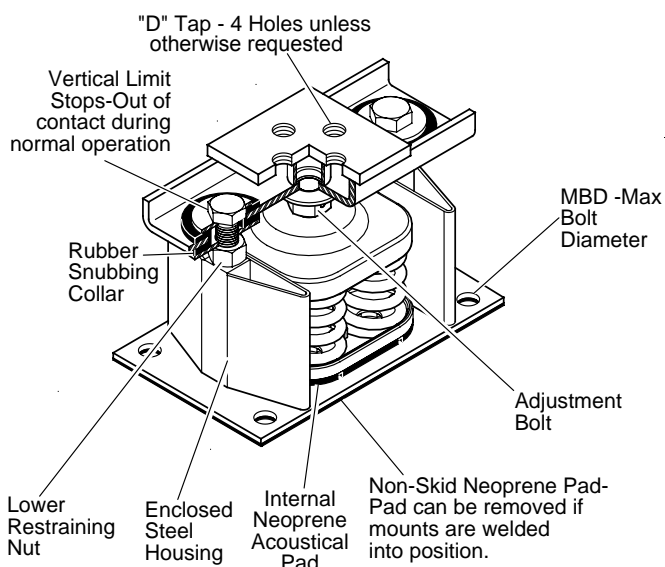

LD10568

SECTION 6 – COMMISSIONING

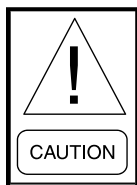

Commissioning of this unit should only be carried out by Johnson Controls Authorized personnel.

Commissioning personnel should be thoroughly familiar with the information contained in this literature, in addition to this section.

Perform the commissioning using the detailed checks outlined in the “*Equipment Pre-Startup and Startup Check List*” (Page 120) as the commissioning procedure is carried out.

PREPARATION – POWER OFF

The following basic checks should be made with the customer power to the unit switched OFF.

Inspection

Inspect unit for installation damage. If found, take action and/or repair as appropriate.

Refrigerant Charge

Packaged units are normally shipped as standard with a full refrigerant operating charge. Check that refrigerant pressure is present in both systems and that no leaks are apparent. If no pressure is present, a leak test must be undertaken, the leak(s) located and repaired. Remote systems and units are supplied with a nitrogen holding charge. These systems must be evacuated with a suitable vacuum pump/recovery unit as appropriate to below 500 microns.

Do not liquid charge with static water in the cooler. Care must also be taken to liquid charge slowly to avoid excessive thermal stress at the charging point. Once the vacuum is broken, charge into the condenser coils with the full operating charge as given in the Technical Data Section.

Service and Oil Line Valves

Open each compressor suction, economizer, and discharge service valve. If valves are of the back-seat type, open them fully (counterclockwise) then close one turn of the stem to ensure operating pressure is fed to pressure transducers. Open the liquid line service valve and oil return line ball valve fully in each system.

Compressor Oil

To add oil to a circuit – connect a YORK hand oil pump (Part No. 470-10654-000) to the 1/4” oil charging connection on the compressors with a length of clean hose or copper line, but do not tighten the flare nut. Using clean oil of the correct type (“V” oil), pump oil until all air has been purged from the hose then tighten the nut. Stroke the oil pump to add oil to the oil system. Approximately 1.8 to 2.3 gallons is present in the each refrigerant system. Oil levels in the oil equalizing line sight glass should be between the bottom and the middle of the sight glass with the system off. High oil levels may cause excessive oil carryover in the system. High oil concentration in the system may cause nuisance trips resulting from incorrect readings on the level sensor and temperature sensors. Temperature sensor errors may result in poor liquid control and resultant liquid overfeed and subsequent damage to the compressor. While running, a visible sign of oil splashing in the sight glass is normal.

Fans

Check that all fans are free to rotate and are not damaged. Ensure blades are at the same height when rotated. Ensure fan guards are securely fixed.

Isolation / Protection

Verify all sources of electrical supply to the unit are taken from a single point of isolation. Check that the maximum recommended fuse sizes given in the Technical Data Section has not been exceeded.

Control Panel

Check the panel to see that it is free of foreign materials (wire, metal chips, etc.) and clean out if required.

Power Connections

Check that the customer power cables are connected correctly to the terminal blocks or optional circuit breaker. Ensure that connections of power cables within the panels to the circuit breaker or terminal blocks are tight.


Grounding

Verify that the unit’s protective ground terminal(s) are properly connected to a suitable grounding point. Ensure that all unit internal ground connections are tight.

Supply Voltage

Verify that the site voltage supply corresponds to the unit requirement and is within the limits given in the Technical Data Section.

PREPARATION – POWER ON

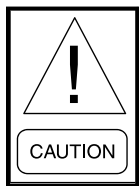

Perform the commissioning using the detailed checks outlined in the EQUIPMENT START-UP CHECK SHEET as the commissioning procedure is carried out.

Apply power to the chiller. Turn ON the option panel circuit breaker if supplied.



The machine is now live!

Switch Settings

Assure the chiller OFF/ON UNIT switch at the bottom of the keypad is OFF. Place the optional circuit breaker handle on the panel door to ON. The customer's disconnection devices can now be set to ON.

Verify the control panel display is illuminated. Assure the system switches under the SYSTEM SWITCHES key are in the OFF position.

Compressor Heaters

Verify the compressor heaters are energized. If the ambient temperature is above 96 °F (36 °C) the compressor heaters must be on for at least 8 hours before start-up to ensure all refrigerant liquid is driven out of the compressor and the oil. If the ambient temperature is below 86 °F (30 °C), allow 24 hours.

Water System

Verify the chilled liquid system has been installed correctly, and has been commissioned with the correct direction of water flow through the cooler. The inlet should be at the refrigerant piping connection end of the cooler. Purge air from the top of the cooler using the plugged air vent mounted on the top of the cooler body.

Flow rates and pressure drops must be within the limits given in the Technical Data Section. Operation outside of these limits is undesirable and could cause damage.

If mains power must be switched OFF for extended maintenance or an extended shutdown period, the compressor suction, discharge and economizer service stop valves should be closed (clockwise). If there is a possibility of liquid freezing due to low ambient temperatures, the coolers should be drained or power should be applied to the chiller. This will allow the cooler heater to protect the cooler from freezing down to -20 °F. Before placing the unit back in service, valves should be opened and power must be switched on (if power is removed for more than 8 hours) for at least 8 hours (24 hours if ambient temperature is below 86 °F [30 °C]) before the unit is restarted.

Flow Switch

Verify a chilled water flow switch is correctly fitted in the customer's piping on the cooler outlet, and wired into the control panel correctly using shielded cable.

There should be a straight run of at least 5 pipe diameters on either side of the flow switch. The flow switch should be connected to terminals 13 and 14 of XTBC1 on the panel.

Temperature Sensor(s)

Ensure the leaving liquid temperature sensor is coated with heat conductive compound (Part No. 013-00890-000) and is inserted to the bottom of the water outlet sensor well in the cooler. This sensor also provides some freeze protection and must always be fully inserted in the water outlet sensor well.

EQUIPMENT PRE-STARTUP AND STARTUP CHECKLIST

JOB NAME: _____
SALES ORDER #: _____
LOCATION: _____
SOLD BY: _____
INSTALLING CONTRACTOR: _____
START-UP TECHNICIAN/ COMPANY: _____
START-UP DATE : _____


CHILLER MODEL #: _____
SERIAL #: _____

Pre-Startup

Checking The System Prior To Initial Start (No Power)

Unit Checks

- ☐ 1. Inspect the unit for shipping or installation damage.
- ☐ 2. Assure that all piping has been completed.
- ☐ 3. Visually check for refrigerant piping leaks.
- ☐ 4. Open suction line ball valve, discharge line ball valve, and liquid line valve for each system.
- ☐ 5. The compressor oil level should be maintained so that an oil level is visible or splashing in the sight glass when fully loaded. At shutdown, the oil level should be between the bottom and middle of the oil equalizing sight glass.
- ☐ 6. Assure water pumps are on. Check and adjust water pump flow rate and pressure drop across the cooler (*see OPERATIONAL LIMITATIONS*). *Verify flow switch operation.*

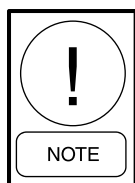

Excessive flow may cause catastrophic damage to the heat exchanger (evaporator).

- ☐ 7. Check the control panel to ensure it is free of foreign material (wires, metal chips, etc.).

- ☐ 8. Visually inspect wiring (power and control). Wiring **MUST** meet N.E.C. and local codes.
- ☐ 9. Check tightness of power wiring inside the power panel on both sides of the motor contactors and overloads.
- ☐ 10. Check for proper size fuses in main and control circuits, and verify overload setting corresponds with RLA and FLA values in electrical tables.
- ☐ 11. Assure 120VAC Control Power to TB1 has 15 amp minimum capacity.
- ☐ 12. Be certain all water temp sensors are inserted completely in their respective wells and are coated with heat conductive compound.
- ☐ 13. Assure that evaporator TXV bulbs are strapped onto the suction lines at 4 or 8 o'clock positions or suction temp. sensors if EEVs are installed.

Compressor Heaters (Power On – 24 Hours Prior To Start)

- ☐ 1. Apply 120VAC and verify its value between terminals 5 and 2 of XTBC2. The voltage should be 120VAC plus or minus 10%.
Power must be applied 24 hours prior to start-up.

Each heater should draw approximately 0.5-1A.

Startup

Panel Checks (Power On – Both Unit Switches Off)

- ☐ 1. Apply 3-phase power and verify its value. Voltage imbalance should be no more than 2% of the average voltage.
- ☐ 2. Apply 120VAC and verify its value on the terminal block in the Power Panel. Make the measurement between terminals 5 and 2 of XTBC2. The voltage should be 120VAC plus or minus 10%.
- ☐ 3. Program/verify the Cooling Setpoints, Program Setpoints, and unit Options. Record the values (*see sections on "Setpoints Key" and "Unit Key" for programming instruction*) in Table 7.
- ☐ 4. Put the unit into Service Mode (as described under the Control Service and Troubleshooting section) and cycle each condenser fan to ensure proper rotation.

TABLE 7 – SETPOINTS ENTRY LIST

OPTIONS	
Display Language	
Sys 1 Switch	
Sys 2 Switch	
Chilled Liquid	
* Ambient Control	
Local/Remote Mode	
Control Mode	
Display Units	
* Lead/Lag Control	
* Fan Control	
Manual Override	
Current Feedback	
** Soft Start	
** Unit Type	
** Refrigerant Type	
** Expansion Valve Type	
COOLING SETPOINTS	
Cooling Setpoint	
Range	
EMS-PWM Max. Setpoint	
PROGRAM	
Discharge Pressure Cutout	
Suct. Pressure Cutout	
Low Amb. Temp. Cutout	
Leaving Liquid Temp. Cutout	
Anti-Recycle Time	
Fan Control On Pressure	
Fan Differential Off Pressure	
Total # of Compressors	
* Number of Fans/System	
* Unit/Sys Voltage	
Unit ID	

* NOT ON ALL MODELS


** VIEWABLE ONLY

- ❑ 5. Prior to this step, turn system 2 off (if applicable –refer to Option 2 under “Unit Keys” section for more information on system switches). Connect a manifold gauge to system 1 suction and discharge service valves.

Place the Unit Switch in the control panel to the “ON” position. As each compressor cycles on, ensure that the discharge pressure rises and the suction pressure decreases. If this does not occur, the compressor being tested is operating in the reverse direction and must be corrected. After verifying proper compressor rotation, turn the Unit Switch to “OFF.”




The chilled liquid setpoint may need to be temporarily lowered to ensure all compressors cycle “on.”

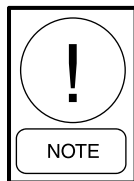

This unit uses scroll compressors which can only operate in one direction. Failure to observe this will lead to compressor failure.

- ❑ 6. Turn system 1 “OFF” and system 2 “ON” (refer to Option 2 under “Unit Keys” section for more information on system switches).

Place the Unit Switch in the control panel to the “ON” position. As each compressor cycles “ON”, ensure that the discharge pressure rises and the suction pressure decreases. If this does not occur, the compressor being tested is operating in the reverse direction and must be corrected. After verifying proper compressor rotation, turn the Unit Switch to “OFF”.

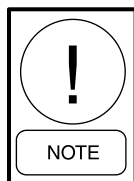

The chilled liquid setpoint may need to be temporarily lowered to ensure all compressors cycle “ON”.

CHECKING SUPERHEAT AND SUBCOOLING

The subcooling temperature of each system can be calculated by recording the temperature of the liquid line at the outlet of the condenser and subtracting it from the liquid line saturation temperature at the liquid stop valve (liquid line saturation temp. is converted from a temperature/pressure chart).

Example:

$$\begin{array}{rcl} \text{Liquid line pressure} = & & \\ 325 \text{ PSIG converted to temp.} & 101 \text{ }^{\circ}\text{F} & \\ \text{minus liquid line temp.} & - 83 \text{ }^{\circ}\text{F} & \\ \text{Subcooling} = & 18 \text{ }^{\circ}\text{F} & \end{array}$$

The subcooling should be adjusted to 18 °F at design conditions.

- ☐ 1. Record the liquid line pressure and its corresponding temperature, liquid line temperature and subcooling below:

	SYS 1	SYS 2	
Liq Line Press =	_____	_____	PSIG
Saturated Temp =	_____	_____	°F
Liq Line Temp =	_____	_____	°F
Subcooling =	_____	_____	°F

After the subcooling is verified, the suction superheat should be checked. The superheat should be checked only after steady state operation of the chiller has been established, the leaving water temperature has been pulled down to the required leaving water temperature, and the unit is running in a fully loaded condition. Correct superheat setting for a system is 10 °F – 15 °F (5.56 °C – 8.33 °C) 18" (46 cm) from the heat exchanger.

Superheat should typically be set for no less than 10 °F with only a single compressor running on a circuit. The superheat is calculated as the difference between the actual temperature of the returned refrigerant gas in the

suction line entering the compressor and the temperature corresponding to the suction pressure as shown in a standard pressure/temperature chart.

Example:

$$\begin{array}{rcl} \text{Suction Temp} = & 46 \text{ }^{\circ}\text{F} & \\ \text{minus Suction Press} & & \\ 105 \text{ PSIG converted to Temp} & - 34 \text{ }^{\circ}\text{F} & \\ \text{Superheat} = & 12 \text{ }^{\circ}\text{F} & \end{array}$$

When adjusting the expansion valve (TXV only), the adjusting screw should be turned not more than one turn at a time, allowing sufficient time (approximately 15 minutes) between adjustments for the system and the thermal expansion valve to respond and stabilize.

Assure that superheat is set at a minimum of 10 °F (5.56 °C) with a single compressor running on each circuit.

- ☐ 2. Record the suction temperature, suction pressure, suction saturation temperature, and superheat of each system below:

	SYS 1	SYS 2	
Suction Temp =	_____	_____	°F
Suction Pressure =	_____	_____	PSIG
Saturation Temp =	_____	_____	°F
Superheat =	_____	_____	°F

LEAK CHECKING

- ☐ 1. Leak check compressors, fittings, and piping to ensure no leaks.

If the unit is functioning satisfactorily during the initial operating period, no safeties trip and the compressors cycle to control water temperature to setpoint, the chiller is ready to be placed into operation.

UNIT OPERATING SEQUENCE

The operating sequence described below relates to operation on a hot water start after power has been applied, such as start-up commissioning. When a compressor starts, internal timers limit the minimum time before another compressor can start to 1 minute.

1. For the chiller system to run, the Flow Switch must be closed, any remote cycling contacts must be closed, the Daily Schedule must not be scheduling the chiller off, and temperature demand must be present.
2. When power is applied to the system, the microprocessor will start a 2 minute timer. This is the same timer that prevents an instantaneous start after a power failure.
3. At the end of the 2 minute timer, the microprocessor will check for cooling demand. If all conditions allow for start, a compressor on the lead system will start and the liquid line solenoid will open. Coincident with the start, the anti-coincident timer will be set and begin counting downward from “60” seconds to “0” seconds.

If the unit is programmed for Auto Lead/Lag, the system with the shortest average run-time of the compressors will be assigned as the “lead” system. A new lead/lag assignment is made whenever all systems shut down.
4. Several seconds after the compressor starts, that system's first condenser fan will be cycled on (outdoor air temperature is more than 25 °F (-4 °C) or discharge pressure). *See the section on Operating Controls for details concerning condenser fan cycling.*
5. After 1 minute of compressor run time, the next compressor in sequence will start when a system has to load. Additional compressors will be started at 60 second intervals as needed to satisfy temperature setpoint.
6. If demand requires, the lag system will cycle on with the same timing sequences as the lead system after the lead system has run for five minutes. *Refer to the section on Capacity Control for a detailed explanation of system and compressor staging.*
7. As the load decreases below setpoint, the compressors will be shut down in sequence. This will occur at intervals of either 60, 30, or 20 seconds based on water temperature as compared to setpoint, and control mode. *See the section on Capacity Control for a detailed explanation.*
8. When the last compressor in a “system” (two or three compressors per system), is to be cycled off, the system will initiate a pump-down. Each “system” has a pump-down feature upon shut-off. On a non-safety, non-unit switch shutdown, the LLSV will be turned off and the last compressor will be allowed to run until the suction pressure falls below the suction pressure cutout or for 180 seconds, whichever comes first.

SECTION 7 – UNIT CONTROLS

YORK MILLENNIUM CONTROL CENTER



LD13283

INTRODUCTION

The YORK MicroComputer Control Center is a microprocessor based control system designed to provide the entire control for the liquid chiller. The control logic embedded in the microprocessor based control system will provide control for the chilled liquid temperatures, as well as sequencing, system safeties, displaying status, and daily schedules. The MicroComputer Control Center consists of four basic components:

1. IPU II and I/O Boards
2. Transformer
3. Display
4. Keypad

The keypad allows programming and accessing setpoints, pressures, temperatures, cutouts, daily schedule, options, and fault information.

Remote cycling, demand limiting and chilled liquid temperature reset can be accomplished by field supplied contacts.

Compressor starting/stopping and loading/unloading decisions are performed by the Microprocessor to maintain leaving or return chilled liquid temperature. These decisions are a function of temperature deviation from setpoint.

A Master ON/Off switch is available to activate or deactivate the unit.

IPU II AND I/O BOARDS

The IPU and I/O boards are assembled to function as a single microprocessor controller requiring no additional hardware. The IPU II board contains a coldfire microprocessor and is the controller and decision maker in the control panel. The I/O board handles all of the chiller I/O (Inputs and Outputs). System inputs from pressure transducers and temperature sensors are connected to the I/O board. The I/O board contains a processor capable of reading the inputs and controlling the outputs. It communicates through the transition header with the IPU II microprocessor.

The I/O board circuitry multiplexes the analog inputs, digitizes them, and constantly scans them to keep watch on the chiller operating conditions. The input values are transmitted serially to the IPU II microprocessor board. From this information, the IPU II then issues commands to the I/O board relay outputs to control contactors, solenoids, etc. for Chilled Liquid Temperature Control and to react to safety conditions. The I/O board converts logic signals to operate relay outputs to 115 VAC levels used by motor contactors, fan contactors, solenoid valves, etc. to control system operation. The low voltage side of all relay coils on the I/O board are powered by +12V.

Keypad commands are actuated upon by the microprocessor to change setpoints, cutouts, scheduling, operating requirements, and to provide displays. The keypad and display are connected to the I/O board.

The on-board power supply converts 24 VAC from 75 VA, 120/24 VAC 50/60Hz UL listed class 2 power transformer to +12V, +5V and +3.3V using switching and linear voltage regulators located on the I/O and IPU II boards. These voltages are used to operate integrated circuitry on the board. The 40 character display and unit sensors (transducers and temp sensors) are supplied power for the microprocessor board +5V supply. 24V AC is rectified, but not regulated, to provide unregulated +30 VDC to supply all of the digital inputs.

The IPU II board contains one green “Power” LED to indicate that the board is powered up and one red “Status” LED to indicate by blinking that the processor is operating.

The I/O board contains one green “Power” LED to indicate that the board is powered up and one red “Status” LED to indicate by blinking that the processor is operating. The I/O board also contains two sets of Receiver/Transmit LED’s, one for each available serial communication port. The receive LED’s are green, and the Transmit LED’s are red.

A jumper on the I/O board selects 4 to 20mA or 0 to 10 VDC as the input type on the remote temperature reset analog input.

TRANSFORMER

A 75 VA, 120/24VAC 50/60Hz transformer is provided to supply power to the Microprocessor Board, which in turn rectifies, filters, and regulates as necessary to supply power to the display, sensors, and transducers.

DISPLAY

The 40 Character Display (2 lines of 20 characters) is a liquid crystal display used for displaying system parameters and operator messages.

The display in conjunction with the keypad, allows the operator to display system operating parameters as well as access programmed information already in memory. The display has a lighted background for night viewing and for viewing in direct sunlight.

When a key is pressed, such as the OPER DATA key, system parameters will be displayed and will remain on the display until another key is pressed. The system parameters can be scrolled with the use of the ↑ (UP) and ↓ (DOWN) arrow keys. The display will update all information at a rate of about 1 a second.

Display Messages may show characters indicating “greater than” (>) or “less than” (<). These characters indicate the actual values are greater than or less than the limit values which are being displayed.

KEYPAD

The 12 button non-tactile keypad allows the user to retrieve vitals system parameters such as system pressures, temperatures, compressor running times and starts, option information on the chiller, and system setpoints. This data is useful for monitoring chiller operation, diagnosing potential problems, troubleshooting, and commissioning the chiller.

It is essential the user become familiar with the use of the keypad and display. This will allow the user to make full use of the capabilities and diagnostic features available.

UNIT SWITCH

A unit ON/OFF switch is just underneath the keypad. This switch allows the operator to turn the entire unit “OFF” if desired. The switch must be placed in the “ON” position for the chiller to operate.

BATTERY BACK-UP

The IPU II contains a Real Time Clock integrated circuit chip with an internal battery backup. The purpose of this battery backup is to assure any programmed values (setpoints, clock, cutouts, etc.) are not lost during a power failure regardless of the time involved in a power cut or shutdown period.

PROGRAMMING # OF COMPRESSORS

The total number of compressors is programmable under the PROGRAM key. Dual (2) system chillers can have 4, 5, or 6 compressors.

STATUS KEY



00066VIP

Unit Status

Pressing the STATUS key will enable the operator to determine current chiller operating status. The messages displayed will include running status, cooling demand, fault status, external cycling device status. The display will be a single message relating to the highest priority message as determined by the microprocessor. Status messages fall into the categories of General Status and Fault Status.

The following General, Safety, and Warning messages are displayed when the STATUS key is pressed. Following each displayed message is an explanation pertaining to that particular message.

General Status Messages

In the case of messages which apply to individual systems, SYS 1 and SYS 2 messages will both be displayed and may be different. In the case of single system units, all SYS 2 messages will be blank.

**UNIT SWITCH OFF
SHUTDOWN**

This message informs the operator that the UNIT switch on the control panel is in the OFF position which will not allow the unit to run.

**REMOTE CONTROLLED
SHUTDOWN**

The REMOTE CONTROLLED SHUTDOWN message indicates that either an ISN system or RCC has turned the unit "OFF", not allowing it to run.

**DAILY SCHEDULE
SHUTDOWN**

The DAILY SCHEDULE SHUTDOWN message indicates that the daily/holiday schedule programmed is keeping the unit from running.

**REMOTE STOP
NO RUN PERM**

REMOTE STOP NO RUN PERM shows that a remote start/stop contact is open in series with the flow switch. These contacts are connected to Terminals 51 and 13 of XTBC1. A 3-second delay is built into the software to prevent nuisance shutdowns due to erroneous signals on the run permissive input.

**FLOW SWITCH
OPEN**

FLOW SWITCH OPEN indicates the flow switch contacts connected to Terminals 13 and 14 of XTBC1 are open. A 3-second delay is built into software to prevent nuisance shutdowns due to erroneous signals from the flow switch.

**SYS 1 SYS SWITCH OFF
SYS 2 SYS SWITCH OFF**

SYS SWITCH OFF tells that the system switch under OPTIONS is turned "OFF". The system will not be allowed to run until the switch is turned back on.

7

```
SYS 1 NO COOL LOAD
SYS 2 NO COOL LOAD
```

This message informs the operator that the chilled liquid temperature is below the point (determined by the setpoint and control range) that the microprocessor will bring on a system or that the microprocessor has not loaded the lead system far enough into the loading sequence to be ready to bring the lag system “ON”. The lag system will display this message until the loading sequence is ready for the lag system to start.

```
SYS 1 COMPS RUN X
SYS 2 COMPS RUN X
```

The COMPS RUNNING message indicates that the respective system is running due to demand. The “X” will be replaced with the number of compressors in that system that are running.

```
SYS 1 AR TIMER XX S
SYS 2 AR TIMER XX S
```

The anti-recycle timer message shows the amount of time left on the respective systems anti-recycle timer. This message is displayed when the system is unable to start due the anti-recycle timer being active.

```
SYS 1 AC TIMER XX S
SYS 2 AC TIMER XX S
```

The anti-coincidence timer is a software feature that guards against 2 systems starting simultaneously. This assures instantaneous starting current does not become excessively high due to simultaneous starts. The microprocessor limits the time between compressor starts to 1 minute regardless of demand or the anti-recycle timer being timed out. The anti-coincidence timer is only present on two system units.

```
SYS 1 DSCH LIMITING
SYS 2 DSCH LIMITING
```

When this message appears, discharge pressure limiting is in effect. The Discharge Pressure Limiting feature is integral to the standard software control; however the discharge transducer is optional on some models. Therefore, it is important to keep in mind that this control will not function unless the discharge transducer is installed in the system.

The limiting pressure is a factory set limit to keep the system from faulting on the high discharge pressure cutout due to high load or pull down conditions. When the unload point is reached, the microprocessor will automatically unload the affected system by de-energizing one compressor. The discharge pressure unload will occur when the discharge pressure gets within 10 PSIG (0.69 barg) of the programmed discharge pressure cutout. This will only happen if the system is fully loaded and will shut only one compressor off. If the system is not fully loaded, discharge limiting will not go into effect. Reloading the affected system will occur when the discharge pressure drops to 85% of the unload pressure and 10 minutes have elapsed.

```
SYS 1 SUCT LIMITING
SYS 2 SUCT LIMITING
```

When this message appears, suction pressure limiting is in effect. The suction pressure limit is a control point that limits the loading of a system when the suction pressure drops to within 15% above the suction pressure cutout. On a standard system programmed for 44 PSIG/3.0 Bar suction pressure cutout, the microprocessor would inhibit loading of the affected system with the suction pressure less than or equal to $1.15 * 44 \text{ PSIG/3.0 Bar} = 50 \text{ PSIG/3.5 Bar}$. The system will be allowed to load after 60 seconds and after the suction pressure rises above the suction pressure load limit point.

```
SYS 1 LOAD LIMIT XX%
SYS 2 LOAD LIMIT XX%
```

This message indicates that load limiting is in effect and the percentage of the limiting in effect. This limiting could be due to the load limit/pwm input, ISN or RCC controller sending a load limit command.

```
MANUAL
OVERRIDE
```

If MANUAL OVERRIDE mode is selected, the STATUS display will display this message. This will indicate that the Daily Schedule is being ignored and the chiller will start-up when chilled liquid temperature allows, Remote Contacts, UNIT switch and SYSTEM switches permitting. This is a priority message and cannot be overridden by anti-recycle messages, fault messages, etc. when in the STATUS display mode. Therefore, do not expect to see any other STATUS messages when in the MANUAL OVERRIDE mode. MANUAL OVERRIDE is to only be used in emergencies or for servicing. Manual override mode automatically disables itself after 30 minutes.

SYS 1 PUMPING DOWN
SYS 2 PUMPING DOWN

The PUMPING DOWN message indicates that a compressor in the respective system is presently in the process of pumping the system down. When pumpdown is initiated on shutdown, the liquid line solenoid or EEV will close and a compressor will continue to run. When the suction pressure decreases to the suction pressure cutout setpoint or runs for 180 seconds, whichever comes first, the compressor will cycle off.

Fault Safety Status Messages

Safety Status messages appear when safety thresholds in the unit have been exceeded. Safeties are divided into two categories – system safeties and unit safeties. System safeties are faults that cause the individual system to be shut down. Unit safeties are faults that cause all running compressors to be shut down. Following are display messages and explanations.

System Safeties


System safeties are faults that cause individual systems to be shut down if a safety threshold is exceeded for 3 seconds. They are auto reset faults in that the system will be allowed to restart automatically after the fault condition is no longer present. However, if 3 faults on the same system occur within 90 minutes, that system will be locked out on the last fault. This condition is then a manual reset. The system switch (under OPTIONS key) must be turned off and then back on to clear the lockout fault. Fault messages will be displayed whenever a system is locked out.

SYS 1 HIGH DSCH PRES
SYS 2 HIGH DSCH PRES

The Discharge Pressure Cutout is a software cutout in the microprocessor and is backed-up by a mechanical high pressure cutout switch located in the refrigerant circuit. It assures that the system pressure does not exceed safe working limits. The system will shutdown when the programmable cutout is exceeded and will be allowed to restart when the discharge pressure falls 40 PSIG below the cutout. *Discharge transducers must be installed for this function to operate.*

SYS 1 LOW SUCT PRESS
SYS 2 LOW SUCT PRESS

The Suction Pressure Cutout is a software cutout that helps protect the chiller from an evaporator freeze-up should the system attempt to run with a low refrigerant charge or a restriction in the refrigerant circuit.

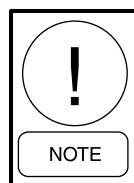

Repeated starts after resetting a low suction pressure fault will cause evaporator freeze-up. Whenever a system locks out on this safety or any safety, immediate steps should be taken to identify the cause.

At system start, the cutout is set to 10% of programmed value. During the next 3 minutes the cutout point is ramped up to the programmed cutout point. If at any time during this 3 minutes the suction pressure falls below the ramped cutout point, the system will stop. *This cutout is completely ignored for the first 30 seconds of system run time to avoid nuisance shutdowns, especially on units that utilize a low pressure switch in place of the suction pressure transducer.*

After the first 3 minutes, if the suction pressure falls below the programmed cutout setting, a “transient protection routine” is activated. This sets the cutout at 10% of the programmed value and ramps up the cutout over the next 30 seconds. If at any time during this 30 seconds the suction pressure falls below the ramped cutout, the system will stop.

SYS 1 MP / HPCO FAULT
SYS 2 MP / HPCO FAULT

SYS 1 MP / HPCO INHIB
SYS 2 MP / HPCO INHIB

The Motor Protector/Mechanical High Pressure Cutout protects the compressor motor from overheating or the system from experiencing dangerously high discharge pressure.

This fault condition is present when CR1 (SYS 1) or CR2 (SYS 2) relays de-energize due to the HP switch or motor protector opening. This causes the respective CR contacts to open causing 0VDC to be read on the inputs to the microboard. The fault condition is cleared when a 30VDC signal is restored to the input.

The internal motor protector opens at 185 °F – 248 °F (85 °C – 120 °C) and auto resets. The mechanical HP switch opens at 585 PSIG plus or minus 10 PSIG (27.92 barg plus or minus .69 barg) and closes at 330 PSIG plus or minus 25 PSIG (22.75 barg plus or minus 1.72 barg).

The compressor is also equipped with a discharge temperature sensor for the purpose of sensing internal scroll temperature. This sensor protects the scrolls from overheating due to inadequate cooling that may occur when refrigerant charge is low, or superheat is too high.

When the sensor senses a high temperature, it opens the motor protector circuit in the compressor causing the compressor to shut down.

During the first two faults an MP/HP INHIBIT message will be displayed and the system will not be locked out. Only after the third fault in 90 minutes will the MP/HPCO FAULT message be displayed.

Whenever the motor protector or discharge sensor shuts down a compressor and the system, the internal compressor contacts will open for a period of 30 minutes to assure that the motor or scroll temperatures have time to dissipate the heat and cool down. The MP/HP INHIBIT message will be displayed while these contacts are open or when the HPCO is open. While this message is displayed, the compressors will not be permitted to start.

After 30 minutes, the contacts will close and the system will be permitted to restart. The microprocessor will not try to restart the compressors in a system that shuts down on this safety for a period of 30 minutes to allow the internal compressor to time out.

During the 30 minute timeout, the MP/HPCO INHIB message will be displayed. The MP/HPCO fault will only be displayed after 3 shutdowns in 90 minutes, indicating the system is locked out and will not restart.

SYS	1	HIGH	MTR	CURR
SYS	2	HIGH	MTR	CURR

When the System Current Feedback option is installed and selected (Option 11 under OPTIONS key Current Feedback), this safety will operate as follows. If the actual feedback voltage of the system proportional to currents exceeds the programmed trip voltage for 5 seconds, the system will shutdown.

This safety will shut down a system if either suction temperature or suction pressure sensors read out of range high or low. This condition must be present for 3 seconds to cause a system shutdown. The safety locks out a system after the first fault and will not allow automatic restarting.

Unit Safeties

Unit safeties are faults that cause all running compressors to be shut down. Unit faults are auto reset faults in that the unit will be allowed to restart automatically after the fault condition is no longer present.

UNIT FAULT : LOW AMBIENT TEMP

The Low Ambient Temp Cutout is a safety shutdown designed to protect the chiller from operating in a low ambient condition. If the outdoor ambient temperature falls below the programmable cutout, the chiller will shut down. Restart can occur when temperature rises 2 °F above the cutoff.

UNIT FAULT : LOW LIQUID TEMP

The Low Leaving Chilled Liquid Temp Cutout protects the chiller from an evaporator freeze-up should the chilled liquid temperature drop below the freeze point. This situation could occur under low flow conditions or if the micro panel setpoint values are improperly programmed. Anytime the leaving chilled liquid temperature (water or glycol) drops below the cutout point, the chiller will shutdown. Restart can occur when chilled liquid temperature rises 2 °F above the cutout.

UNIT FAULT : 115VAC UNDER VOLTAGE

The Under Voltage Safety assures that the system is not operated at voltages where malfunction of the microprocessor could result in system damage. When the 115VAC to the micro panel drops below a certain level, a unit fault is initiated to safely shut down the unit. Restart is allowed after the unit is fully powered again and the anti-recycle timers have finished counting down.

UNIT FAULT : HIGH MTR CURR

When the CURRENT FEEDBACK ONE PER UNIT option is selected under the OPTIONS key, the unit will shut down when the voltage exceeds the programmed trip voltage for 5 seconds.

The trip voltage is programmed at the factory according to compressor or unit RLA.

Restart will occur after the anti-recycle timer times out.

Unit Warning

The following messages are not unit safeties and will not be logged to the history buffer. They are *unit warnings* and will not auto-restart. Operator intervention is required to allow a restart of the chiller.

!! LOW BATTERY !! CHECK PROG / SETP / OPTN

The Low Battery Warning can only occur at unit power-up. On micro panel power-up, the RTC battery is checked. If a low battery is found, all programmed setpoints, program values, options, time, schedule, and history buffers will be lost. These values will all be reset to their default values which may not be the desired operating values. Once a faulty battery is detected, the unit will be prevented from running until the PROGRAM key is pressed. Once PROGRAM is pressed the anti-recycle timers will be set to the programmed anti-recycle time to allow the operator time to check setpoints, and if necessary, reprogram programmable values and options.


If a low battery is detected, it should be replaced as soon as possible. The programmed values will all be lost and the unit will be prevented from running on the next power interruption. The RTC/battery (031-02565-000) is located at U5 on the microboard.

INCORRECT UNIT TYPE

This indicates the condensing unit jumper is installed between J11-12 and J11-7. This jumper must be removed to operate the chiller.


STATUS KEY MESSAGES

TABLE 8 – STATUS KEY MESSAGES QUICK REFERENCE LIST

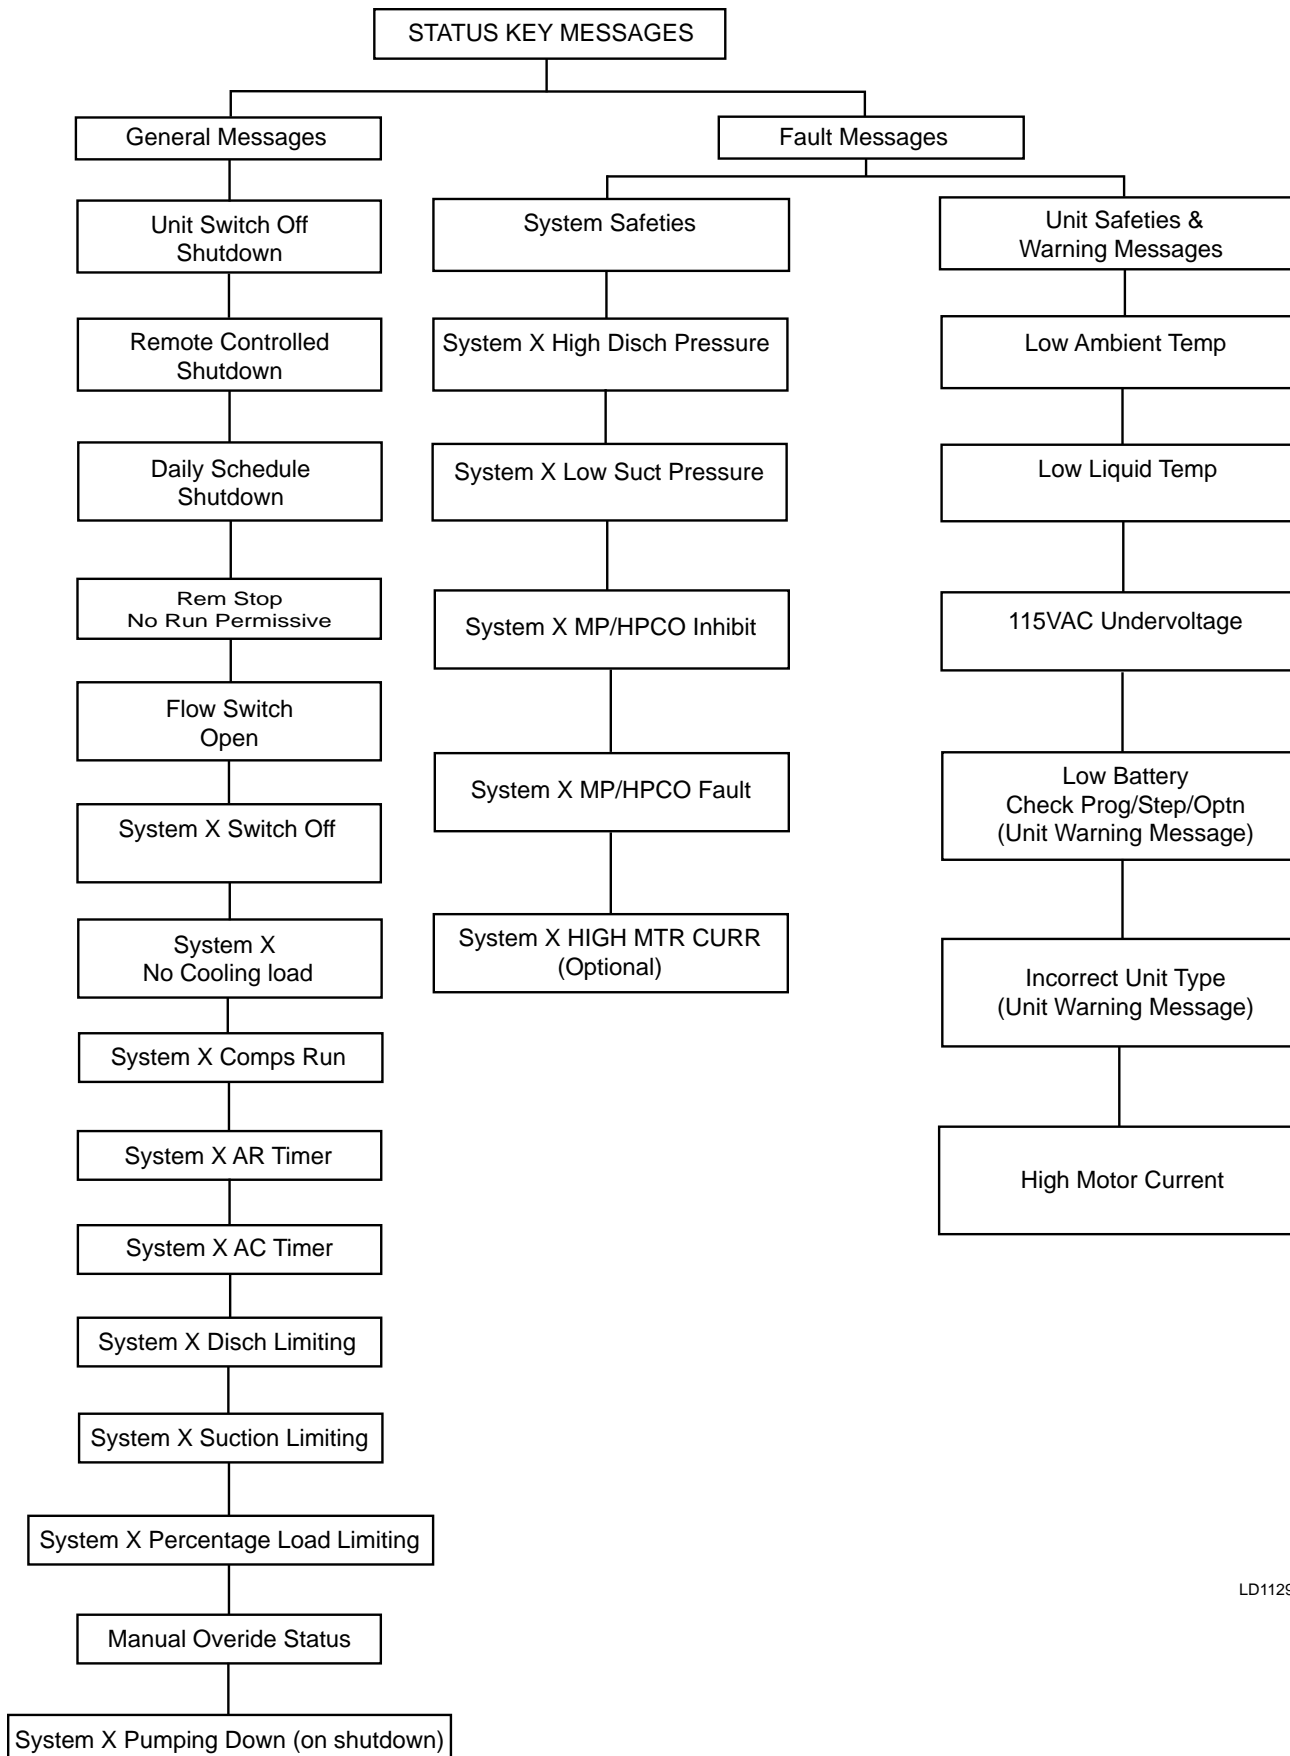

LD11297B

DISPLAY/PRINT KEYS

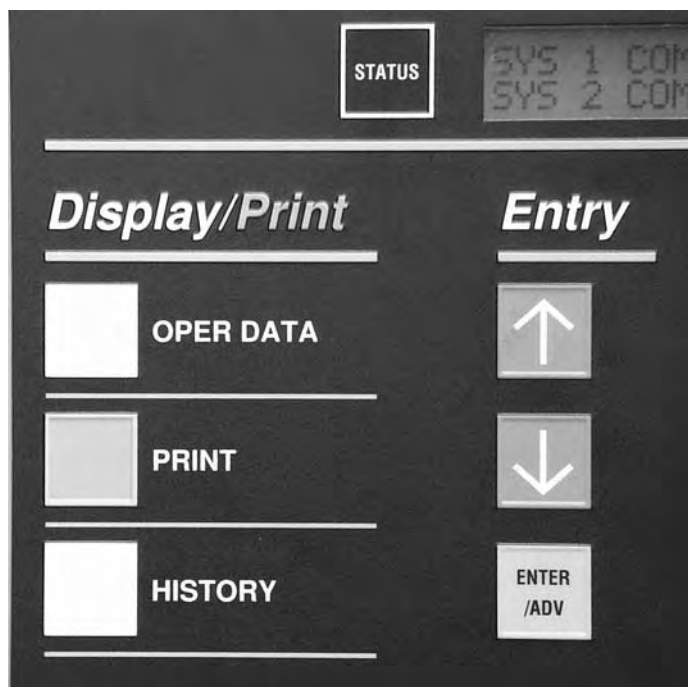


00067VIP

The DISPLAY/PRINT keys allow the user to retrieve system and unit information that is useful for monitoring chiller operation, diagnosing potential problems, troubleshooting, and commissioning the chiller.

System and unit information, unit options, setpoints, and scheduling can also be printed out with the use of a printer. Both real-time and history information are available.


Oper Data Key

The OPER DATA key gives the user access to unit and system operating parameters. When the OPER DATA key is pressed, system parameters will be displayed and remain on the display until another key is pressed. After pressing the OPER DATA key, the various operating data screens can be scrolled through by using the ↑ (UP) and ↓ (DOWN) arrow keys or the ENTER/ADV key located under the “ENTRY” section.

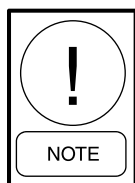

System 2 information will only be displayed for 2 system units.

With the “UNIT TYPE” set as a liquid chiller (no jumper from J11-7 to J11-12 on the I/O Board), the following list of operating data screens are viewable under the Oper Data key in the order that they are displayed. The ↓ (DOWN) arrow key scrolls through the displays in the order they appear below:

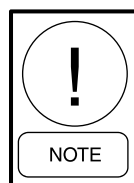

The chiller MUST be set to be a liquid chiller (no jumper from J11-7 to J11-12 on the I/O Board). DO NOT operate the chiller if not properly set up.

L C H L T = 46.2 ° F
R C H L T = 57.4 ° F

This display shows chilled leaving and return liquid temperatures. The minimum limit on the display for these parameters are 2.2 °F (-19 °C). The maximum limit on the display is 140 °F (60 °C).

A M B I E N T A I R T E M P
= 87.5 ° F

This display shows the ambient air temperature. The minimum limit on the display is 0.4 °F (-17.6 °C). The maximum limit on the display is 131.2 °F (55.1 °C).

```
S Y S   X   S P   = 7 2 . 1   P S I G
          D P   = 2 2 7 . 0   P S I G
```

These displays show suction and discharge pressures for each system. The discharge pressure transducer is optional on some models.

If the *optional* discharge transducer is not installed, the discharge pressure would display 0 PSIG (0 barg).

The minimum limits for the display are:

Suction Pressure: 0 PSIG (0 barg)

Discharge Pressure: 0 PSIG (0 barg)

The maximum limits for the display are:


Suction Pressure: 400 PSIG (27.58 barg)

Discharge Pressure: 650 PSIG (44.82 barg)

```
S Y S   X   H O U R S   1 = X X X X X
                      2 = X X X X X, 3 = X X X X X
```

```
S Y S   X   S T A R T S   1 = X X X X X
                      2 = X X X X X, 3 = X X X X X
```

The above two messages will appear sequentially for each system. The first display shows accumulated running hours of each compressor for the specific system. The second message shows the number of starts for each compressor on each system.

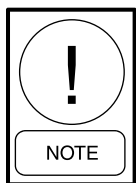

Run times and starts will only be displayed for the actual number of systems and compressors on the unit.

A total of 99,999 hours and starts can be logged before the counter rolls over to “0”.

```
LOAD   TIMER   5 8   SEC
UNLOAD TIMER   0   SEC
```

This display of the load and unload timers indicate the time in seconds until the unit can load or unload. Whether the systems loads or unloads is determined by how far the actual liquid temperature is from setpoint. A detailed description of unit loading and unloading is covered under the topic of Capacity Control.

```
C O O L I N G   D E M A N D
2   O F   8   S T E P S
```


The display of COOLING DEMAND indicates the current “step” in the capacity control scheme when in Return Water Control Mode. The number of available steps are determined by how many compressors are in the unit. In the above display, the “2” does not mean that two compressor are running but only indicates that the capacity control scheme is on step 2 of 8. Capacity Control is covered in more detail in this publication which provides specific information on compressor staging (for Return Water Control only).

```
T E M P   E R R O R   X X X . X ° F
T E M P   R A T E     X X X . X ° F / M
```

The COOLING DEMAND message will be replaced with this message when Leaving Chilled liquid control is selected. This message indicates the temperature error and the rate of change of the chilled liquid temperature.

```
L E A D   S Y S T E M   I S
S Y S T E M   N U M B E R   2
```

This display indicates the current LEAD system. In this example system 2 is the LEAD system, making system 1 the LAG system. The LEAD system can be manually selected or automatic. *Refer to the programming under the “Options” key.* The Lead System display will only appear on a two system unit.

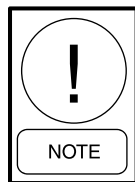

A unit utilizing hot gas bypass should be programmed for MANUAL with system 1 as the lead system. Failure to do so will prevent hot gas operation if system 2 switches to the lead system when programmed for AUTOMATIC LEAD/LAG.

**E V A P O R A T O R H E A T E R
S T A T U S I S = X X X**

This display indicates the status of the evaporator heater. The evaporator heater is controlled by ambient air temperature. When the ambient temperature drops below 40 °F the heater is turned on. When the temperature rises above 45 °F the heater is turned off. An under voltage condition will keep the heater off until full voltage is restored to the system.

**E V A P O R A T O R W A T E R
P U M P S T A T U S = X X X X**

The evaporator pump contacts are energized when any compressor is running, or the unit is not OFF on the daily schedule and the unit switch is on, or the unit has shutdown on a Low Leaving Chilled Liquid fault. However, even if one of above is true, the pump will not run if the micro panel has been powered up for less than 30 seconds or if the pump has run in the last 30 seconds to prevent pump motor overheating. This contact supplies 115 VAC to the pump contactor.

**E V A P P U M P T O T A L R U N
H O U R S = X X X X X**

The Evaporator Pump Total Run Hours display indicates the total pump run hours. Total hours continually increments similar to Compressor Run Hours. If dual pumps are fitted, run hours indicates total hours on both pumps.

**A C T I V E R E M O T E C T R L
N O N E**

There are several types of remote systems that can be used to control or monitor the unit. The following messages indicate the type of remote control mode active:

NONE – no remote control active. Remote monitoring may be via ISN.

ISN – YORK Talk via ISN allows remote load limiting and temperature reset through an ISN system.

LOAD LIM – Load limiting enabled using contact closure.

PWM TEMP – EMS temperature reset

If the microprocessor is programmed for CURRENT FEEDBACK ONE PER UNIT under the OPTIONS key, the display will show up as the first display prior to the SYS 1 displays. Total chiller current is displayed as shown below:

**U N I T A M P S = 5 4 . 0
 V O L T S = 1 . 2**

If the microprocessor is programmed for CURRENT FEEDBACK NONE, no current display will appear.

**S Y S X C O M P S T A T U S
1 = X X X 2 = X X X 3 = X X X**

**S Y S X R U N T I M E
X X - X X - X X - X X D - H - M - S**

**S Y S X L L S V I S O N
H O T G A S S O L I S O F F**

S Y S X F A N S T A G E 3

**S Y S X A M P S = 3 6 . 0
 V O L T S = 0 . 8**

The preceding five messages will appear sequentially, first for system 1, then for system 2.

The first message indicates the system and the associated compressors which are running.

The second message indicates the system run time in days – hours – minutes – seconds. Please note that this is not accumulated run time but pertains only to the current system cycle.

The third message indicates the system, and whether the liquid line solenoid or EEV pilot solenoid and hot gas solenoid are being turned on by the microboard. Please note that hot gas is not available for system 2, so there is no message pertaining to the hot gas solenoid when system 2 message is displayed.

The fourth message indicates the stage of condenser fan operation that is active.

See the section on Condenser Fan Control in the UNIT OPERATION section for more information.

The fifth message displays current as sensed by the optional current feedback circuitry. The display reads out in amps along with the DC feedback voltage from the module. Current is calculated by:

$$\frac{225A \times \text{Actual Volts}}{5 \text{ Volts}}$$

Individual displays will be present for each system, if CURRENT FEEDBACK ONE PER SYSTEM is programmed under the OPTIONS key. Combined compressor current for each system is displayed.

Oper Data Quick Reference List

The following table is a quick reference list for information available under the OPER DATA key.

TABLE 9 – OPERATION DATA

Oper Data Key
Leaving & Chilled Liquid Temps
Ambient Air Temperature
System 1 Discharge & Suction Pressure
*System X Accumulated Hours
*System X Accumulated Starts
Load and Unload Timers
Cooling Demand Steps (Return Chilled Liquid Control Only)
Temp Rate & Temp Error (Leaving Chilled Liquid Control Only)
Lead System Indicator
Evaporator Heater Status
Evaporator Water Pump Status
Active Remote Control
Current Feedback One Per Unit
*System X Compressors Status
*System X Run Time
Sys X LLSV & HGSV Status
*System X Condenser Fan Stage
Current Feedback One Per System

* Block of information repeats for each system

LD12585

Print Key

The PRINT key allows the operator to obtain a printout of real-time system operating data or a history printout of system data at the “instant of the fault” on the last six faults which occurred on the unit. An optional printer is required for the printout.

Operating Data Printout

Pressing the PRINT key and then OPER DATA key allows the operator to obtain a printout of current system operating parameters. When the OPER DATA key is pressed, a snapshot will be taken of system operating conditions and panel programming selections. This data will be temporarily stored in memory and transmission of this data will begin to the printer. A sample Operating Data printout is shown below. (Note: Not all values are printed for all models.)

YORK INTERNATIONAL CORPORATION MILLENNIUM LIQUID CHILLER

UNIT STATUS
2:04PM 05 JUL 09

SYS 1 NO COOLING LOAD
SYS 2 COMPRESSORS RUNNING 2

OPTIONS

CHILLED LIQUID WATER
AMBIENT CONTROL STANDARD
LOCAL/REMOTE MODE REMOTE
CONTROL MODE LEAVING LIQUID
LEAD/LAG CONTROL AUTOMATIC
FAN CONTROL AMB & DSCH PRESS
CURRENT FEEDBACK NONE
POWER FAILURE RESTART AUTOMATIC
SOFT START ENABLED
EXPANSION VALVE THERMOSTATIC
REMOTE TEMP RESET 4 TO 20 MA

PROGRAM VALUES

DSCH PRESS CUTOFF 570 PSIG
SUCTION PRESS CUTOFF 80 PSIG
SUCTION PRESS CUT COOLING 42 PSIG
SUCTION PRESS CUT HEATING 31 PSIG
LOW AMBIENT CUTOFF 25.0 DEGF
LEAVING LIQUID CUTOFF 25.0 DEGF
ANTI RECYCLE TIME 600 SECS
FAN CONTROL ON PRESS 425 PSIG
FAN DIFF OFF PRESS 125 PSIG
NUMBER OF COMPRESSORS 6
NUMBER OF FANS PER SYSTEM 4
UNIT TRIP VOLTS 3.0
REFRIGERANT TYPE R-22
DEFROST INIT TEMP 41.0 DEGF
DEFROST INITIATION TIME 60MIN
DEFROST TERMINATION TIME 3MIN
BIVALENT HEAT DELAY TIME 30 MIN
REMOTE UNIT ID PROGRAMMED 2
YORK HYDRO KIT PUMPS 1 (410a)
PUMP TOTAL RUN HOURS XXXXX (410a)

UNIT DATA

RETURN LIQUID TEMP 58.2 DEGF
LEAVING LIQUID TEMP 53.0 DEGF
DISCHARGE AIR TEMP 55.3 DEGF
COOLING RANGE 42.0 +/- 2.0 DEGF
HEATING RANGE 122.0 +/- 2.0 DEGF
SYS 1 SETPOINT 70 +/- 3 PSIG
SYS 2 SETPOINT 70 +/- 3 PSIG
REMOTE SETPOINT 44.0 DEGF
AMBIENT AIR TEMP 74.8 DEGF
LEAD SYSTEM SYS 2
EVAPORATOR PUMP ON
EVAPORATOR HEATER OFF
ACTIVE REMOTE CONTROL NONE
LAST DEFROST SYS X DURATION XXXS
TIME TO SYS X DEFROST XX MIN
BIVALENT DELAY REMAINING XX MIN
UNIT XXX.X AMPS X.X VOLTS
SOFTWARE VERSION C.M02.13.00

SYSTEM 1 DATA

COMP STATUS 1=OFF 2=OFF 3=OFF
RUN TIME 0- 0- 0- 0 D-H-M-S
TIME YYYYYYY 0- 0- 0- 0 D-H-M-S
LAST STATE YYYYYYY
SUCTION PRESSURE 105 PSIG
DISCHARGE PRESSURE 315 PSIG
SUCTION TEMPERATURE 46.0 DEGF
SAT SUCTION TEMP 34.0 DEGF
SUCTION SUPERHEAT 12.0 DEGF
COOLER INLET REFRIG 31.6 DEGF
DEFROST TEMPERATURE 52.8 DEGF
LIQUID LINE SOLENOID OFF
MODE SOLENOID OFF
HOT GAS BYPASS VALVE OFF
CONDENSER FAN STAGE OFF
EEV OUTPUT 0.0 %
SYSTEM XXX.X AMPS X.X VOLTS

SYSTEM 2 DATA

COMP STATUS 1=ON, 2=OFF, 3=ON
RUN TIME 0-0-1-46 D-H-M-S
TIME YYYYYYY 0-0-0-0 D-H-M-S
LAST STATE YYYYYYY
SUCTION PRESSURE 110 PSIG
DISCHARGE PRESSURE 320 PSIG
SUCTION TEMPERATURE 49.3 DEGF
SAT SUCTION TEMP 36.0 DEGF
SUCTION SUPERHEAT 13.3 DEGF
COOLER INLET REFRIG 31.6 DEGF
DEFROST TEMPERATURE 52.8 DEGF
LIQUID LINE SOLENOID ON
MODE SOLENOID ON
CONDENSER FAN STAGE 3
EEV OUTPUT 63.2%
SYSTEM XXX.X AMPS X.X VOLTS

DAILY SCHEDULE

S M T W T F S * =HOLIDAY
SUN START=00:00AM STOP=00:00AM
MON START=00:00AM STOP=00:00AM
TUE START=00:00AM STOP=00:00AM
WED START=00:00AM STOP=00:00AM
THU START=00:00AM STOP=00:00AM
FRI START=00:00AM STOP=00:00AM
SAT START=00:00AM STOP=00:00AM
HOL START=00:00AM STOP=00:00AM



See Service And Troubleshooting section for Printer Installation information.

History Printout

Pressing the PRINT key and then the HISTORY key allows the operator to obtain a printout of information relating to the last 9 Safety Shutdowns which occurred. The information is stored at the instant of the fault, regardless of whether the fault caused a lockout to occur. The information is also not affected by power failures (long-term internal memory battery backup is built into the circuit board) or manual resetting of a fault lock-out.

When the HISTORY key is pressed, a printout is transmitted of all system operating conditions which were stored at the "instant the fault occurred" for each of the 9 Safety Shutdowns buffers. The printout will begin with the most recent fault which occurred. The most recent fault will always be stored as Safety Shutdown No. 1. identically formatted fault information will then be printed for the remaining safety shutdowns.

Information contained in the Safety Shutdown buffers is very important when attempting to troubleshoot a system problem. This data reflects the system conditions at the instant the fault occurred and often reveals other system conditions which actually caused the safety threshold to be exceeded.

The history printout is similar to the operational data printout shown in the previous section. The differences are in the header and the schedule information. The daily schedule is not printed in a history print.

One example history buffer printout is shown following. The data part of the printout will be exactly the same as the operational data print so it is not repeated here. The difference is that the Daily Schedule is not printed in the history print and the header will be as follows.

YORK INTERNATIONAL CORPORATION
MILLENNIUM LIQUID CHILLER

SAFETY SHUTDOWN NUMBER 1
SHUTDOWN @ 3:56PM 05 JUL 09

SYS 1 HIGH DSCH PRESS SHUTDOWN
SYS 2 NO FAULTS

History Displays

The HISTORY key gives the user access to many unit and system operating parameters at the time of a unit or system safety shutdown. When the HISTORY key is pressed the following message is displayed.

DISPLAY SAFETY SHUT-
DOWN NO. 1 (1 TO 9)

While this message is displayed, the ↑ (UP) arrow key can be used to select any of the six history buffers. Buffer number 1 is the most recent, and buffer number 6 is the oldest safety shutdown that was saved.

After selecting the shutdown number, pressing the ENTER key displays the following message which shows when the shutdown occurred.

SHUTDOWN OCCURRED
03:56 PM 29 JAN 02

The ↑ (UP) and ↓ (DOWN) arrow keys are used to scroll forward and backward through the history buffer to display the shutdown conditions stored at the instant the fault occurred. The ↓ (DOWN) arrow key scrolls through the displays in the order they appear below:

UNIT FAULT :
LOW LIQUID TEMP

Displays the type of fault that occurred.

UNIT TYPE
LIQUID CHILLER

Displays the type of chiller; Liquid, Condensing Unit or Heat Pump.

CHILLED LIQUID
XXXXX

Displays the chilled liquid type; Water or Glycol.

AMBIENT CONTROL
XXXXXXXXXX

Displays the type of Ambient Control; Standard or Low Ambient.

LOCAL / REMOTE MODE
XXXXXXXXXX

Displays Local or Remote control selection.

CONTROL MODE LEAVING LIQUID

Displays the type of chilled liquid control; Leaving or Return.

LEAD / LAG CONTROL XXXXXXXXXX

Displays the type of lead/lag control; Manual System 1, Manual System 2 or Automatic. This is only selectable on 2-system chillers.

FAN CONTROL DISCHARGE PRESSURE

Displays the type of fan control; Discharge Pressure or Ambient and Discharge Pressure.

MANUAL OVERRIDE MODE XXXXXXXXXX

Displays whether Manual Override was Enabled or Disabled.

CURRENT FEEDBACK XXXXXXXXXXXXXXXXXX

Displays type of Current Feedback utilized.

SOFT START XXXXXXX

Displays whether the optional European Soft Start was installed and selected.

DISCHARGE PRESSURE CUTOUT = XXXX PSIG

Displays the programmed Discharge Pressure Cutout.

SUCTION PRESSURE CUTOUT = XXXX PSIG

Displays the programmed Suction Pressure Cutout.

LOW AMBIENT TEMP CUTOUT = XXX.X °F

Displays the programmed Low Ambient Cutout.

LEAVING LIQUID TEMP CUTOUT = XXX.X °F

Displays the Leaving Liquid Temp. Cutout programmed.

FAN CONTROL ON PRESSURE = XXX PSIG

Displays the programmed Fan On Pressure.

FAN DIFFERENTIAL OFF PRESSURE = PSIG

Displays the programmed Fan Off Differential.

SYS 1 TRIP VOLTS = X.X VOLTS

Displays the programmed High Current Trip Voltage.

SYS 2 TRIP VOLTS = X.X VOLTS

Displays the programmed High Current Trip Voltage.

YORK HYDRO KIT PUMPS = X

Indicates the Pump Control option is selected.

LCHLT = XXX.X °F RCHLT = XXX.X °F

Displays the Leaving and Return chilled Liquid Temperature at the time of the fault.

SETPOINT = XXX.X °F RANGE = + / - °F

Displays the programmed Setpoint and Range, if the chiller is programmed for leaving chilled liquid control.

SETPOINT = XXX.X °F RANGE = +XX.X °F

Displays the programmed Setpoint and Range, if the chiller is programmed for return chilled liquid control.

AMBIENT AIR TEMP = XXX.X °F

Displays the Ambient Temp. at the time of the fault.

LEAD SYSTEM IS SYSTEM NUMBER X

Displays which system is in the lead at the time of the fault.

```

E V A P O R A T O R   H E A T E R
S T A T U S   I S               X X X

```

Displays status of the Evaporator Heater at the time of the fault.

```

E V A P O R A T O R   W A T E R
P U M P   S T A T U S           X X X X

```

Displays status of Evaporator Water Pump at the time of fault. Status may read on, off or trip.

```

E V A P   P U M P   T O T A L   R U N
H O U R S               = X X X X

```

Evap Pump total run hours at the time of fault.

```

A C T I V E   R E M O T E   C T R L
X X X X

```

Displays whether Remote Chiller Control was active when the fault occurred.

```

U N I T   A C T U A L   A M P S
          = X X X . X   A M P S

```

This is only displayed when the Current Feedback Option is one per unit.

```

S Y S   X   C O M P   S T A T U S
1 = X X X   2 = X X X   3 = X X X

```

Displays which Compressors were running in the system when the fault occurred.

```

S Y S   X   R U N   T I M E
X X - X X - X X - X X   D - H - M - S

```

Displays the system run time when the fault occurred.

```

S Y S   X   S P   =   X X X X   P S I G
          D P   =   X X X X   P S I G

```

Displays the system Suction and Discharge Pressure of the time of the fault.

```

S Y S   X   S U C T   =   X X X . X ° F
          S A T   S U C T   =   X X X . X ° F

```

Displays the System Suction Temp and Saturated Suction Temp when an EEV is installed.

```

S Y S   X   L L S V   I S   X X X
H O T   G A S   S O L   I S   X X X

```

Displays whether the System Liquid Line Solenoid or Hot Gas Solenoid was energized at the time of the fault.

```

S Y S   X   F A N   S T A G E   X X X

```

Displays the number of Fan Stages in the system active at the time of the fault.

```

S Y S   X   A C T U A L   A M P S
          = X X X . X   A M P S

```

Displays the system Amperage (calculated approximately) at the time of the fault.

For this message to appear, CURRENT FEEDBACK ONE PER SYSTEM must be programmed under the OPTIONS key. If the microprocessor is programmed as one CURRENT FEEDBACK ONE PER UNIT under the PROGRAM key, the display will be the first display prior to the SYS 1 info. If the microprocessor is programmed for CURRENT FEEDBACK NONE, no current display will appear.

Displays for System 1 starting with SYS X NUMBER OF COMPS RUNNING X through SYS X AMPS = XXX.X VOLTS = X.X will be displayed first, followed by displays for System 2.

Further explanation of the above displays is covered under the STATUS, OPER DATA, COOLING SETPOINTS, PROGRAM, and OPTIONS keys.

Software Version

The software version may be viewed by first pressing the HISTORY key and then repeatedly pressing the ↓ (DOWN) arrow key until you scroll past the first history buffer choice.

```

D I S P L A Y   S A F E T Y   S H U T -
D O W N   N O . 1   ( 1 T O 6 )

```


After the ↓ (DOWN) arrow key is pressed again, the software version will appear.

```

C O N T R O L           C . M X X . Z Z . Y Y
I / O                   C . M X X . 1 8 . Y Y

```

ENTRY KEYS

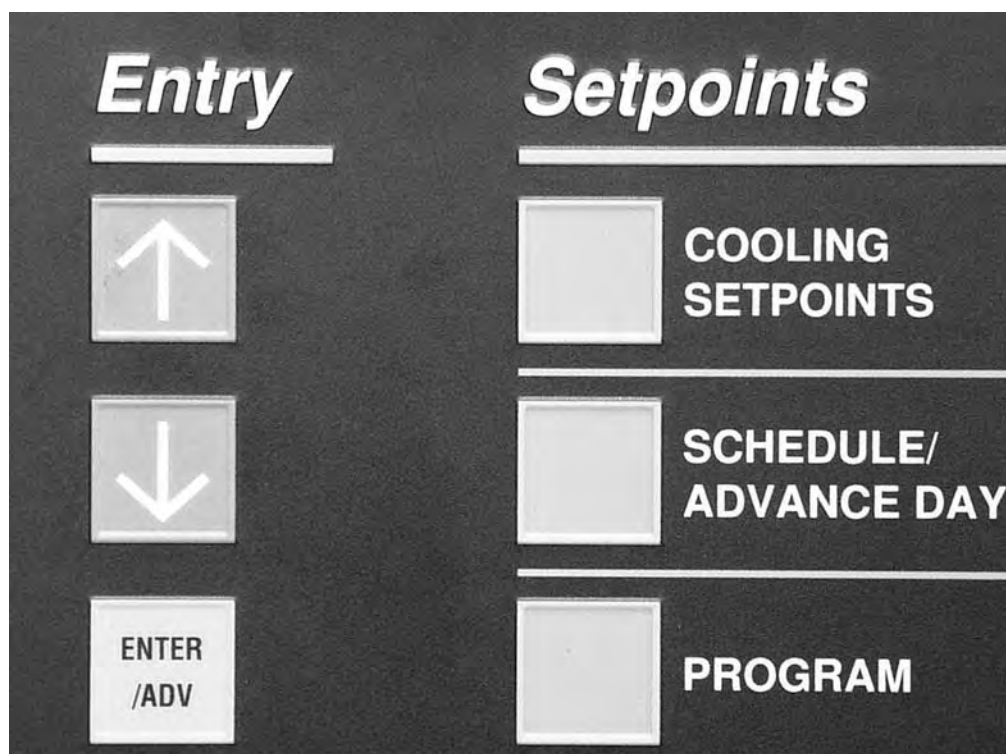

00068VIP

7

The ENTRY keys allow the user to view, change programmed values. The ENTRY keys consist of an ↑ (UP) arrow key, ↓ (DOWN) arrow key, and an ENTER/ADV key.

Up and Down Arrow Keys

Used in conjunction with the OPER DATA, HISTORY, COOLING SETPOINTS, SCHEDULE/ADVANCE DAY, OPTIONS and CLOCK keys, the ↑ (UP) and ↓ (DOWN) arrow keys allow the user to scroll through the various data screens. *Refer to the section on “Display/Print” keys for specific information on the displayed information and specific use of the ↑ (UP) and ↓ (DOWN) arrow keys.*


The ↑ (UP) arrow key, and ↓ (DOWN) arrow key are also used for programming the control panel such as changing numerical or text values when programming cooling setpoints, setting the daily schedule, changing safety setpoints, chiller options, and setting the clock.

Enter/Adv Key

The ENTER/ADV key must be pushed after any change is made to the cooling setpoints, daily schedule, safety setpoints, chiller options, and the clock. Pressing this key “enters” the new values into memory. If the ENTER/ADV key is not pressed after a value is changed, the changes will not be “entered” and the original values will be used to control the chiller.

Programming and a description on the use of the ↑ (UP) arrow key, and ↓ (DOWN) arrow, and ENTER/ADV keys are covered in detail under the SETPOINTS, and UNIT keys.

SETPOINTS KEYS

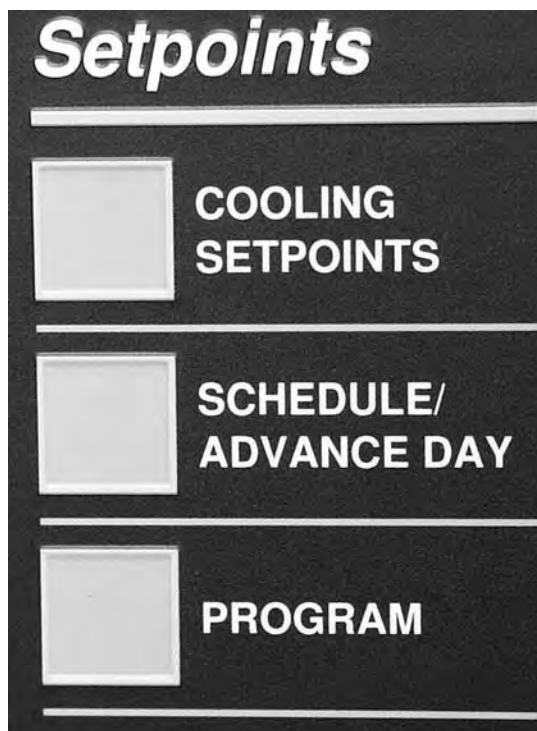

00069VIP

Programming of the cooling setpoints, daily schedule, and safeties is accomplished by using the keys located under the SETPOINTS section.

The three keys involved are labeled COOLING SETPOINTS, SCHEDULE/ADVANCE DAY, and PROGRAM.

Following are instructions for programming the respective setpoints. The same instruction should be used to view the setpoints with the exception that the setpoint will not be changed.

Cooling Setpoints

The Cooling Setpoint and Range can be programmed by pressing the COOLING SETPOINTS key. The cooling mode (leaving chilled liquid or return chilled liquid) will be displayed for a few seconds, and the setpoint display entry screen will appear.

Leaving Chilled Liquid Control

```

SETPOINT = 45.0 ° F
RANGE    = +/- 2.0 ° F
  
```

The above message shows the current chilled water temperature SETPOINT at 45.0 °F (notice the cursor positioned under the number 0). Pressing either the ↑ (UP) or ↓ (DOWN) arrow will change the setpoint in .5 °F increments. After using the ↑ (UP) or ↓ (DOWN) arrow keys to adjust to the desired setpoint, the ENTER/ADV key must be pressed to enter this number into memory and advance to the RANGE SETPOINT.

Entry of the setpoint will be indicated by the cursor moving under the current RANGE setpoint. The ↑ (UP) and ↓ (DOWN) arrow keys are used to set the RANGE, in .5 °F increments, to the desired RANGE setpoint. After adjusting the setpoint, the ENTER/ADV key must be pressed to enter the data into memory.

Notice that the RANGE was programmed for *plus or minus* X.X° F. This indicates the SETPOINT to be in the *center* of the control range. If the control mode has been programmed for RETURN LIQUID control,

the message below would be displayed in place of the previous message.

When in leaving chilled liquid temperature control, the microprocessor will attempt to control the leaving water temperature within the temperature range of the setpoint plus or minus the range. In the above example, control will be in the range of 43 – 47 °F.

Return Chilled Liquid Control

```
SETPOINT = 45.0 °F
RANGE = +10.0 °F
```

In return chilled liquid control, the range no longer has a plus or minus X.X °F, but only a + X.X °F RANGE setpoint. This indicates that the setpoint is not centered within the RANGE but could be described as the bottom of the control range. A listing of the limits and the programmable values for the COOLING SETPOINTS are shown in Table 10.

The SETPOINT and RANGE displays just described were based on LOCAL control. If the unit was programmed for REMOTE control (under the OPTIONS key), the above programmed setpoints would have no effect.

When in return chilled liquid temperature control, the microprocessor will turn all compressors off at setpoint and will turn compressors on as return chilled liquid temperature rises. All compressors will be on at setpoint plus the range. If the range equals the temperature drop across the evaporator when fully loaded, the leaving chilled liquid temperature will remain near the setpoint plus or minus a few degrees as the chiller loads and unloads according to return chilled liquid temperature.

Both LEAVING and RETURN control are described in detail under the section on CAPACITY CONTROL.

Remote Setpoint Control

Pressing the COOLING SETPOINTS key a second time will display the remote setpoint and cooling range. This display automatically updates about every 2 seconds. Notice that these setpoints are not “locally” programmable, but are controlled by a remote device such as an ISN control, remote reset option board, or remote PWM signal. These setpoints would only be valid if the unit was operating in the REMOTE mode.

The following messages illustrate both leaving chilled liquid control and return chilled liquid control respectively.

```
REM SETP = 44.0 °F
RANGE = + / - 2.0 °F
```

(leaving chilled liquid control)

```
REM SETP = 44.0 °F
RANGE = +10.0 °F
```

(return chilled liquid control)

The low limit, high limit, and default values for the keys under “SETPOINTS” are listed in Table 10.

Pressing the COOLING SETPOINTS a third time will bring up the display that allows the Maximum EMS-PWM Temperature Reset to be programmed. This message is shown below.

```
MAX EMS - PWM REMOTE
TEMP RESET = +20 °F
```

The Temp Reset value is the maximum allowable remote reset of the temperature setpoint. The setpoint can be *reset* upwards by the use of an Energy Management System. *See page 152 and 164 for a detailed explanation of this feature.*

As with the other setpoints, the ↑ (UP) arrow and ↓ (DOWN) arrow keys are used to change the Temp Reset value. After using the ↑ (UP) and ↓ (DOWN) arrows to adjust to the desired setpoint, the ENTER/ADV key must be pressed to enter this number into memory.

Schedule/Advance Day Key

The SCHEDULE is a seven day daily schedule that allows one start/stop time per day. The schedule can be programmed Monday through Sunday with an alternate holiday schedule available. If no start/stop times are programmed, the unit will run on demand, providing the chiller is not shut off on a unit or system shutdown. The daily schedule is considered “not programmed” when the times in the schedule are all zeros (00:00 AM).

To set the schedule, press the SCHEDULE/ADVANCE DAY key. The display will immediately show the following display.

```
MON START = 00:00 AM
STOP = 00:00 AM
```

TABLE 10 – COOLING SETPOINTS, PROGRAMMABLE LIMITS AND DEFAULTS

SETPOINT KEY	MODE	LOW LIMIT	HIGH LIMIT	DEFAULT
LEAVING CHILLED LIQUID SETPOINT	WATER COOLING	40.0°F 4.4°C	**70.0°F 21.1°C	44.0°F 6.7°C
	GLYCOL COOLING*	10.0°F -12.2°C	**70.0°F 21.1°C	44.0°F 6.7°C
LEAVING CHILLED LIQUID CONTROL RANGE	—	1.5°F 0.8°C	2.5°F 1.4°C	2.0°F 1.1°C
RETURNED CHILLED LIQUID SETPOINT	WATER COOLING	40.0°F 4.4°C	70.0°F 21.1°C	44.0°F 6.7°C
	GLYCOL COOLING*	10.0°F -12.2°C	70.0°F 21.1°C	44.0°F 6.7°C
RETURN CHILLED LIQUID CONTROL RANGE	—	4.0°F 2.2°C	20.0°F 11.1°C	10.0°F 5.6°C
MAX EMS-PWM REMOTE TEMPERATURE RESET	—	2°F 1.0°C	40°F 22.0°C	20°F 11.0°C

* Refer to Engineering Guide for operation below 30 °F (-1.1 °C). Alternate thermal expansion valves must be used below 30 °F (-1.1 °C).

* When using glycol, Leaving Chilled Liquid Setpoint should not be set below 20 °F (-6.7 °C).


** Do not exceed 55 °F (12.8 °C) setpoint before contacting the nearest Johnson Controls Office for application guidelines.

The line under the 0 is the cursor. If the value is wrong, it may be changed by using the ↑ (UP) and ↓ (DOWN) arrow keys until correct. Pressing the ENTER/ADV key will enter the times and then move the cursor to the minute box. The operation is then repeated if necessary. This process may be followed until the hour, minutes, and meridian (AM or PM) of both the START and STOP points are set. After changing the meridian of the stop time, pressing the ENTER/ADV key will advance the schedule to the next day.

H O L S T A R T = 0 0 : 0 0 A M
S T O P = 0 0 : 0 0 A M

The times may be set using the same procedure as described above for the days of the week. After changing the meridian of the stop time, pressing the ENTER/ADV key will advance the schedule to the following display:

S _ M T W T F S
H O L I D A Y N O T E D B Y *

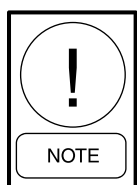

Whenever the daily schedule is changed for Monday, all the other days will change to the new Monday schedule. This means if the Monday times are not applicable for the whole week then the exceptional days would need to be reprogrammed to the desired schedule.

The line below the empty space next to the S is the cursor and will move to the next empty space when the ENTER/ADV key is pressed. To set the Holiday, the cursor is moved to the space following the day of the week of the holiday and the ↑ (UP) arrow key is pressed. An * will appear in the space signifying that day as a holiday. The * can be removed by pressing the ↓ (DOWN) arrow key.

To page to a specific day, press the SCHEDULE/ADVANCE DAY key until the desired day appears. The start and stop time of each day may be programmed differently using the ↑ (UP) and ↓ (DOWN) arrow, and ENTER/ADV keys.

The Holiday schedule must be programmed weekly—once the Holiday schedule runs, it will revert to the normal daily schedule.

After SUN (Sunday) schedule appears on the display a subsequent press of the SCHEDULE/ADVANCE DAY key will display the Holiday schedule. This is a two part display. The first reads:

Program Key

There are several operating parameters under the PROGRAM key that are programmable. These setpoints can be changed by pressing the PROGRAM key, and then the ENTER/ADV key to enter Program Mode. Continuing to press the ENTER/ADV key will display each operating parameter. While a particular parameter is being displayed, the ↑ (UP) and ↓ (DOWN) arrow keys can be used to change the value. After the value is changed, the ENTER/ADV key must be pressed to enter the data into memory. Table 11 shows the programmable limits and default values for each operating parameter.

Following are the displays for the programmable values in the order they appear:


**DISCHARGE PRESSURE
CUTOUT = 570 PSIG**

DISCHARGE PRESSURE CUTOUT is the discharge pressure at which the system will shutdown as monitored by the optional discharge transducer. This is a software shutdown that acts as a backup for the mechanical high pressure switch located in the refrigerant circuit. The system can restart when the discharge pressure drops 40 PSIG (2.76 barg) below the cutout point.

If the optional discharge pressure transducer is not installed, this programmable safety would not apply. It should be noted that every system has a mechanical high pressure cutout that protects against excessive high discharge pressure regardless of whether or not the optional discharge pressure is installed.

**SUCTION PRESSURE
CUTOUT = 80.0 PSIG**

The SUCTION PRESSURE CUTOUT protects the chiller from an evaporator freeze-up. If the suction pressure drops below the cutout point, the system will shut down. Typically, the cutout should be set to 80 PSIG (5.52 Bars) from water cooling.

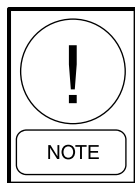

There are some exceptions when the suction pressure is permitted to temporarily drop below the cutout point. Details are explained under the topic of SYSTEM SAFETIES.

**LOW AMBIENT TEMP
CUTOUT = 25.0 °F**

The LOW AMBIENT TEMP CUTOUT allows the user to select the chiller outside ambient temperature cutout point. If the ambient falls below this point, the chiller will shut down. Restart can occur when temperature rises 2 °F (1.11 °C) above the cutout setpoint.

**LEAVING LIQUID TEMP
CUTOUT = 36.0 °F**

The LEAVING LIQUID TEMP CUTOUT protects the chiller from an evaporator freeze-up. Anytime the leaving chilled liquid temperature drops to the cutout point, the chiller shuts down. Restart will be permitted when the leaving chilled liquid temperature rises 2 °F (1.11 °C) above the cutout setpoint.

When water cooling mode is programmed (Options key), the value is fixed at 36.0 °F (2.22 °C) and cannot be changed. Glycol cooling mode can be programmed to values listed in Table 11.

**ANTI RECYCLE TIMER
= 600 SEC**

The programmable anti-recycle timer assures that systems do not short cycle, and the compressor motors have sufficient time to dissipate heat after a start. This timer is programmable under the PROGRAM key between 300 – 600 seconds. Whenever possible, to reduce cycling and motor heating, the anti-recycle timer should be adjusted as high as possible. The programmable anti-recycle timer starts the timer when the first compressor in a system starts. The timer begins to count down. If all the compressors in the circuit cycle off, a compressor within the circuit will not be permitted to start until the anti-recycle timer has timed out. If the lead system has run for less than 5 minutes, 3 times in a row, the anti-recycle timer will be extended to 10 minutes, if currently programmed for less than 10 minutes.

**FAN CONTROL ON
PRESSURE = XXX PSIG**


The Fan Control On-Pressure is the programmed pressure value that is used to stage the condenser fans on, in relation to discharge pressure. *Refer to Condenser Fan Control in the UNIT OPERATION section and Tables 17 and 18.*

FAN DIFFERENTIAL OFF
PRESSURE = XXX PSIG

The Fan Differential Off Pressure is the programmed differential pressure value that is used to stage the condenser fans off, in relation to discharge pressure. *Refer to Condenser Fan Control in the UNIT OPERATION section and Tables 17 and 18.*

TOTAL NUMBER OF
COMPRESSORS = 6

The TOTAL NUMBER OF COMPRESSORS is the total quantity of compressors in the chiller, and determines the stages of cooling available. Note in Table 11, the chiller may have single or dual systems. Dual system units may have 4, 5 or 6 compressors.

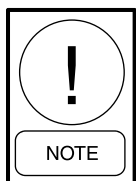

This MUST be programmed correctly to assure proper chiller operation.

NUMBER OF FANS
PER SYSTEM = X

The Number of Fans Per System must be programmed as needed to match the number of fans on each system.

SYS X TRIP VOLTS
= X.X VOLTS

UNIT TRIP VOLTS
= X.X VOLTS

Depending on the option, the trip voltage for a specific system or unit high current trip can be programmed. It also calibrates the current readout under the OPER DATA key. The approximate programmed value is calculated using the following formulas:

System Trip Volts

For individual system high current trip programming on chillers:

- Add the sum of the compressor and fan RLA's in the system
- Multiply the sum by 1.25
- Divide by 225A
- The resulting voltage is the value that should be programmed

For example, if fan and compressor RLA's total 100A:

$$\frac{5V \times 100A}{225A} \times 1.25 = \frac{625VA}{225A} = 2.8V$$

The programmed value will be 2.8V. A similar calculation and programming will be necessary for the other system in a 2-system chiller.

Unit Trip Volts

For total chiller high current trip programming on 460VAC chillers:

- Add the sum of all the compressor and fan RLA's in the chiller.
- Multiply the sum by 1.25
- Divide by 225A
- The resulting voltage is the value that should be programmed.

For example, if fan and compressor RLA's total 180A:

$$\frac{5V \times 180A}{225A} \times 1.25 = \frac{1125VA}{225A} = 5.0V$$

The programmed value will be 5.0V.

TABLE 11 – PROGRAM KEY LIMITS AND DEFAULT

PROGRAM VALUE	MODE	LOW LIMIT	HIGH LIMIT	DEFAULT
DISCHARGE PRESSURE CUTOUT	—	325 PSIG	575 PSIG	570 PSIG
		22.4 BARG	39.6 BARG	39.3 BARG
SUCTION PRESSURE CUTOUT	WATER COOLING	80.0 PSIG	120.0 PSIG	80.0 PSIG
		5.52 BARG	8.27 BARG	5.52 BARG
	GLYCOL COOLING	42.0 PSIG	70.0 PSIG	44.0 PSIG
		2.9 BARG	4.83 BARG	3.03 BARG
LOW AMBIENT TEMP, CUTOUT	STANDARD AMBIENT	25.0°F	60.0°F	25.0°F
		-3.9°C	15.6°C	-3.9°C
	LOW AMBIENT	0°F	60.0°F	25.0°F
		-17.8°C	15.6°C	-3.9°C
LEAVING CHILLED LIQUID TEMP CUTOUT	WATER COOLING	—	—	36.0°F
		—	—	2.2°C
	GLYCOL COOLING	1.0°F	36.0°F	36.0°F
		-18.3°C	2.2°C	2.2°C
ANTI-RECYCLE TIMER	—	300 SEC.	600 SEC.	600 SEC.
FAN CONTROL ON PRESSURE	—	360 PSIG	485 PSIG	385 PSIG
		24.8 BARG	33.4 BARG	26.5 BARG
FAN DIFFERENTIAL OFF PRESSURE	—	80 PSIG	160 PSID*	125 PSID
		5.51 BARG	11.03 BARG*	8.62 BARG
TOTAL NUMBER OF COMPRESSOR	SINGLE SYSTEM	2	3	3
	DUAL SYSTEM	4	6	6
NUMBER OF FANS PER SYSTEM		2	4	3
UNIT/SYSTEM TRIP VOLTS	CURRENT FEEDBACK	0.5	4.5	2.5
REMOTE UNIT ID	—	0	7	0

* The minimum discharge pressure allowed is 235 PSIG. The Fan Differential Off Pressure High Limit will be lowered (reduced) to prevent going below 235 PSIG based on where the fan control On Pressure is programmed.

**REMOTE UNIT ID
PROGRAMMED = X**

When communications is required with a BAS or OptiView Panel, individual unit IDs are necessary for communications with specific chillers on a single RS-485 line. ID 0-7 is selectable.

TABLE 12 – SETPOINTS QUICK REFERENCE LIST

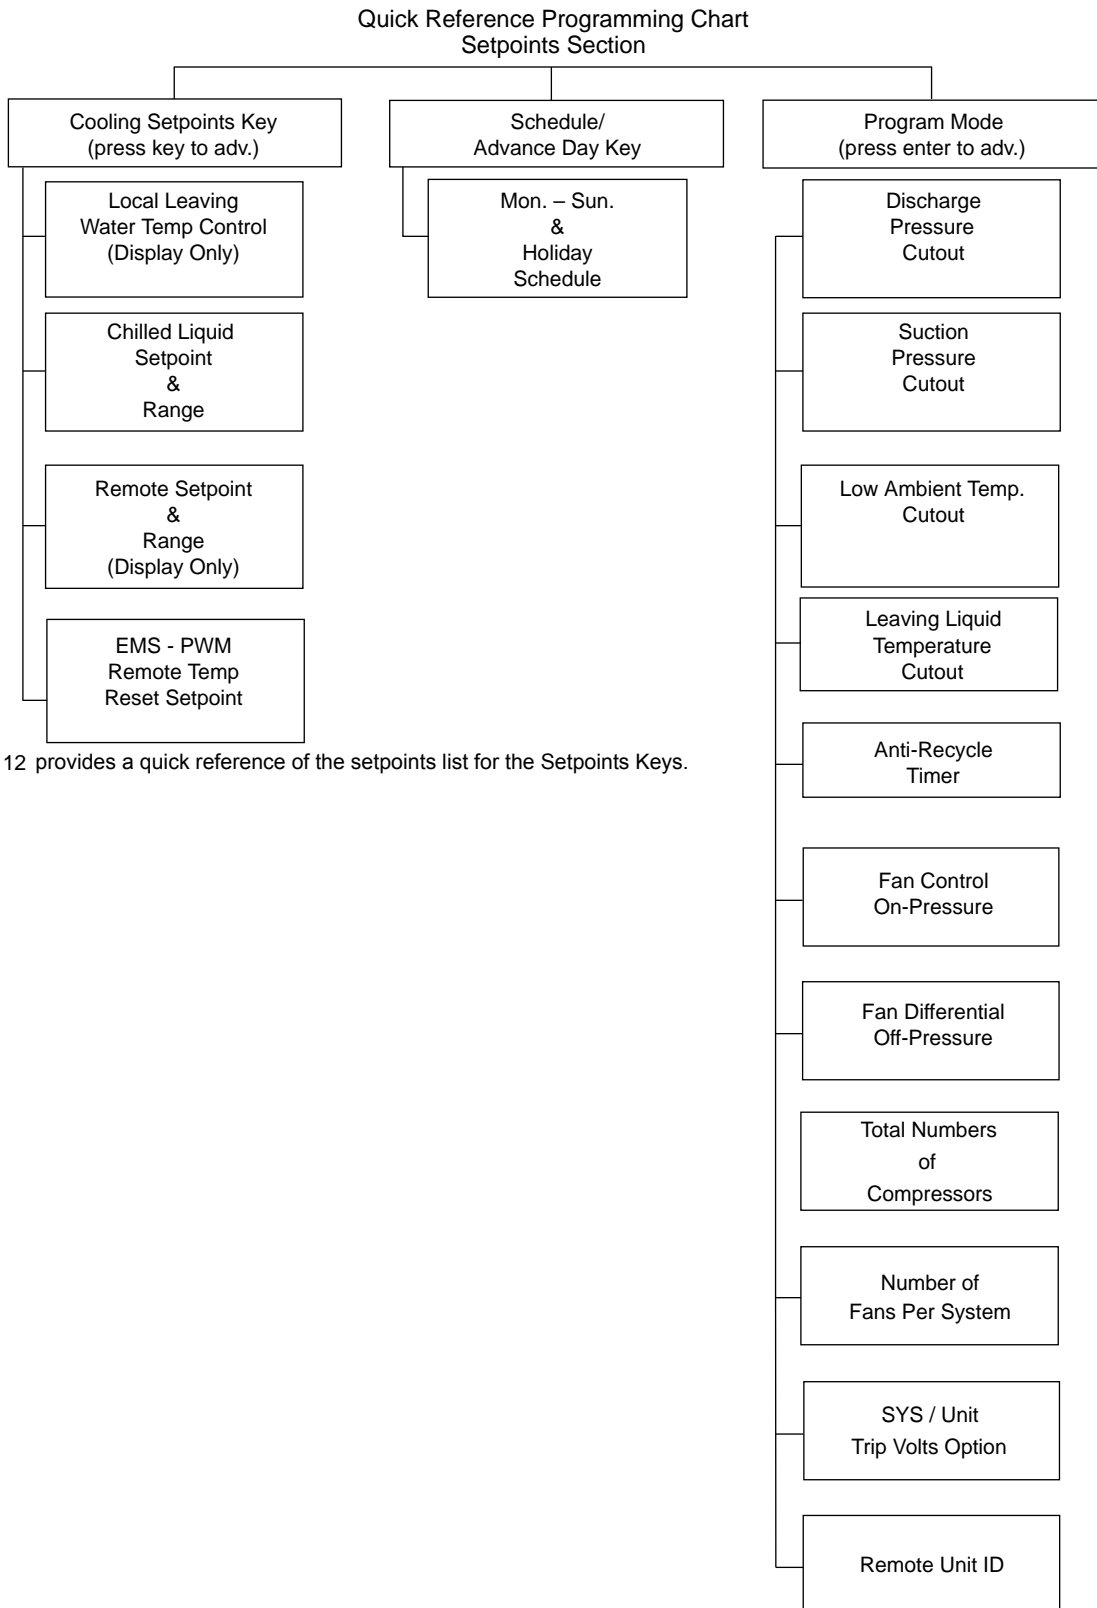


Table 12 provides a quick reference of the setpoints list for the Setpoints Keys.


UNIT KEYS



00070VIP

Options Key

There are many user programmable options under the OPTIONS key. The OPTIONS key is used to scroll through the list of options by repeatedly pressing the OPTIONS key. After the selected option has been displayed, the ↑ (UP) and ↓ (DOWN) arrow keys are then used to change that particular option. After the option is changed, the ENTER/ADV key must be pressed to enter the data into memory.

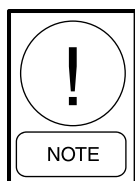

*Many of the **OPTIONS** displayed are only programmable under the **SERVICE MODE** and not under the **OPTIONS** key. Options only programmable under the **SERVICE MODE** are noted in the details describing the option.*

Table 13 shows the programmable options. Following are the displays in the order they appear:

Option 1 – Language

DISPLAY LANGUAGE
ENGLISH

English, Spanish, French, German, and Italian can be programmed.

Option 2 – System Switches

(two system units only, single system display is similar)

SYS 1 SWITCH ON
SYS 2 SWITCH ON

This allows both systems to run
or

SYS 1 SWITCH ON
SYS 2 SWITCH OFF

This turns system 2 off


SYS 1 SWITCH OFF
SYS 2 SWITCH ON

This turns system 1 off

or

SYS 1 SWITCH OFF
SYS 2 SWITCH OFF

This turns systems 1 and 2 off

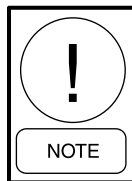

Turning a system off with its system switch allows a pumpdown to be performed prior to shutdown.

Option 3 – Chilled Liquid Cooling Type

CHILLED LIQUID
WATER

The chilled liquid is water. The Cooling Setpoint can be programmed from 40 °F to 70 °F (4.4 °C to 21.1 °C)

or

CHILLED LIQUID
GLYCOL

The chilled liquid is glycol. The Cooling Setpoint can be programmed from 10 °F to 70 °F (-12.2 °C to 21.1 °C).

Option 4 – Ambient Control Type**A M B I E N T C O N T R O L
S T A N D A R D**

The low ambient cutout is adjustable from 25 °F to 60 °F (-3.9 °C to 15.6 °C).

or

**A M B I E N T C O N T R O L
L O W A M B I E N T**

The low ambient cutout is programmable down to 0 °F (-17.8 °C). **A low ambient kit MUST be installed for this option to be chosen. If the kit is NOT installed, and low ambient is selected, low pressure faults and compressor damage may occur.**

Option 5 – Local/Remote Control Type**L O C A L / R E M O T E M O D E
L O C A L**

When programmed for LOCAL, an ISN or RCC control can be used to monitor only. The micro panel will operate on locally programmed values and ignore all commands from remote devices, or through the RS-485 inputs. The chiller will communicate and send data to the remote monitoring devices.

or

**L O C A L / R E M O T E M O D E
R E M O T E**

This mode should be selected when an ISN or RCC control is to be used to control the chiller. This mode will allow the ISN to control the following items: Remote Start/Stop, Cooling Setpoint, Load Limit, and History Buffer Request. If the unit receives no valid ISN transmission for 5 minutes, it will revert back to the locally programmed values.

Option 6 – Unit Control Mode**C O N T R O L M O D E
R E T U R N L I Q U I D**

Unit control is based on return chilled liquid temp. Return Chilled Liquid Control can only be selected on units that have 4 to 6 compressors (dual system units).

or

**C O N T R O L M O D E
L E A V I N G L I Q U I D****Option 7 – Display Units****D I S P L A Y U N I T S
I M P E R I A L**

This mode displays system operating values in Imperial units of °F or PSIG.

or

**D I S P L A Y U N I T S
S I**

This mode displays system operating values in Scientific International Units of °C or barg.

Option 8 – Lead/Lag Type (two system units only)**L E A D / L A G C O N T R O L
M A N U A L S Y S 1 L E A D**

SYS 1 selected as lead compressor. SYS 1 lead option MUST be chosen if Hot Gas Bypass is installed.

or

**L E A D / L A G C O N T R O L
M A N U A L S Y S 2 L E A D**

SYS 2 selected as lead compressor.

or

**L E A D / L A G C O N T R O L
A U T O M A T I C**

Lead/lag between systems may be selected to help equalize average run hours between systems on chillers with 2 refrigerant systems. Auto lead/lag allows automatic lead/lag of the two systems based on an average run hours of the compressors in each system. A new lead/lag assignment is made whenever all compressors shut down. The microprocessor will then assign the “lead” to the system with the shortest average run time.

Option 9 – Condenser Fan Control Mode**F A N C O N T R O L
D I S C H A R G E P R E S S U R E**

Condenser fans are controlled by discharge pressure only. This mode must be chosen.

or

FAN CONTROL AMBIENT & DSCH PRESS

Do not select this option on R-410A chillers.

Option 10 – Manual Override Mode

MANUAL OVERRIDE MODE DISABLED

This option allows overriding of the daily schedule that is programmed. MANUAL OVERRIDE MODE – DISABLED indicates that override mode has no effect.

or

MANUAL OVERRIDE MODE ENABLED

Manual Override Mode is enabled. This is a service function and when enabled, will allow the unit to start when shut down on the daily schedule. It will automatically be disabled after 30 minutes.

Option 11 – Current Feedback Options Installed

CURRENT FEEDBACK NONE

This mode should be selected when the panel is not equipped with current sensing capability.

or

CURRENT FEEDBACK ONE PER UNIT

This mode should be selected when an optional 2ACE Module is installed to allow combined current monitoring of all systems by sensing current on the incoming line.

or

CURRENT FEEDBACK ONE PER SYSTEM

This mode should be selected when an optional 2ACE module is installed to allow individual current monitoring of each system. SYS 1 input is to J7 of the I/O. SYS 2 input is to J8 of the I/O.

Option 12 – Power Fail Restart

POWER FAIL RESTART AUTOMATIC

Chiller auto restarts after a power failure.

POWER FAIL RESTART MANUAL

After a power failure, the UNIT switch must be toggled before restart at the unit is allowed. NORMALLY MANUAL RESTART should NOT BE SELECTED.

Option 13 – Soft Start Enable/Disable

SOFT START DISABLED

SOFT START “DISABLED” MUST be selected on all chillers.

This message may not be viewable on non-European chillers.

Option 14 – Unit Type

UNIT TYPE LIQUID CHILLER

The UNIT TYPE message cannot be modified under the UNIT keys.



“LIQUID CHILLER” must be displayed, or damage to compressors or other components will occur if operated in the HEAT PUMP or CONDENSING UNIT modes.

If unit type needs to be changed to make the unit a liquid chiller, remove power and then remove the jumper between J11-7 and J11-12 on the I/O Board. Reapply power to the micropanel and the microprocessor will store the change.

Option 15 – Refrigerant Type

REFRIGERANT TYPE R – 410 A

Refrigerant type R-410A must be selected under Service Mode. Refrigerant type is displayed under the OPTIONS Key, but is only programmable in Service Mode.



Incorrect programming may cause damage to compressors.

Option 16 – Expansion Valve Type

**EXPANSION VALVE TYPE
THERMOSTATIC**

Expansion valve type, thermostatic or electronic may be selected under Service Mode. Expansion valve type is displayed under the OPTIONS key, but is only programmable in Service Mode. YLAA chillers will typically always be equipped with thermostatic expansion valves.



Incorrect programming may cause damage to compressors.

Also see the “Unit Keys Programming Quick Reference List” in Table 13.

Option 17 – Flash Card Update

**FLASH CARD UPDATE
DISABLED**

A Flash Card is used to input the operating program into the chiller IPU. A Flash Card is used instead of an EPROM. Normally, a Flash Card update is not required and the message above will be displayed.

If the operating software is to be updated, insert the Flash Card into the Flash Card input port. Turn off the unit switch and set the FLASH CARD UPDATE TO “ENABLED” using the ↑ and ↓ keys.

**FLASH CARD UPDATE
ENABLED**

Press the ENTER key and the following message will be displayed until the update has been completed. The keypad and display will not respond during the update. DO NOT reset or power down the chiller until the update is completed.

**FLASH CARD UPDATING
PLEASE WAIT . . .**

After the update is completed, an automatic reboot will occur. If an error occurred, the following message will appear with the error code and no reboot will occur:

**FLASH CARD UPDATE
ERROR XXXXX**


If the update resulted in an error, the original program will still be active. When an error occurs, assure the correct Flash Card was utilized. Incorrect chiller software will cause an error. If this is not the case, the Flash Card is most likely defective or the IPU and I/O combo board is bad.

Option 18 – Remote Temperature Reset

**REMOTE TEMP RESET
INPUT XXXXXXXXXXXXXXXX**

Remote Temp Reset input selection is programmable according to the type of input utilized. The following options are available:

- DISABLED (default)
- 0.0 – 10.0 (DC)
- 2.0 – 10.0V (DC)
- 0.0 – 20.0 mA
- 4.0 – 20.0 mA

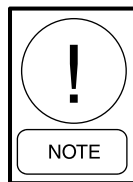

The options display message for Remote Temp Reset Input only appears if the Temp Reset Option is enabled under Service Mode. The option must be enabled under the Service Mode for the Remote Temperature Reset to operate.

Option 19 – Pump Control


Pump Control is utilized to operate the optional onboard pump kit or to control an external pump through dry contacts 23 and 24 on Terminal Block XTBC2. To use this option, the following selection should be made in the Service Mode:

```

      Y O R K   H Y D R O
K I T   P U M P S           = 1
  
```

When YORK HYDRO KIT PUMPS = 1, the controls will be closed to run the pumps whenever any one of the following conditions are true:

- Low Leaving Chilled Liquid Fault
- Any compressor is running
- Daily Schedule is ON and Remote Stop is closed.

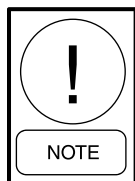

Even if one of the above conditions are true, the pump will not run if the chiller has been powered up for less than 30 seconds; or if the pump has run in the last 30 seconds to prevent pump overheating.

```

      E X T E R N A L
E V A P   P U M P
  
```

EXTERNAL EVAP PUMP should be selected if an external pump is being controlled with the chiller pump contacts. The operation will be the same as YORK HDRO KIT PUMPS = 1

The following option should not be selected.

```

      Y O R K   H Y D R O
K I T   P U M P S           = 2
  
```

Option 20 – Pump Selection

The displays for this PUMP SELECTION option should only appear if “YORK HYDRO KIT PUMPS = 2” are selected under Option 19. Presently, this option should not be used.

CLOCK

The CLOCK display shows the current day, time, and date. Pressing the CLOCK key will show the current day, time, and date.

It is important that the date and time be correct, otherwise the daily schedule will not function as desired if programmed. In addition, for ease of troubleshooting via the History printouts, the day, time, and date should be correct.

To change the day, time, and date press the CLOCK key. The display will show something similar to the following:

```

T O D A Y   I S   E R I   0 8 : 5 1 A M
      2 5   J A N   0 2
  
```

The line under the F is the cursor. If the day is correct, press the ENTER/ADV key. The cursor will move under the 0 in 08 hours. If the day is incorrect, press the ↑ (UP) or ↓ (DOWN) arrow keys until the desired day is displayed and then press the ENTER/ADV key at which time the day will be accepted and the cursor will move under the first digit of the “2 digit hour”. In a similar manner, the hour, minute, meridian, month, day, and year may be programmed, whenever the cursor is under the first letter/numeral of the item. Press the ↑ (UP) or ↓ (DOWN) arrow keys until the desired hour, minute, meridian; day, month, and year are displayed. Pressing the ENTER/ADV key will save the value and move the cursor on to the next programmable variable.

TABLE 13 – UNIT KEYS OPTIONS PROGRAMMING QUICK REFERENCE LIST

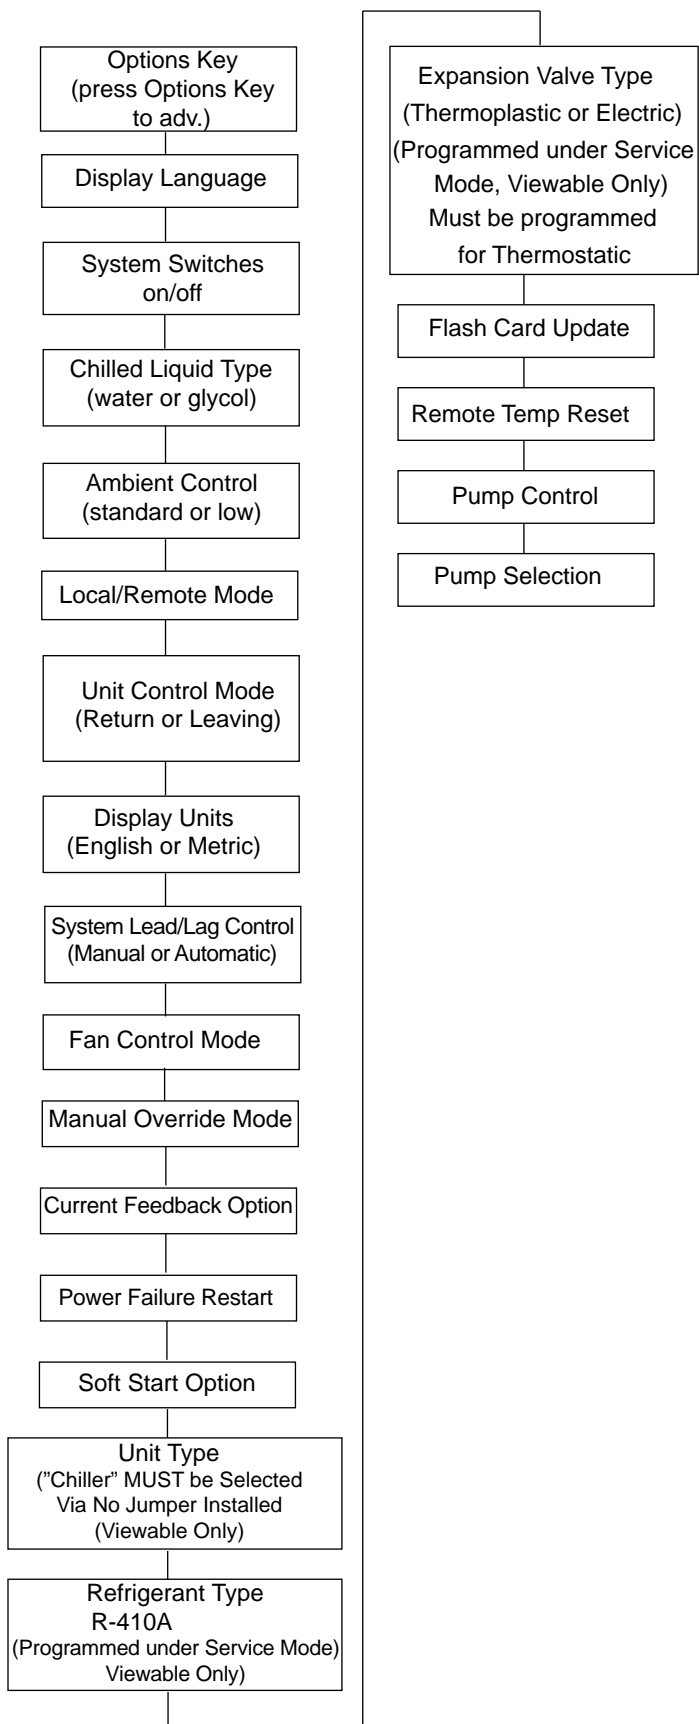


Table 13 provides a quick reference list for the Unit key setpoints.

LD07405d

SECTION 8 – UNIT OPERATION

CAPACITY CONTROL

To initiate the start sequence of the chiller, all run permissive inputs must be satisfied (flow/remote start/stop switch), and no chiller or system faults exist.

The first phase of the start sequence is initiated by the Daily Schedule Start or any Remote Cycling Device. If the unit is shut down on the daily schedule, the chilled water pump contacts (Terminals 23 and 24 of XTBC2) will close to start the pump when the daily schedule start time has been reached. Once flow has been established and the flow switch closes, capacity control functions are initiated, if the remote cycling contacts wired in series with the flow switch are closed.

It should be noted that the chilled water pump contacts (Terminals 23 and 24 of XTBC2) are not required to be used to cycle the chilled water pump. However, in all cases the flow switch must be closed to allow unit operation.

The control system will evaluate the need for cooling by comparing the actual leaving or return chilled liquid temperature to the desired setpoint, and regulate the leaving or return chilled liquid temperature to meet that desired setpoint.

SUCTION PRESSURE LIMIT CONTROLS

The anticipatory controls are intended to prevent the unit from ever actually reaching a low-pressure cutout. Loading is prevented, if the suction pressure drops below 1.15 x suction pressure cutout (15% below the cutout). Loading may reoccur after suction pressure rises above the unload point and a period of one minute elapses. This control is only operable if the optional suction pressure transducers are installed.

DISCHARGE PRESSURE LIMIT CONTROLS

The discharge pressure limit controls unload a system before it reaches a safety limit due to high load or dirty condenser coils. The microprocessor monitors discharge pressure and unloads a system, if fully loaded, by one compressor when discharge pressure exceeds the programmed cutout minus 10 PSIG (0.69 barg). Reloading will occur when the discharge pressure on the affected system drops to 85% of the unload pressure and 10 minutes have elapsed.

This control is only applicable if optional discharge pressure transducers are installed.

LEAVING CHILLED LIQUID CONTROL

The setpoint, when programmed for Leaving Chilled Liquid Control, is the temperature the unit will control to within plus or minus the (control) cooling range. The Setpoint High Limit is the Setpoint plus the Cooling Range. The Setpoint Low Limit is the Setpoint minus the Cooling Range. Fig. 26 should be utilized to aid in understanding the following description of Leaving Chilled Liquid Control.

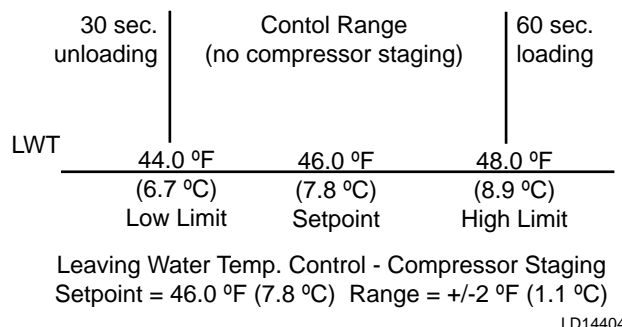


FIG. 26 – LEAVING WATER TEMPERATURE CONTROL EXAMPLE

If the leaving chilled liquid temperature is above the Setpoint High Limit, the lead compressor on the lead system will be energized along with the liquid line solenoid. Upon energizing any compressor, the 60 second Anti-Coincidence timer will be initiated to prevent multiple compressors from turning on.

If after 60 seconds of run-time the leaving chilled liquid temperature is still above the Setpoint High Limit, the next compressor in sequence will be energized. Additional compressors will be energized at a rate of once every 60 seconds if the chilled liquid temperature remains above the Setpoint High Limit and the chilled liquid temperature is dropping less than 3 °F/min. The lag system will not be allowed to start a compressor until the lead system has run for 5 minutes.

If the chilled liquid temperature falls below the Setpoint High Limit but is greater than the Setpoint Low Limit, loading and unloading do not occur. This area of control is called the control range.

If the chilled liquid temperature drops to between Setpoint Low Limit and 0.5 °F (.28 °C) below the Setpoint Low Limit, unloading (a compressor turns off) occurs at a rate of 1 every 30 seconds. If the chilled liquid temperature falls to a value greater than 0.5 °F (.28 °C) below the Setpoint Low Limit but not greater than 1.5 °F (.83 °C) below the Setpoint Low Limit, unloading occurs

at a rate of 20 seconds. If the chilled liquid temperature falls to a value greater than 1.5 °F (.83 °C) below the Setpoint Low Limit, unloading occurs at a rate of 10 seconds. If the chilled liquid temperature falls below 1 °F above the low chilled liquid temperature cutout, unloading occurs at a rate of 10 seconds if it is greater than 10 seconds.

In water cooling mode on R-410A chillers, the minimum low limit of the control range will be 40.0°F. For leaving chilled liquid temperature setpoint and control range combinations that result in the low limit of the control range being below 40.0°F, the low limit will be reset to 40.0°F and the difference will be added to the high limit. This will result in a control range the same size as programmed but not allow the unit to run below 40.0°F. This control will not affect glycol chillers.

Hot gas, if present, will be the final step of capacity. Hot gas is energized when only a single compressor is running and LWT is less than SP. Hot gas is turned off as temperature rises when LWT is more than SP + CR/2. If temperature remains below the setpoint low limit on the lowest step of capacity, the microprocessor will close the liquid line solenoid, after turning off hot gas, and pump the system down before turning off the last compressor in a system.

The leaving chilled liquid setpoint is programmable from 40 °F to 70 °F (4.4 °C to 21.1 °C) in water chilling mode and from 10 °F to 70 °F (-12.2 °C to 21.1 °C) in glycol chilling mode. In both modes, the cooling range can be from plus or minus 1.5 °F to plus or minus 2.5 °F (plus or minus .83 °C to 1.39 °C). leaving chilled liquid control

LEAVING CHILLED LIQUID CONTROL OVERRIDE TO REDUCE CYCLING

To avoid compressor cycling the microprocessor will adjust the setpoint upward temporarily. The last run time of the system will be saved. If the last run time was greater than 5 minutes, no action is to be taken. If the last run time for the lead system was less than 5 minutes, the microprocessor will increase the setpoint high limit according to Fig 27, with a maximum value allowed of 5 °F.

If adding the setpoint adjust value to the setpoint high limit causes the setpoint high limit to be greater than 50 °F, the setpoint high limit will be set to 50 °F, and the difference will be added to the setpoint low limit.

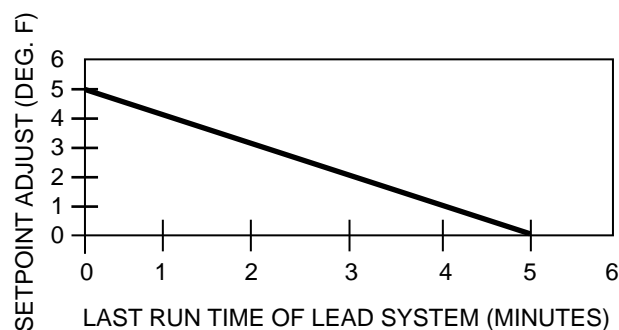


FIG. 27 – SETPOINT ADJUST

LD11415

Once a system runs for greater than 5 minutes, the setpoint adjust will be set back to 0. This will occur while the system is still running.

LEAVING CHILLED LIQUID SYSTEM LEAD/LAG AND COMPRESSOR SEQUENCING

A Lead/Lag option may be selected to help equalize average run hours between systems with 2 refrigerant systems. This may be programmed under the OPTIONS key. Auto Lead/Lag allows automatic Lead/Lag of the two systems based on average run hours of the compressors in each system. Manual Lead/Lag selects specifically the sequence which the microprocessor starts systems.

On a hot water start, once a system starts, it will turn on all compressors before the next system starts a compressor. The microprocessor will sequence compressors within each circuit to maximize individual compressor run time on individual compressors within a system to prevent short cycling.


Each compressor in a system will be assigned an arbitrary priority number 1, 2, or 1, 2, 3. The non-running compressor within a system with the lowest priority number will always be the next compressor to start. The running compressor with priority number 1 will always be the next to shut off. Whenever a compressor is shut off, the priority numbers of all compressors will be decreased by 1 with wrap-around. This control scheme assures the same compressor does not repeatedly cycle on and off.

Once the second system starts a compressor on a 2 system chillers, the microprocessor will attempt to equally load each system as long as the system is not limiting or pumping down. Once this occurs, loading and unloading will alternate between systems, loading the lead system first or unloading the lag system first.

RETURN CHILLED LIQUID CONTROL

(Can be used on Dual System 4, 5 and 6 Comp Units Only)

Return chilled liquid control is based on staging the compressors to match the cooling load. The chiller will be fully loaded when the return water temperature is equal to the Cooling Setpoint plus the Range. The chiller will be totally unloaded (all compressors off) when the return water temperature is equal to the Cooling Setpoint (See sample in Table 14). At return water temperatures between the Cooling Setpoint and Cooling Setpoint plus Range, compressor loading and unloading will be determined by the formulas in Table 15.

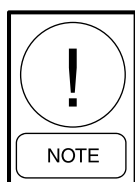

Return Chilled Liquid Control MUST only be used when constant chilled liquid flow is ensured.

The RANGE MUST always be programmed to equal the temperature drop across the evaporator when the chiller is “fully loaded”. Otherwise, chilled liquid temperature will over or under shoot. Variable flow must never be used in return chilled liquid mode.

Normal loading will occur at intervals of 60 seconds according to the temperatures determined by the formulas. Unloading will occur at a rate of 30 seconds according to the temperatures determined in the formulas used to calculate the on and off points for each step of capacity.

The return chilled liquid setpoint is programmable from 40 °F to 70 °F (4.4 °C to 21.1 °C) in water chilling mode and from 10 °F to 70 °F (-12.2 °C to 21.1 °C) in glycol chilling mode. In both modes, the cooling range can be from 4 °F to 20 °F (2.2° to 11.1 °C).

As an example of compressor staging (refer to Table 14), a chiller with six compressors using a Cooling Setpoint programmed for 45 °F (7.20 °C) and a Range Setpoint of 10 °F (5.56 °C). Using the formulas in Table 15, the control range will be split up into six (seven including hot gas) segments, with the Control Range determining the separation between segments. Note also that the Cooling Setpoint is the point at which all compressors are off, and Cooling Setpoint plus Range is the point all compressors are on. Specifically, if the return water temperature is 55 °F (12.8 °C), then all compressors will be on, providing full capacity. At nominal gpm, this would provide approximately 45 °F (7.2 °C) leaving water temperature out of the evaporator.

If the return water temperature drops to 53.4 °F (11.9 °C), one compressor would cycle off leaving five compressors running. The compressors would continue to cycle off approximately every 1.7 °F (.94 °C), with the exception of hot gas bypass. Notice that the hot gas bypass would cycle on when the return water temperature dropped to 46.25 °F (7.9 °C). At this point one compressor would be running with hot gas.

Should the return water temperature rise from this point to 46.7 °F (8.2 °C), the hot gas bypass would shut off, still leaving one compressor running. As the load increased, the compressors would stage on every 1.7 °F (.94 °C).

Also note that Table 15 not only provides the formulas for the loading (ON POINT) and unloading (OFF POINT) of the system, the “STEP” is also shown in the tables. The “STEP” is the increment in the sequence of the capacity control scheme that can be viewed under the OPER DATA key. Refer to the section on the “Display/Print” keys for specific information on the OPER DATA key.

TABLE 14 – SAMPLE COMPRESSOR STAGING FOR RETURN WATER CONTROL

Compressor Staging for Return Water Control						
4 Compressor						
Cooling Setpoint = 45 °F (7.2 °C) Range = 10 °F(5.6 °C)						
# of Comp ON	0	* 1+HG	1	2	3	4
RWT	45 °F (7.2 °C)	46.25 °F (7.9 °C)	47.5 °F (8.6 °C)	50.0 °F (10.0 °C)	52.5 °F (11.4 °C)	55.0 °F (12.8 °C)

*Unloading only

TABLE 15 – RETURN CHILLED LIQUID CONTROL FOR 4 COMPRESSORS (6 STEPS)

*STEP	COMPRESSOR	COMPRESSOR ON POINT	COMPRESSOR OFF POINT
0	0	SETPOINT	SETPOINT
1	1 W/HGB	SP + CR/8 (Note 1)	SETPOINT
2	1 NO HGB	SP + CR/4	SP + CR/8
3	2	SP + 2*CR/4 (Note 2)	SP + CR/4
4	2	SP + 2*CR/4	SP + CR/4 (Note 3)
5	3	SP + 3*CR/4	SP + 2*CR/4
6	4	SP + CR	SP + 3*CR/4

Notes:

1. Step 1 is Hot Gas Bypass and is skipped when loading occurs. Hot Gas Bypass operation is inhibited during Pumpdown.
2. Step 3 is skipped when loading occurs.
3. Step 4 is skipped when unloading occurs.

* STEP can be viewed using the OPER DATA key and scrolling to COOLING DEMAND.

RETURN CHILLED LIQUID SYSTEM LEAD/LAG AND COMPRESSOR SEQUENCING

A lead/Lag option may be selected to help equalize average run hours between systems with 2 refrigerant systems. This may be programmed under the OPTIONS key. Auto Lead/Lag of the 2 systems based on average run hours of the compressors in each system. Manual Lead/Lag selects specifically the sequence which the microprocessor starts the systems.

The microprocessor will sequence compressors load and unload systems according to Table 16. The microprocessor will lead/lag compressors within each circuit to maximize individual compressor run time for the purpose of lubrication. It will also prevent the

same compressor from starting 2 times in a row. The microprocessor will not attempt to equalize run time on individual compressors within a system.

Each compressor in a system will be assigned an arbitrary number 1, or 2. The non-running compressor within a system with the lowest priority number will always be the next compressor to start. The running compressor with priority number 1 will always be the next compressor to shut off. Whenever a compressor is shut off, the priority numbers of all compressors in each system will be decreased by 1 with the wrap around. This control scheme assures the same compressor does not repeatedly cycle on and off.

TABLE 16 – RETURN CHILLED LIQUID CONTROL FOR 4 COMPRESSORS (6 STEPS)

Step	LEAD SYSTEM				LAG SYSTEM		
	COMP 1	COMP 2	-		COMP 1	COMP 2	-
0	OFF	OFF	-	See NOTE 1	OFF	OFF	-
1	ON + HG	OFF	-		OFF	OFF	-
2	ON	OFF	-		OFF	OFF	-
3	ON	OFF	-	See NOTE 2	ON	OFF	-
4	ON	ON	-		OFF	OFF	-
5	ON	ON	-	See NOTE 3	ON	OFF	-
6	ON	ON	-		ON	ON	-

NOTES

1. Step is Hot Gas Bypass and is skipped when loading occurs. Hot Gas Bypass operation is inhibited during pumpdown. For Leaving Chilled Liquid Control the Hot Gas Bypass solenoid is energized only when the lead compressor is running and the LWT < SP, the Hot Gas Bypass solenoid is turned off when the LWT > SP + CR/2.
1. Step 1 is not used for loading or unloading.
2. Step 3 is skipped when loading occurs.
3. Step 4 is skipped when unloading occurs.

ANTI-RECYCLE TIMER

The programmable anti-recycle timer assures that systems do not cycle. This timer is programmable under the PROGRAM key between 300 – 600 seconds. Whenever possible, to reduce cycling and motor heating, the anti-recycle timer should be adjusted to 600 seconds. The programmable anti-recycle timer starts the timer when the first compressor in a system starts. The timer begins to count down. If all of the compressors in a circuit cycle off, a compressor within the circuit will not be permitted to start until the anti-recycle timer has timed out. If the lead system has run for less than 5 minutes, 3 times in a row, the anti-recycle timer will be extended to 10 minutes.

ANTI-COINCIDENCE TIMER

This timer is not present on single-system units. Two timing controls are present in software to assure compressors within a circuit or between systems, do not start simultaneously. The anti-coincidence timer assures there is at least a one minute delay between system starts on 2-circuit systems. This timer is NOT programmable. The load timers further assure that there is a minimum time between compressor starts within a system.

EVAPORATOR PUMP CONTROL AND YORK HYDRO KIT PUMP CONTROL

The evaporator pump dry contacts (XTBC2 – terminals 23 – 24) are energized when any of the following conditions are true:

1. Low Leaving Chilled Liquid Fault
2. Any compressor is running
3. Daily Schedule is ON, Unit Switch is ON and Remote Stop is closed.

The pump will not run if the micro panel has been powered up for less than 30 seconds or if the pump has run in the last 30 seconds to prevent pump motor overheating.

Whenever the option “YORK HYDRO KIT PUMPS = 1” is selected under the OPTIONS key, the pump control will be as described above. DO NOT SELECT the option “YORK HYDRO KIT PUMPS = 2” under the OPTIONS key. If a dual pump option is installed, the active pump is selected by the selector switch.

EVAPORATOR HEATER CONTROL

The evaporator heater is controlled by ambient air temperature. When the ambient temperature drops below 40 °F (4.4 °C) the heater is turned on. When the temperature rises above 45 °F (7.2 °C) the heater is turned off. An under voltage condition will keep the heater off until full voltage is restored to the system.

PUMPDOWN CONTROL

Each system has a pump-down feature upon shut-off. Manual pumpdown from the keypad is not possible. On a non-safety, non-unit switch shutdown, all compressors but one in the system will be shut off. The LLSV will also be turned off. The final compressor will be allowed to run until the suction pressure falls below the cutout, or for 180 seconds, whichever comes first.

STANDARD CONDENSER FAN CONTROL

Condenser fan operation must be programmed with the OPTIONS key under “Fan Control.” Condenser fan must be selected for Discharge Pressure only. Fan control by discharge pressure will work according to the tables on the following pages. The fan control on-pressure and fan differential off-pressure are programmable under the PROGRAM key. Standard fan control operates down to a temperature of 25° F.

The delay between turning on and off fan stages is always fixed at 5 seconds.

When a fan stage is turned on by pressure, the on pressure for the next stage is increased 20 PSIG and ramped back to the programmed on pressure over the next 20 seconds. Typically, standard ambient control ON pressure should be programmed at 385 PSIG with a differential of 125 PSIG.

When a fan stage is turned off (programmed on pressure minus programmed differential), the off pressure for the next stage is decreased 20 PSIG and ramped back to the programmed off pressure minus the differential over the next 20 seconds.

Condenser fan locations are shown in Fig. 28. Detailed Standard Fan Control operation is shown in Table 17 and 18.

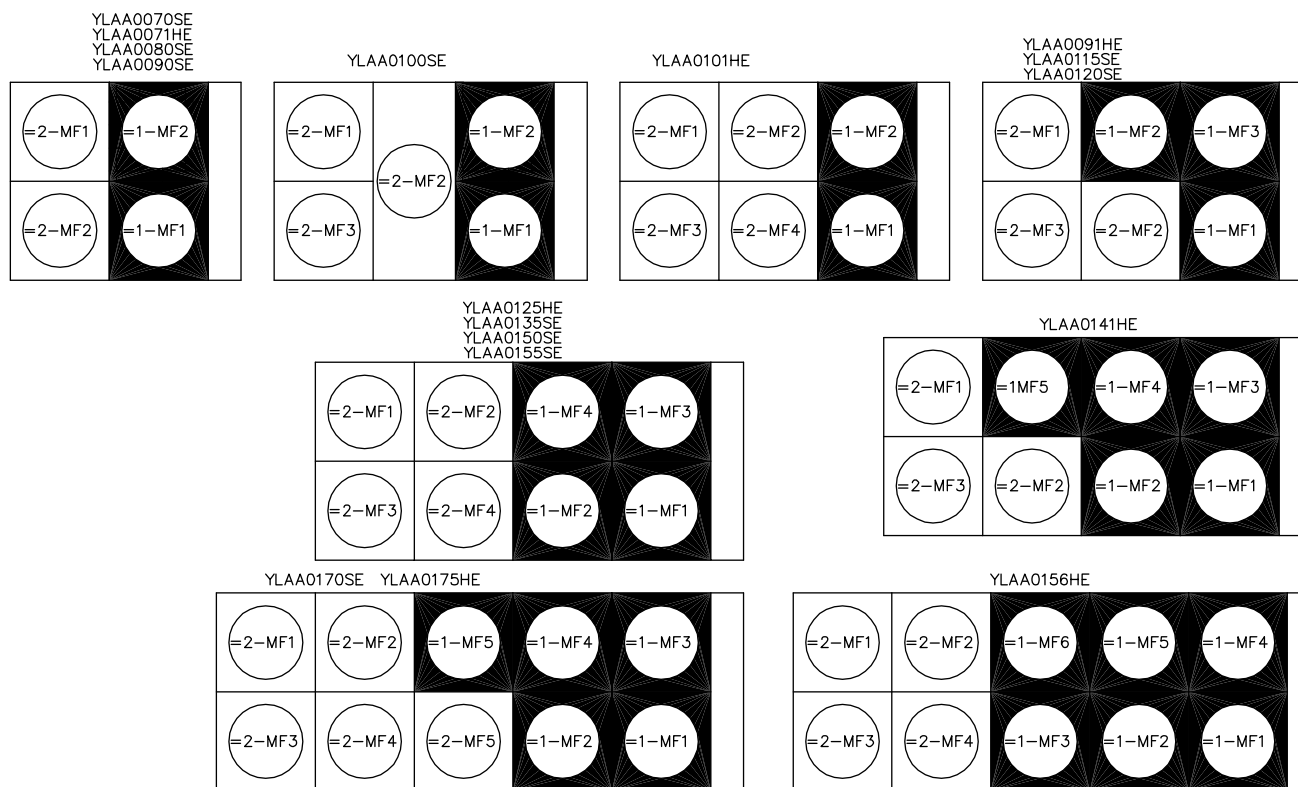



FIG. 28 – CONDENSER FAN LOCATIONS WIRING DIAGRAMS

**TABLE 17 – YLAA STANDARD CONDENSER FAN CONTROL USING DISCHARGE PRESSURE ONLY
(2, 3, OR 4 FANS PER SYSTEM)**

FAN STAGE	ON*	OFF**	IPU II I/O OUTPUT		FAN CONTACTOR		FAN #	
			SYS 1	SYS 2	SYS 1	SYS 2	SYS 1	SYS 2
1	DP > PROGRAMMED FAN CONTROL ON PRESSURE	DP < PROGRAMMED FAN CONTROL ON PRESSURE MINUS PROGRAMMED DIFFERENTIAL PRESSURE	7B7-8	TB10-8	1-KF1	2-KF1	1-MF1	2-MF2
2	DP > PROGRAMMED FAN CONTROL ON PRESSURE & FAN STAGE 1 IS ENERGIZED	DP < PROGRAMMED FAN CONTROL ON PRESSURE MINUS PROGRAMMED DIFFERENTIAL PRESSURE & FAN STAGE 1 IS ENERGIZED	TB7-8 & TB7-9	TB10-8 & TB10-9	1-KF1 & 1-KF2	2-KF1 & 2-KF2	1-MF1 & 1-MF2	2-MF1 & 2-MF2
3	DP > PROGRAMMED FAN CONTROL ON PRESSURE AND FAN STAGES 1 & 2 ARE ENERGIZED	DP < PROGRAMMED FAN CONTROL ON PRESSURE MINUS PROGRAMMED DIFFERENTIAL PRESSURE & FAN STAGES 1 & 2 ARE ENERGIZED	TB7-8 & TB7-9 & TB7-10	TB10-8 & TB10-9 & TB10-10	1-KF1 & 1-KF2 & 1-KF3	2-KF1 & 2-KF2 & 2-KF3	3 FAN: 1-MF1 & 1-MF2 & 1-MF3 4 FAN: 1-MF1 & 1-MF2 & 1-MF3 & 1-MF4	3 FAN: 2-MF1 & 2-MF2 & 2-MF3 4 FAN: 2-MF1 & 2-MF2 & 2-MF3 & 2-MF4

* When a fan stage is turned on, the pressure for the next stage is increased 20 PSIG and ramped back to the programmed on pressure over the next 20 seconds.

** When a fan stage is turned off (Programmed ON pressure minus the differential), the OFF pressure for the next stage is decreased 20 PSIG and ramped back to the programmed OFF pressure minus the differential.

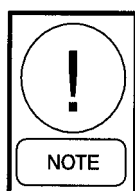


The time delay (fan delay timer) between turning fan stages on and off is fixed at 5 seconds.

**TABLE 18 – YLAA STANDARD CONDENSER FAN CONTROL USING DISCHARGE PRESSURE ONLY
(5 OR 6 FANS PER SYSTEM)**

FAN STAGE	ON*	OFF**	IPU/I I/O OUTPUT		FAN CONTACTOR		FAN #	
			SYS 1	SYS 2	SYS 1	SYS 2	SYS 1	SYS 2
1	DP > PROGRAMMED FAN CONTROL ON PRESSURE	DP < PROGRAMMED FAN CONTROL ON PRESSURE MINUS PROGRAMMED DIFFERENTIAL PRESSURE	TB7-8	TB10-8	1-KF1	2-KF1	1-MF1	2-MF1
2	DP > PROGRAMMED FAN CONTROL ON PRESSURE & FAN STAGE 1 IS ENERGIZED	DP < PROGRAMMED FAN CONTROL ON PRESSURE MINUS PROGRAMMED DIFFERENTIAL PRESSURE & FAN STAGE 1 IS ENERGIZED	TB7-8 & TB7-9	TB10-8 & TB10-9	1-KF1 & 1-KF2	2-KF1 & 2-KF2	1-MF1 & 1-MF2 & 1-MF3	2-MF1 & 2-MF2 & 2-MF3
3	DP > PROGRAMMED FAN CONTROL ON PRESSURE AND FAN STAGES 1 & 2 ARE ENERGIZED	DP < PROGRAMMED FAN CONTROL ON PRESSURE MINUS PROGRAMMED DIFFERENTIAL PRESSURE & FAN STAGES 1 & 2 ARE ENERGIZED	TB7-8 & TB7-9 & TB7-10	TB10-8 & TB10-9 & TB10-10	1-KF1 & 1-KF2 & 1-KF3	2-KF1 & 2-KF2 & 2-KF3	5 FAN: 1-MF1 & 1-MF2 & 1-MF3 & 1-MF4 & 1-MF5 6 FAN: 1-MF1 & 1-MF2 & 1-MF3 & 1-MF4 & 1-MF5 & 1-MF6	5 FAN: 1-MF1 & 1-MF2 & 1-MF3 & 1-MF4 & 1-MF5

* When a fan stage is turned on, the pressure for the next stage is increased 20 PSIG and ramped back to the programmed on pressure over the next 20 seconds.

** When a fan stage is turned off (Programmed ON pressure minus the differential), the OFF pressure for the next stage is decreased 20 PSIG and ramped back to the programmed OFF pressure minus the differential.

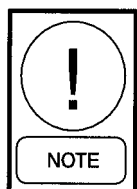

The time delay (fan delay timer) between turning fan stages on and off is fixed at 5 seconds.

LOAD LIMITING


Load Limiting is a feature that prevents the unit from loading beyond the desired value. 2 and 4 compressor units can be load limited to 50%. This would allow only 1 compressor per system to run. 3 and 6 compressor units can be load limited to 33% or 66%. The 66% limit would allow up to 2 compressors per system to run, and the 33% limit would allow only 1 compressor per system to run. Five-compressor units may be load limited to 40% (1 compressor per system runs) or 80% (up to 2 compressors per system) are permitted to run. No other values of limiting are available.

There are two ways to load limit the unit. The first is through remote communication via an ISN. Load limit stages are sent through YORK Talk on pages 9 and 10 of feature 54. Page 9 is stage 1 load limit and page 10 is stage 2 load limit.

A second stage of load limiting the unit is accomplished by closing contacts connected to the Load Limit (XTBC1 – terminals 13-21) and PWM inputs (XTBC1 – terminals 13-20). Stage 1 of load limiting involves closing the Load Limit input. Stage 2 of load limiting involves closing both the Load Limit and PWM inputs. The first stage of limiting is either 80%, 66% or 50%, depending on the number of compressors on the unit. The second stage of limiting is either 40% or 33% and is only available on 3, 5 and 6 compressor units. Table 19 shows the load limiting permitted for the various numbers of compressors.

**TABLE 19 – COMPRESSOR OPERATION –
LOAD LIMITING**

COMPRESSORS IN UNIT	STAGE 1	STAGE 2
2	50%	-
3	66%	33%
4	50%	-
5	80%	40%
6	66%	33%

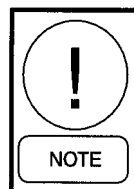

Simultaneous operation of Remote Load Limiting and EMS-PWM Temperature Reset (described on following pages) cannot occur.

COMPRESSOR RUN STATUS

Compressor run status is indicated by closure of contacts at XTBC2 – terminals 25 to 26 for system 1 and XTBC2 – terminals 27 to 28 for system 2.

ALARM STATUS

System or unit shutdown is indicated by normally-open alarm contacts opening whenever the unit shuts down on a unit fault, locks out on a system fault, or experiences a loss of power to the chiller electronics. System 1 alarm contacts are located at XTBC2 – terminals 29 to 30. System 2 alarm contacts are located at XTBC2 – terminals 31 to 32. The alarm contacts will close when conditions allow the unit to operate, or the fault is reset during a loss of power, the contacts will remain open until power is reapplied and no fault conditions exist.

BAS/EMS TEMPERATURE RESET USING A VOLTAGE OR CURRENT SIGNAL

The Remote Reset Option allows the Control Center of the unit to reset the chilled liquid setpoint using a 0 - 10VDC input, or a 4-20mA input connected to XTBC1 terminals A- and A+. Whenever a reset is called for, the change may be noted by pressing the COOLING SETPOINTS key twice. The new value will be displayed as "REM SETP = XXX °F."

If a **0 - 10VDC** signal is supplied, it is applied to terminals A+ and A-, and **jumper JP1 on the I/O board must be inserted between pins 2 and 3**. To calculate the reset chilled liquid setpoint for values between 0VDC and 10VDC use the following formula:

$$\text{Setpoint} = \text{Local Chilled Liquid Setpoint} + \text{°Reset}$$

$$\text{°Reset} = \frac{(\text{DC voltage signal}) \times (\text{*Max Reset Value})}{10}$$

Example:

Local Chilled Liquid Setpoint = 45 °F (7.22 °C)

*Max Reset Value = 20 °F (11.11 °C)

Input Signal = 6VDC

(English)

$$\text{°Reset} = \frac{6\text{VDC} \times 20 \text{ °F}}{10} = 12 \text{ °F Reset}$$

$$\text{New Setpoint} = 45 \text{ °F} + 12 \text{ °F} = 57 \text{ °F}$$

(Metric)

$$\text{°Reset} = \frac{6\text{VDC} \times 11.11 \text{ °C}}{10} = 6.67 \text{ °C Reset}$$

$$\text{New Setpoint} = 7.22 \text{ °C} + 6.67 \text{ °C} = 13.89 \text{ °C}$$

* MaxReset Value is the "MaxEMS-PWMRemote Temp. Reset" setpoint value described in the programming section under Cooling Setpoints. Programmable values are from 2 °F to 40 °F (1.11 °C to 11.11 °C).

If a **4-20mA signal is supplied**, it is applied to terminals A+ and A- and **jumper JP1 on the I/O board must be installed between pin 1 and 2**. To calculate the chilled liquid setpoint for values between 4mA and 20 mA use the following formula:

$$\text{Setpoint} = \text{Local Chilled Liquid Setpoint} + \text{°Reset}$$

$$\text{°Reset} = \frac{(\text{mA signal} - 4) \times (\text{*Max Reset Value})}{16}$$

Example:

Local Chilled Liquid Setpoint = 45° (7.22 °C)

*Max Reset Value = 10 °F (5.56 °C)

Input Signal = 12 mA

(English)


$$\text{°Reset} = \frac{8\text{mA} \times 10 \text{ °F}}{16} = 5 \text{ °F Reset}$$

$$\text{Setpoint} = 45 \text{ °F} + 5 \text{ °F} = 50 \text{ °F}$$

(Metric)

$$\text{°Reset} = \frac{8\text{mA} \times 5.56 \text{ °C}}{16} = 2.78 \text{ °C Reset}$$

$$\text{Setpoint} = 7.22 \text{ °C} + 2.78 \text{ °C} = 10.0 \text{ °C}$$

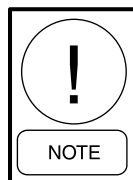

A 240-24 Volt Ratio Transformer (T3) is used to derive nominal 12 volt output from the 120 volt supply.


SECTION 9 – SERVICE AND TROUBLESHOOTING

CLEARING HISTORY BUFFERS

The history buffers may be cleared by pressing the HISTORY key and then repeatedly pressing the UP arrow key until you scroll past the last history buffer choice. The following message will be displayed:

```
INITIALIZE  HISTORY
ENTER  =  YES
```

Pressing the ENTER/ADV key at this display will cause the history buffers to be cleared. Pressing any other key will cancel the operation.

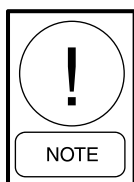

DO NOT CLEAR BUFFERS. Important information may be lost. Contact factory service.

SERVICE MODE

Service Mode is a mode that allows the user to enable or disable all of the outputs (except compressors) on the unit, change chiller configuration setup parameters and view all the inputs to the microboard.

To enter Service Mode, turn the Unit Switch off and press the following keys in the sequence shown; PROGRAM, UP ARROW, UP ARROW, DOWN ARROW, DOWN ARROW, ENTER. Service Mode will time out after 30 minutes and return to normal control mode, if the panel is accidentally left in this mode. Otherwise, turning the unit switch on will take the panel out of Service Mode.

SERVICE MODE – OUTPUTS

After pressing the key sequence as described, the control will enter Service Mode permitting the *outputs (except compressors), operating hours, refrigerant type, expansion valve type, and start/hour counters* to be viewed/modified. The ENTER/ADV key is used to advance through the outputs. Using the ↑ and ↓ (UP/DOWN) arrow keys will turn the respective digital output on/off or modify the value.

Following is the order of outputs that will appear as the ENTER/ADV key is pressed:

```
SYS 1 COMP 1 STATUS TB7-2 IS:
SYS 1 LLSV STATUS TB7-3 IS:
SYS 1 COMP 2 STATUS TB7-4 IS:
SYS 1 COMP 3 STATUS TB7-5 IS:
```

```
SYS 1 HGBP STATUS TB7-7 IS:
SYS 2 COMP 1 STATUS TB10-2 IS:
SYS 2 LLSV STATUS TB10-3 IS:
SYS 2 COMP 2 STATUS TB10-4 IS:
SYS 2 COMP 3 STATUS TB10-5 IS:
SYS 1 FAN OUTPUT 1 TB7-8 IS:
SYS 1 FAN OUTPUT 2 TB7-9 IS:
SYS 1 FAN OUTPUT 3 TB7-10 IS:
SYS 2 FAN OUTPUT 1 TB10-8 IS:
SYS 2 FAN OUTPUT 2 TB10-9 IS:
SYS 2 FAN OUTPUT 3 TB10-10 IS:
EVAP HEATER STATUS TB8-2 IS:
SYS 1 ALARM STATUS TB8-3 IS:
SYS 2 ALARM STATUS TB9-2 IS:
EVAP PUMP STATUS TB8-6,7 IS:
SYS 2 HGBV STATUS TB10-7 IS:
```

SPARE DO TB8-4 IS:

SPARE DO TB8-5 IS:

SPARE DO TB8-8, 9 IS:

SPARE DO TB9-4 IS:

SYS 1 EEV OUTPUT TB5-1, 2 = XXX%

SYS 2 EEV OUTPUT TB6-1, 2 = XXX%

SYS 1 COND FAN SPEED J15-1,5 = XXX%

SYS 2 COND FAN SPEED J15-2,6 = XXX%

SPARE AO J15-3,7 = XXX%

SPARE AO J15-4,8 = XXX%

DATA LOGGING MODE 1 = ON, 0 = OFF

DATA LOGGING TIMER X SECS

SOFT START (disabled)

REFRIGERANT TYPE (R410A only)

EXPANSION VALVE TYPE (Thermostatic Only)

REMOTE TEMP RESET OPTION =

REMOTE INPUT SERVICE TIME =

“NORTH AMERICAN FEATURE SET ENABLED”

HYDRO PUMP SELECTION

EVAP PUMP TOTAL RUN HOURS

SYS 1 HOURS

SYS 2 HOURS

SYS 1 STARTS

SYS 2 STARTS

Each display will also show the output connection on the microboard for the respective output status shown. For example:

```
SYS 1 LLSV STATUS
TB10 - 3 IS OFF
```

This display indicates that the system 1 liquid line solenoid valve is OFF, and the output connection from the microboard is coming from Terminal Block 10 – pin 3.

Pressing the ↑ (UP) arrow key will energize the liquid line solenoid valve and “OFF” will change to “ON” in the display as the LLSV is energized. Energizing and de-energizing outputs may be useful during troubleshooting.

SERVICE MODE – CHILLER CONFIGURATION

After the Outputs are displayed, the next group of displays relate to chiller configuration and start/hour counters. Data logging, soft start, refrigerant type, pump control selection and expansion valve type all must be programmed to match actual chiller configuration.



Soft start (disabled), Refrigerant Type (R410A), and Expansion Valve Type (Thermostatic), and North American Feature (Enabled) MUST be properly programmed or damage to compressors and other system components may result.

Following is a list of chiller configuration selections, in order of appearance:

DATA LOGGING MODE = : DO NOT MODIFY
DATA LOGGING TIMER = : DO NOT MODIFY

SOFT START

REFRIGERANT TYPE

EXPANSION VALVE TYPE

REMOTE TEMP RESET OPTION

REMOTE INPUT SERVICE TIME

FEATURE SET

PUMP CONTROL SELECTION

SYS 1 HOURS

SYS 2 HOURS

SYS 1 STARTS

SYS 2 STARTS

The last displays shown on the above list are for the accumulated run and start timers for each system. All values can also be changed using the ↑ (UP) and ↓ (Down) arrow keys, but under normal circumstances would not be required or advised. After the last start display, the microprocessor will display the first programmable value under the PROGRAM key.

SERVICE MODE – ANALOG AND DIGITAL INPUTS

After entering Service Mode (PROGRAM ↑↑ ↓↓), all digital and analog inputs to the microboard can be viewed by pressing the OPER DATA key. After pressing the OPER DATA key, the ↑ (UP) arrow and ↓ (DOWN) arrow keys are used to scroll through the analog and digital inputs.

Following is the order of analog and digital inputs that will appear when sequenced with the ↓ (Down) arrow key:

(analog inputs)

SYS 1 SUCT PRESSURE

UNIT TYPE

SYS 1 *DISCH PRESSURE

SYS 1** SUCTION TEMP.

SYS 2** SUCTION TEMP.

AMBIENT AIR TEMP.

LEAVING LIQUID TEMP.

RETURN LIQUID TEMP.

SYS 2 SUCTION PRESSURE

SYS 2 SPARE

SYS 2 *DISCH PRESSURE

SYS 1 MTR VOLTS

SYS 2 MTR VOLTS

(digital inputs)

PWM TEMP RESET INPUT

LOAD LIMIT INPUT

FLOW SW / REM START

SPARE

SINGLE SYSTEM SELECT

SYS 1 MP / HPCO INPUT

SYS 2 MP / HPCO INPUT

* The discharge pressure transducer is optional on some models.

** The suction temp. sensor is on EEV units only.

The analog inputs will display the input connection, the temperature or pressure, and corresponding input voltage such as:

**S Y S 1 S U C T P R J 7 - 1 0
2 . 1 V D C = 8 1 P S I G**

This example indicates that the system 1 suction pressure input is connected to plug 7 – pin 10 (J7-10) on the I/O board. It indicates that the voltage is 2.1 VDC which corresponds to 81 PSIG (5.6 bars) suction pressure.

The digital inputs will display the input connection and ON/OFF status such as:

F L O W S W / R E M S T A R T
J 13 - 5 I S O N

This indicates that the flow switch/remote start input is connected to plug 13- pin 5 (J13-5) on the microboard, and is ON (ON = +30VDC unregulated input, OFF = 0VDC input on digital inputs).

CONTROL INPUTS/OUTPUTS

Tables 20 through 23 are a quick reference list providing the connection points and a description of the inputs and outputs respectively. All input and output connections pertain to the connections at the microboard.

TABLE 20 – I/O DIGITAL INPUTS

J13-2	Unit ON/OFF Switch
J13-3	Load Limit Stage 2 on 3, 5 & 6 Comp. Units
J13-4	Load Limit Stage 1
J13-5	Flow Switch and Remote Start/Stop
J13-6	Spare
J13-7	Single System Select (Jumper = Single Sys, No Jumper = Two Sys)
J13-8	CR1 (Sys 1 Motor Protector/High Pressure Cutout)
J13-10	CR2 (Sys 2 Motor Protector/High Pressure Cutout)

TABLE 21 – I/O DIGITAL OUTPUTS


TB7-2	SYS 1 Compressor 1
TB7-3	SYS 1 Liquid Line Solenoid Valve
TB7-4	SYS 1 Compressor 2
TB7-5	SYS 1 Compressor 3
TB7-7	SYS 1 Hot Gas Bypass Valve
TB10-2	SYS 2 Compressor 1
TB10-3	SYS 2 Liquid Line Solenoid Valve
TB10-4	SYS 2 Compressor 2
TB10-5	SYS 2 Compressor 3
TB7-8	SYS 1 Condenser Fan Output 1
TB7-9	SYS 1 Condenser Fan Output 2
TB7-10	SYS 1 Condenser Fan Output 3
TB10-8	SYS 2 Condenser Fan Output 1
TB10-9	SYS 2 Condenser Fan Output 2
TB10-10	SYS 2 Condenser Fan Output 3
TB8-2	Evaporator Heater
TB8-3	SYS 1 Alarm
TB9-2	SYS 2 Alarm
TB8-6 & 7	Evaporator Pump Starter
TB10-7	SYS 2 Hot Gas Bypass Valve

TABLE 22 – I/O ANALOG INPUTS

J7-10	SYS 1 Suction Transducer -or- SYS 1 Low Pressure Switch
J11-12	Unit Type: Chiller = NO Jumper J11-12 to +24 VDC YCUL Condensing Unit = Jumper J11-12 to +24 VDC (Do NOT Use)
J7-11	SYS 1 Discharge Pressure Transducer (Optional)
J6-9	Ambient Air Temp. Sensor
J6-7	Leaving Chilled Liquid Temp. Sensor
J6-8	Return Chilled Liquid Temp. Sensor
J9-10	SYS 2 Suction Pressure Transducer -or- SYS 2 Low Pressure Switch
J9-11	SYS 2 Discharge Pressure Transducer (Optional)
J7-12	Unit/SYS 1 Voltage
J9-12	SYS 2 Voltage
J11-11	Remote Temperature Reset

TABLE 23 – I/O ANALOG OUTPUTS

N/A	Not Applicable
------------	----------------

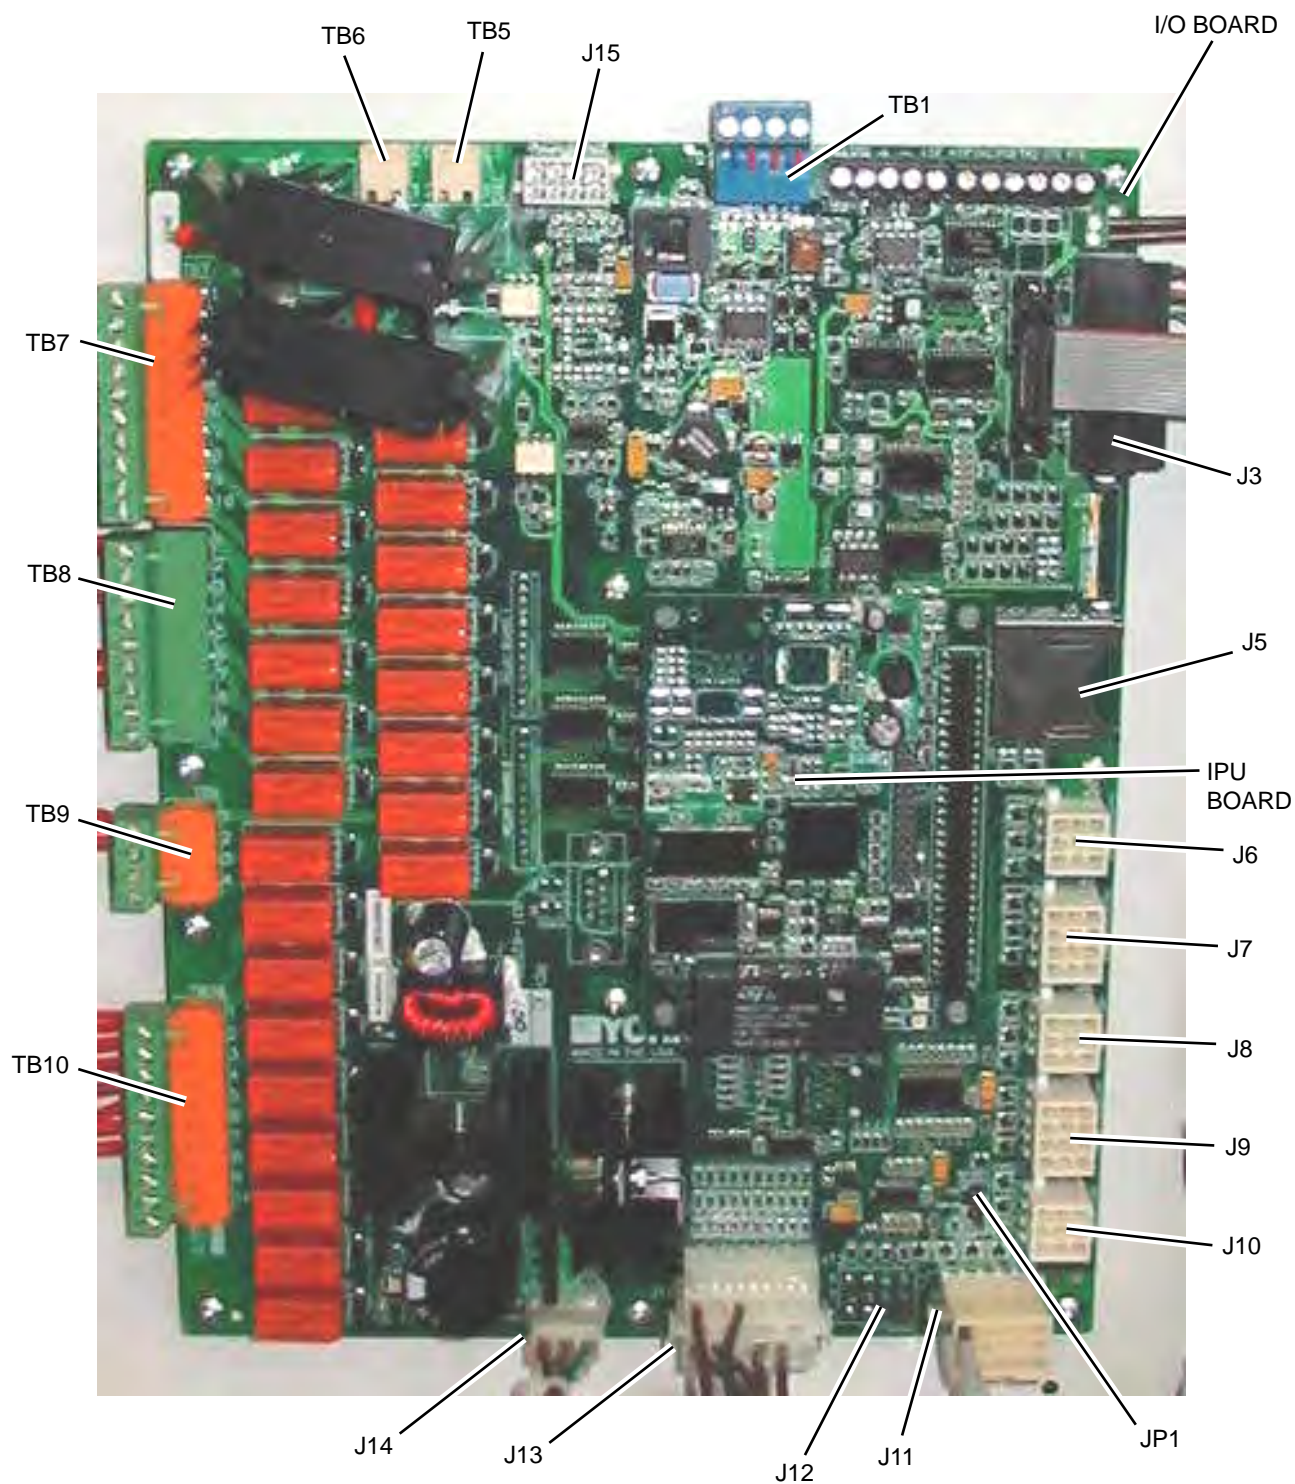

LD12721

FIG. 29 – MICROBOARD LAYOUT

CHECKING INPUTS AND OUTPUTS

Digital Inputs

Refer to the unit wiring diagram. All digital inputs are connected to J13-1 of the I/O board. The term “digital” refers to two states – either on or off. As an example, when the flow switch is closed, 30VDC will be applied to J13, pin 5 (J13-5) of the I/O board. If the flow switch is open, 0VDC will then be present at J13-5.

Pin 1 of J13 is an **unregulated** 30VDC **source** used to supply the DC voltage to the various user contacts, unit switch, flow switch, etc. This DC source is factory wired to XTBC1, terminal 13. Any switch or contact used as a digital input would be connected to this terminal, with the other end connecting to its respective digital input on the microboard. Any time a switch or contact is closed, 30VDC would be applied to that particular digital input. Any time a switch or contact is open, 0VDC would be applied to that particular digital input.

Typically, voltages of 24 – 36VDC could be measured for the DC voltage on the digital inputs. This voltage is in reference to ground. The unit case should be sufficient as a reference point when measuring digital input voltages.

Analog Inputs – Temperature

Refer to the unit wiring diagram. Temperature inputs are connected to the microboard on plug J6. These **analog** inputs represent varying DC signals corresponding to varying temperatures. All voltages are in reference to the unit case (ground). Following are the connections for the temperature sensing inputs:

Outside Air Sensor

J6-6 = +5VDC regulated supply to sensor.

J6-9 = VDC input signal to the microboard.

See Table 24 for voltage readings that correspond to specific outdoor temperatures.

J6-3 = drain (shield connection = 0VDC) Return

**TABLE 24 – OUTDOOR AIR SENSOR
TEMPERATURE/VOLTAGE/
CORRELATION**

TEMP °F	VOLTAGE (Signal Input to Return)	TEMP °C
0	0.7	-18
5	0.8	-15
10	0.9	-12
15	1.0	-9
20	1.1	-7
25	1.2	-4
30	1.4	-1
35	1.5	2
40	1.7	4
45	1.8	7
50	2.0	10
55	2.2	13
60	2.3	16
65	2.5	18
70	2.6	21
75	2.8	24
80	2.9	27
85	3.1	29
90	3.2	32
95	3.4	35
100	3.5	38
105	3.6	41
110	3.7	43
115	3.8	46
120	3.9	49
125	4.0	52
130	4.1	54

**TABLE 25 – ENTERING/LEAVING CHILLED LIQUID
TEMP. SENSOR, TEMPERATURE/
VOLTAGE CORRELATION**

TEMP °F	VOLTAGE (Signal Input to Return)	TEMP °C
10	1.33	-12
12	1.39	-11
14	1.46	-10
16	1.51	-9
18	1.58	-8
20	1.65	-7
22	1.71	-6
24	1.78	-4
26	1.85	-3
28	1.91	-2
30	1.98	-1
32	2.05	0
34	2.12	1
36	2.19	2
38	2.26	3
40	2.33	4
42	2.40	6
44	2.47	7
46	2.53	8
48	2.60	9
50	2.65	10
52	2.73	11
54	2.80	12
56	2.86	13
58	2.92	14
60	2.98	16
62	3.05	17
64	3.11	18
66	3.17	19
68	3.23	20
70	3.29	21
72	3.34	22
74	3.39	23
76	3.45	24
78	3.5	26
80	3.54	27

**Liquid & Refrigerant Sensor Test Points
(Table 25)****Entering Chilled Liquid Sensor**

- J6-5 = +5VDC regulated supply to sensor.
 J6-8 = VDC input signal to the I/O board. See Table 25 for voltage readings that correspond to specific liquid temperatures.
 J6-2 = drain (shield connection = 0VDC) Return

Leaving Chilled Liquid Temperature Sensor

- J6-4 = +5VDC regulated supply to sensor.
 J6-7 = VDC input signal to the microboard. See Table 25 for voltage readings that correspond to specific liquid temperatures.
 J6-1 = drain (shield connection = 0VDC) Return

Analog Inputs – Pressure

Refer to the unit wiring diagram. Pressure inputs are connected to the microboard on plugs J7 and J9. These **analog** inputs represent varying DC signals corresponding to varying pressures. All voltages are in reference to the unit case (ground).

System 1 discharge and suction pressures will be connected to J7 of the microboard. System 2 discharge and suction pressure transducers will be connected to J9 of the microboard.

The discharge transducers are optional on all units. If the discharge transducers are not installed, no connections are made to the microboard and the discharge pressure readout on the display would be zero.

The suction pressure transducers are standard on all YLAA's. The suction pressure transducers have a range of 0 to 400 PSIG. The output will be linear from 0.5VDC to 4.5VDC over the 400 PSIG (27.5 barg) range.

The discharge transducers have a range from 0 to 650 PSIG. The output will be linear from 0.5VDC to 4.5VDC over the 600 PSIG (41.25 barg) range. Following is the formula that can be used to verify the voltage output of the transducer. All voltage reading are in reference to ground (unit case).

TABLE 26 – PRESSURE TRANSDUCERS

0-400 PSIG SUCTION PRESSURE TRANSDUCER		0-600 PSIG DISCHARGE PRESSURE TRANSDUCER	
PRESSURE PSIG	VOLTAGE VDC	PRESSURE PSIG	VOLTAGE VDC
0	0.5	0	0.5
50	1.0	75	1.0
100	1.5	150	1.5
150	2.0	225	2.0
200	2.5	300	2.5
250	3.0	375	3.0
300	3.5	450	3.5
350	4.0	525	4.0
400	4.5	600	4.5

RED WIRE = 5V, BLACK WIRE = 0V, WHITE/GREEN WIRE = SIGNAL

TEST POINTS:

Suction Pressure:

System 1:Microboard J7-10 to J7-9

System 2:Microboard J9-10 to J9-9

Discharge Pressure:

System 1:Microboard J7-11 to J7-7

System 2:Microboard J9-11 to J9-7

$$V = (\text{Pressure in PSIG} \times .01) + .5$$

or

$$V = (\text{Pressure in BARG} \times .145) + .5$$

where V = DC voltage output

Pressure = pressure sensed by transducer

The I/O board connections for the Discharge Transducers:

System 1 Discharge Transducer

J7-6 = +5VDC regulated supply to transducer.

J7-11 = VDC input signal to the microboard. *See the formula above for voltage readings that correspond to specific discharge pressures.*

J7-7 = +5VDC return

J7-2 = drain (shield connection = 0VDC)

System 2 Discharge Transducer

J9-6 = +5VDC regulated supply to transducer.

J9-11 = VDC input signal to the microboard. *See the formula above for voltage readings that correspond to specific discharge pressures.*

J9-7 = +5VDC return

J9-2 = drain (shield connection = 0VDC)

The suction transducers have a range from 0 to 400 PSIG (27.5 barg). The output will be linear from 0.5VDC to 4.5VDC over the 400 PSIG (27.5 barg) range. Following is a formula that can be used to verify the voltage output of the transducer. All voltage readings are in reference to ground (unit case).

$$V = (\text{Pressure in PSIG} \times .02) + .5$$

or

$$V = (\text{Pressure in barg} \times .29) + .5$$

where V = DC voltage input to microprocessor
Pressure = pressure sensed by transducer

Following are the I/O board connections for the Suction Transducer:

System 1 Suction Transducer

J7-5 = +5VDC regulated supply to transducer.

J7-10 = VDC input signal to the microboard.

See the formula above for voltage readings that correspond to specific suction pressures.

J7-9 = +5VDC return

J7-1 = drain (shield connection = 0VDC)

System 2 Suction Transducer

J9-5 = +5VDC regulated supply to transducer.

J9-10 = VDC input signal to the microboard.

See the formula above for voltage readings that correspond to specific suction pressures.

J7-9 = +5VDC return


J7-11 = drain (shield connection = 0VDC)

Digital Outputs

Refer to the unit wiring diagram and Fig. 30. The digital outputs are located on TB7, TB8, and TB9 and TB-10 of the microboard. ALL OUTPUTS ARE 120VAC with the exception of TB8-6 to TB8-7 which are the contacts that can be used for a remote evaporator pump start signal. The voltage applied to either of these terminals would be determined by field wiring.

Each output is controlled by the microprocessor by switching 120VAC to the respective output connection energizing contactors, evaporator heater, and solenoids according to the operating sequence (*see Fig. 30*).

120VAC is supplied to the I/O board via connections at TB7-1, TB7-6, TB10-1, TB10-6, TB8-1 and TB9-1. Fig. 30 illustrates the relay contact architecture on the microboard.

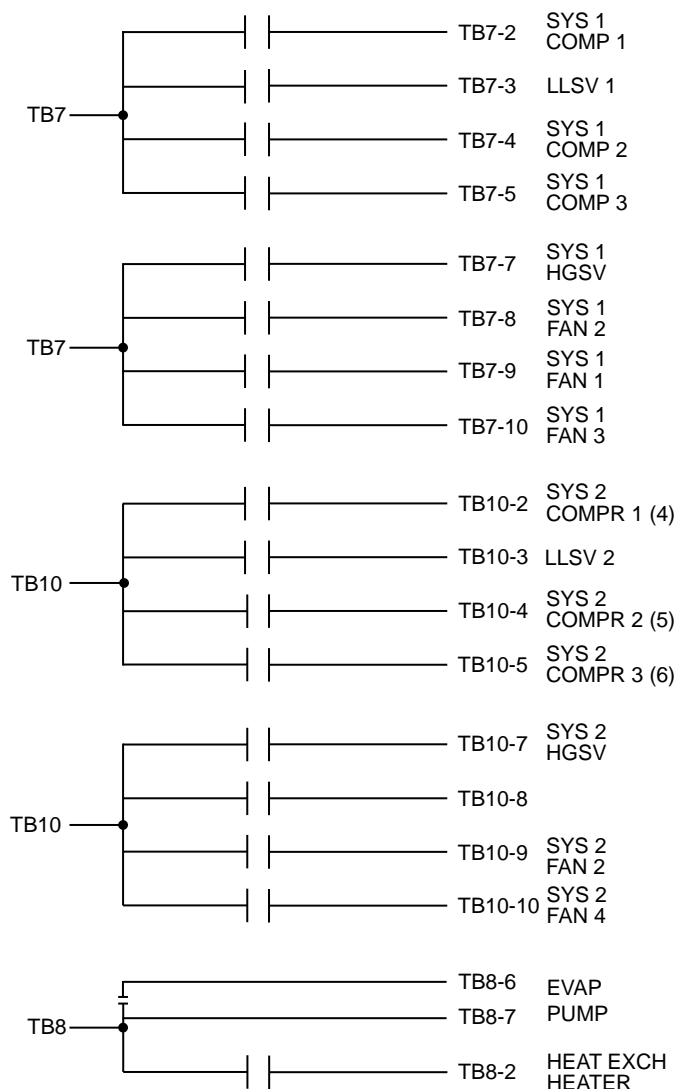

LD12722

FIG. 30 – I/O BOARD RELAY CONTACT ARCHITECTURE

OPTIONAL PRINTER INSTALLATION

The micro panel is capable of supplying a printout of chiller conditions or fault shutdown information at any given time. This allows operator and service personnel to obtain data and system status with the touch of the keypad. In addition to manual print selection, the micro panel will provide an automatic printout whenever a fault occurs. Detailed explanation of the print function is given under "Print Key" located in the "Keypad and Display" section.

Johnson Controls recommends the field tested WEIGH-TRONIX model 1220 printer (or former IMP 24). This is a compact low cost printer that is ideal for service work and data logging.

The WEIGH-TRONIX printer can be obtained by contacting WEIGH-TRONIX for purchase information at:

WEIGH-TRONIX
2320 Airport Blvd.
Santa Rosa, CA 95402
Phone: 1-800-982-6622 or 1-707-527-5555
(International Orders Only)

The part number for the printer that is packaged specifically for YORK is P/N 950915576. The cable to connect the printer can either be locally assembled from the parts listed, or ordered directly from WEIGH-TRONIX under part number 287-040018.

Parts

The following parts are required:


1. WEIGH-TRONIX model 1220 printer.
2. 2.25" (5.7cm) wide desk top calculator paper.
3. 25 ft. (7.62m) maximum length of Twisted Pair Shielded Cable (minimum 3 conductor), #18 AWG stranded, 300V minimum insulation.
4. One 25 pin Cannon connector and shell.
Connector: Cannon P/N DB-25P or equivalent.
Shell: Cannon P/N DB-C2-J9.

Assembly and Wiring

All components should be assembled and wired as shown in Fig. 31. Strip the outside insulation back several inches and individual wires about 3/8" (9.5 mm) to connect the cable at the Microboard. Do not connect the shield at the printer-end of the cable.

Obtaining a Printout

A printout is obtained by pressing the PRINT key on the keypad and then pressing either the OPER DATA key or HISTORY key.

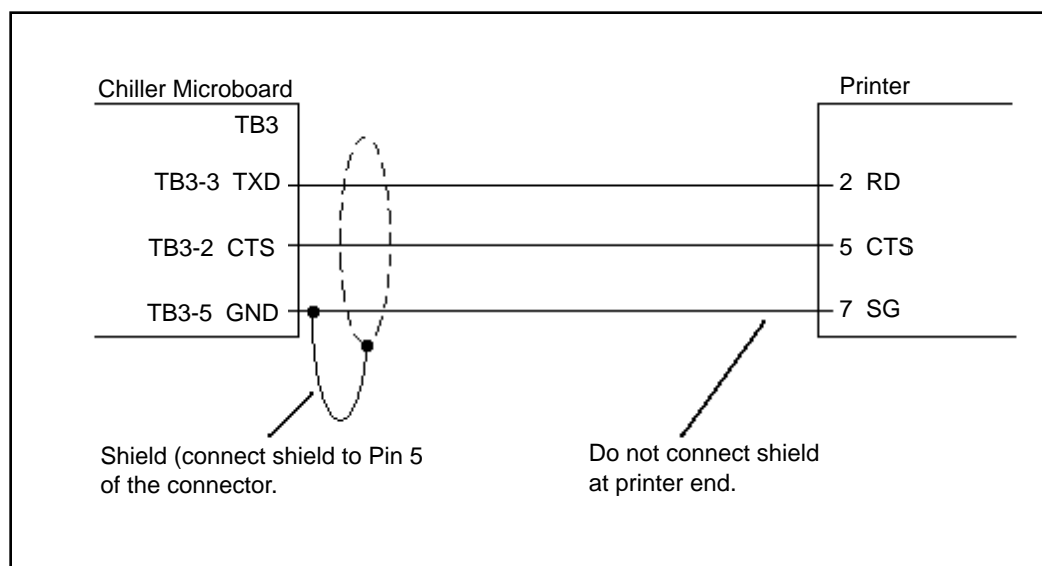


LD12723

FIG. 31 – PRINTER TO MICROBOARD ELECTRICAL CONNECTIONS

TROUBLESHOOTING

TABLE 27 – TROUBLESHOOTING

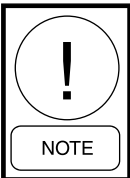PROBLEM	CAUSE	SOLUTION
NO DISPLAY ON PANEL. UNIT WILL NOT OPERATE.	<ol style="list-style-type: none"> 1. No 115VAC to 24 VAC Transformer. 2. No 24VAC to Microboard. 3. Control Transformer defective, no 24VAC output. 4. Short in wire to temp. sensors or pressure transducers. 5. Defective IPU II & I/O Board or the Display Board. 	<ol style="list-style-type: none"> 1a. Check wiring and fuse 1FU. 1b. Check wiring emergency stop contacts 5 to L of XTBC2 Terminal Block. 1c. Replace Control Transformer. 2. Check wiring Control Transformer to Microboard. 3. Replace Control Transformer. 4. Unplug connections at IPU II & I/O Board to isolate. 5. Replace IPU II & I/O Board or the Display Board. <div style="display: flex; align-items: center;">  <div style="margin-left: 10px;"> <p>Contact Johnson Controls Service before replacing circuit Boards!</p> </div> </div>
FLOW SWITCH/REM STOP NO RUN PERMISSIVE	<ol style="list-style-type: none"> 1. No chilled liquid flow. 2. Flow switch improperly installed. 3. Defective flow switch. 4. Remote cycling device open. 	<ol style="list-style-type: none"> 1. Check chilled liquid flow. 2. Check that the flow switch is installed according to manufacturer's instructions. 3. Replace flow switch. 4. Check cycling devices connected to terminals 13 and 14 of the XTBC1 Terminal Block.
LOW SUCTION PRESSURE FAULT	<ol style="list-style-type: none"> 1. Improper suction pressure cutouts adjustments. 2. Low refrigerant charge. 3. Fouled filter dryer. 4. TXV defective. 5. Reduced flow of chilled liquid through the cooler. 6. Defective suction pressure transducer/low pressure switch or wiring. 7. LLSV defective 	<ol style="list-style-type: none"> 1. Adjust per recommended settings. 2. Repair leak if necessary and add refrigerant. 3. Change dryer/core. 4. Replace TXV. 5. Check GPM (See "Limitations" liquid through the cooler in Installation section). Check operation of pump, clean pump strainer, purge chilled liquid system of air. 6. Replace transducer/low pressure switch or faulty switch or wiring. Refer to "Service" section for pressure/voltage formula. 7. Replace LLSV
HIGH DISCHARGE PRESSURE FAULT	<ol style="list-style-type: none"> 1. Condenser fans not operating or operating backwards. 2. Too much refrigerant. 3. Air in refrigerant system. 4. Defective discharge pressure transducer. 	<ol style="list-style-type: none"> 1. Check fan motor, and contactors. Assure fan blows air upward. 2. Remove refrigerant. 3. Evacuate and recharge system. 4. Replace discharge pressure transducer. Refer to Service section for pressure/voltage formula.

TROUBLESHOOTING (CONT'D)

TABLE 27 (cont'd) – TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
LOW LIQUID TEMP FAULT	<ol style="list-style-type: none"> 1. Improperly adjusted leaving chilled liquid temp. cutout (glycol only). 2. Micro panel setpoint/range values improperly programmed. 3. Chilled liquid flow too low. 4. Defective LWT or RWT sensor (assure the sensor is properly installed in the bottom of the well with a generous amount of heat) conductive compound). 	<ol style="list-style-type: none"> 1. Re-program the leaving chilled liquid temp. cutout. 2. Re-adjust setpoint/range. 3. Increase chilled liquid flow. <i>Refer to Limitations in Installation section.</i> 4. Compare sensor against a known good Temperature sensing device. <i>Refer to Service section for temp./voltage table.</i>
MP / HPCO FAULT	<ol style="list-style-type: none"> 1. Compressor internal motor protector (MP) open. 2. External overload tripped. 3. HPCO switch open. 4. Defective HPCO switch. 5. Defective CR relay. 	<ol style="list-style-type: none"> 1. Verify refrigerant charge is not low. Verify superheat setting of 10 °F to 15 °F (5.6 °C to 8.3 °C). Verify correct compressor rotation. Verify compressor is not overloaded. 2. Determine cause and reset. 3. See "High Press. Disch." Fault. 4. Replace HPCO switch. 5. Replace relay.
COMPRESSOR(S) WON'T START	<ol style="list-style-type: none"> 1. Demand not great enough. 2. Defective water temperature sensor. 3. Contactor/Overload failure. 4. Compressor failure. 	<ol style="list-style-type: none"> 1. No problem. <i>Consult "Installation" Manual to aid in understanding compressor operation and capacity control.</i> 2. Compare the display with a thermometer. Should be within +/- 2 degrees. <i>Refer to Service section for RWT/LWT temp./voltage table.</i> 3. Replace defective part. 4. Diagnose cause of failure and replace.
LACK OF COOLING EFFECT	<ol style="list-style-type: none"> 1. Fouled evaporator surface. Low suction pressure will be observed. 2. Improper flow through the evaporator. 3. Low refrigerant charge. Low suction pressure will be observed. 	<ol style="list-style-type: none"> 1. Contact the local Johnson Controls service representative. 2. Reduce flow to within chiller design specs. <i>See Limitations in Installation section.</i> 3. Check subcooling and add charge as needed.

THIS PAGE INTENTIONALLY LEFT BLANK

SECTION 10 – MAINTENANCE

It is the responsibility of the equipment owner to provide maintenance on the system.

IMPORTANT

If system failure occurs due to improper maintenance during the warranty period, Johnson Controls will not be liable for costs incurred to return the system to satisfactory operation. The following is intended only as a guide and covers only the chiller unit components. It does not cover other related system components which may or may not be furnished by Johnson Controls. System components should be maintained according to the individual manufacture's recommendations as their operation will affect the operation of the chiller.


COMPRESSORS

Oil Level Check

The oil level can only be tested when the compressor is running in stabilized conditions, to ensure that there is no liquid refrigerant in the lower shell of the compressor. When the compressor is running at stabilized conditions, the oil level must be between 1/4 and 3/4 in the oil sight glass. Note: at shutdown, the oil level can fall to the bottom limit of the oil sight glass. Use YORK "V" oil when adding oil.

Oil Analysis

The oil used in these compressors is pale yellow in color (POE oil). If the oil color darkens or exhibits a change in color, this may be an indication of contaminants in the refrigerant system. If this occurs, an oil sample should be taken and analyzed. If contaminants are present, the system must be cleaned to prevent compressor failure.

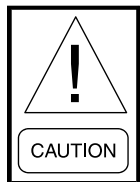


Never use the scroll compressor to pump the refrigerant system down into a vacuum. Doing so will cause internal arcing of the compressor motor which will result in failure of compressor.

CONDENSER FAN MOTORS

Condenser fan motors are permanently lubricated and require no maintenance.

CONDENSER COILS

Dirt should not be allowed to accumulate on the condenser coil surfaces. Cleaning should be as often as necessary to keep coils clean.

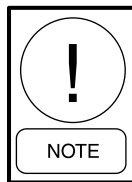


Exercise care when cleaning the coil so that the coil fins are not damaged.

OPERATING PARAMETERS

Regular checks of the system should be performed to ensure that operating temperatures and pressures are within limitations, and that the operating controls are set within proper limits. *Refer to the Operation, Start-Up, and Installation sections of this manual.*

ON-BOARD BATTERY BACK-UP

U5 is the Real Time Clock chip located on the 031-02630 IPU II board that maintains the date/time and stores customer programmed setpoints. The Real Time Clock is a 128K bram, P/N 031-02565-000. The IPU II board must have JP1 installed when the 128K bram is installed.

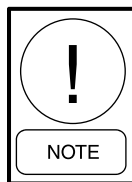

Do not confuse JP1 on the IPU II (031-02630) board with JP1 on the I/O (031-02550) board.

EVAPORATOR HEATER



The internal power supply to the Evaporator Heater is 120VAC. Disconnecting 120VAC power from the unit, at or below freezing temperatures, can result in damage to the evaporator and unit as a result of the chilled liquid freezing.

OVERALL UNIT INSPECTION

In addition to the checks listed on this page, periodic overall inspections of the unit should be accomplished to ensure proper equipment operation. Items such as loose hardware, component operation, refrigerant leaks, unusual noises, etc. should be investigated and corrected immediately.

BACNET, MODBUS AND YORKTALK 2 COMMUNICATIONS

Data can be read and in some cases modified using a serial communication BACnet, Modbus or YorkTalk 2 network connection. This information allows communications of chiller operating parameters and external control changes to setpoint, load limiting, and start/stop commands.

BACnet and YorkTalk 2 RS485 networks are wired to the + and - terminals of TB1 for port 1 communications. Modbus network connection has the option of RS232 or RS485 connection for port 2 communications. Modbus network is wired to either TB2 or TB3 as follows:


- RS-485: connect to TB2 - Network (-1) to TB2 (-1); Network (+1) to TB2 (+1)
- RS-232: connect to TB3 - Network (RX) to TB3 (TXD); Network (TX) to TB3 (RXD); Network (GND) to TB3 (GND)

Refer to Fig. 32 “Micro Panel Connections” for TB1, TB2 and TB3 locations.

In most cases, communication parameters will need to be modified. Table 29 “Values Required for BAS Communication” lists setup parameters for the available protocols. Modification is accomplished by pressing the PROGRAM, DOWN ARROW, DOWN ARROW, DOWN ARROW, DOWN ARROW, and ENTER keys in sequence. The list below shows the displays for the values that may be modified:

DE MODIFIER ADDRESS XXXXX	P2 PROTOCOL XXXXXXXXXX
DE MODIFIER OFFSET XX	P2 MANUAL MAC ADDRESS XXX
P1 PROTOCOL XXXXXX	P2 BAUD RATE XXXXX
P1 MANUAL MAC ADDRESS XXX	P2 PARITY XXXXX
P1 BAUD RATE XXXXXX	P2 STOP BITS X
P1 PARITY XXXXXX	P2 HW SELECT BIT XXXXX
P1 STOP BITS X	REAL TIME ERROR ## RESET 1 = YES, 0 = NO 0

Note: See Table 30 for error descriptions

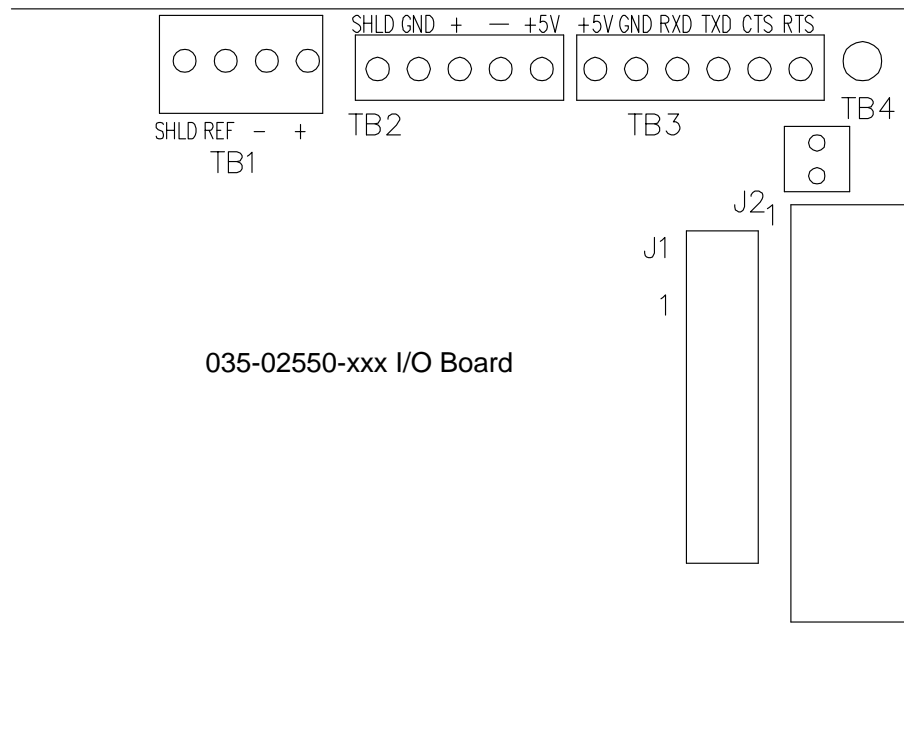**FIG. 32 - MICRO PANEL CONNECTIONS**

The table below shows the minimum, maximum, and default values.

TABLE 28 – MINIMUM, MAXIMUM AND DEFAULT VALUES

DESCRIPTION	MINIMUM	MAXIMUM	DEFAULT
DE MODIFIER ADDRESS	-1	41943	-1
DE MODIFIER OFFSET	-1	99	-1
P1 BAUD RATE	1200	76800	4800
	1200, 4800, 9600, 19200, 38400, 76800, AUTO SELECTABLE		
P2 BAUD RATE	1200	57600	1200
	1200, 4800, 9600, 19200, 38400, 57600 SELECTABLE		
P1, P2 MANUAL MAC ADDRESS	-1	127	-1
P1, P2 PARITY	NONE	IGNORE	NONE
	NONE, EVEN, ODD, IGNORE SELECTABLE		
P1 PROTOCOL	BACNET	API	BACNET
	BACNET, API SELECTABLE		
P2 PROTOCOL	TERMINAL	MODBUS CLIENT	API
	TERMINAL, MODBUS IO, MODBUS SERVER, API, MODBUS CLIENT SELECTABLE		
P1, P2 STOP BITS	1	2	1
RESET REAL TIME ERROR	NO	YES	NO

The table below shows set-up requirements for each communication protocol.

TABLE 29 – VALUES REQUIRED FOR BAS COMMUNICATION

SETTING DESCRIPTION	PROTOCOL		
	BACNET MS/TP	MODBUS RTU ⁵	YORKTALK 2
DE MODIFIER ADDRESS	0 TO 41943 ⁽³⁾	1	-1
DE MODIFIER OFFSET	0 TO 99 ⁽⁴⁾	0	N/A
P1 PROTOCOL	BACNET	N/A	N/A
P1 MANUAL MAC ADDRESS	0-127 ⁽¹⁾	N/A	N/A
P1 BAUD RATE	9600 TO 76800 OR AUTO SELECTABLE ⁽¹⁾	N/A	N/A
P1 PARITY	NONE	N/A	N/A
P1 STOP BITS	1	N/A	N/A
P2 PROTOCOL	N/A	MODBUS SVR	N/A
P2 MANUAL MAC ADDRESS	N/A	0-127 ⁽¹⁾	N/A
P2 BAUD RATE	N/A	19,200 ⁽²⁾	N/A
P2 PARITY	N/A	NONE ⁽²⁾	N/A
P2 STOP BITS	N/A	1	N/A
P2 HW SELECT BIT	N/A	RS-485 OR RS-232 ⁽¹⁾	N/A
RESET REAL TIME ERROR	N/A	N/A	N/A
P1 HW SELECT BIT	N/A	N/A	N/A
CHILLER ID	N/A	N/A	0


¹as required by network

²or other as required by network

³number is multiplied by 100, set as required by network

⁴number is added to DE MODIFIER ADDRESS, set as required by network

⁵unit operating software version C.MMC.13.03 or later required for Modbus protocol

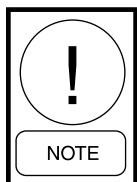

***REBOOT REQUIRED (CYCLE POWER)
AFTER SETTINGS ARE CHANGED.***

The table below shows the real time error numbers that may be encountered during communication setup and a description of each.

TABLE 30 – REAL TIME ERROR NUMBERS

ERROR NUMBER (##)	DESCRIPTION
0	ALL OK
1	DATUM TYPE OK TEST FAILED
2	ENGLISH TEXT TOO LONG
3	FLOATING POINT EXCEPTION
4	GET PACKET FAILED
5	GET TYPE FAILED
6	INVALID UNIT CONVERSION
7	INVALID HARDWARE SELECTION
8	REAL TIME FAULT
9	SPANISH TEXT TOO LONG
10	THREAD EXITED
11	THREAD FAILED
12	THREAD STALLED
13	IO BOARD RESET
14	BRAM INVALID
15	BACNET SETUP FAILED

BACnet and Modbus Communications

Chiller data that can be read and modified using specific BACnet or Modbus Register Addresses; and the data associated with the addresses, is outlined in the following description:

Analog Write Points

This data can be read and modified using a BACnet or Modbus network connection. The Modbus Register Address for these points is $1025 + AV \#$.

Binary Write Points

This data can be read and modified using a BACnet or Modbus network connection. The Modbus Register Address for these points is $1537 + BV \#$.


Analog Read Only Points

This data can be read using a BACnet or Modbus network connection and can NOT be modified using this connection. The Modbus Register Address for these points is $513 + AI \#$.

Binary Monitor Only Points

This data can be read using a BACnet or Modbus network connection and can NOT be modified using this connection. The Modbus Register Address for these points is $1281 + BI \#$.

Refer to Table 31 for complete list of BACnet and Modbus registers.

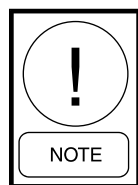

The latest data map information is listed on the Johnson Controls Equipment Integration website.

MS/TP and Modbus RTU communications. Microgateway or E-Link not required for these two communication protocols.

2. BACnet Object Types: 0= Analog In, 1 = Analog Out, 2= Analog Value, 3= Binary In, 4 = Binary Output, 5= Binary Value, 8= Device, 15 = Alarm Notification (0 through 127 are reserved ASHRAE Objects).
3. WC= Inches of water column; CFM = Cubic Feet per Minute; FPM = Feet per Minute; PSI = Lbs per square inch; Pa = Pascals; kPa = Kilopascals; PPM = Part per Million; kJ/kg = Kilojoules per Kilogram.
4. Water Cooled Scroll units use the same firmware as Air Cooled Scroll units, ignoring Fan Control.

Communications Data Map Notes

(See Table 31)

1. IPU II based units are configured for Native BACnet

182

JOHNSON CONTROLS

Property of JCI/York International. Subject to change without notice
Middle Market IPU II NATIVE BACnet_Modbus Data Maps_ Rev A_06.xls

TABLE 31 (cont'd) - BACNET AND MODBUS COMMUNICATIONS DATA MAP

2/25/2009

ITEM REF NUM	BACnet NAME	BACnet Object/Inst ance	MODBUS ADDRESS	MODBUS Data Type Supported	ENG UNITS	READ WRITE	POINT DESCRIPTION	Point List Code									
								S=Standard; O=Optional; N=Not Available									
								1	2	3	4	5	6	7	8	9	10
41	NUM COMPS	AI_24	537	03.04	count	R	Number of Compressors										
42	S1_OP_CODE	AI_25	538	03.04	index	R	Sys 1 Operational Code (See Table A & B)										
43	S1_FLT_CODE	AI_26	539	03.04	index	R	Sys 1 Fault Code (See Table A & B)										
44	S2_OP_CODE	AI_27	540	03.04	index	R	Sys 2 Operational Code (See Table A & B)										
45	S2_FLT_CODE	AI_28	541	03.04	index	R	Sys 2 Fault Code (See Table A & B)										
46	S1_DBG_CODE	AI_29	542	03.04	index	R	Sys 1 Debug Code										
47	S1_FAN_STAGE	AI_30	543	03.04	count	R	Sys 1 Condenser Fan Stage										
48	S2_DBG_CODE	AI_31	544	03.04	index	R	Sys 2 Debug Code										
49	S2_FAN_STAGE	AI_32	545	03.04	count	R	Sys 2 Condenser Fan Stage										
50	CONTROL_MODE	AI_33	546	03.04	count	R	Unit Control Mode (0=Leaving Water, 1=Return Water, 2=Discharge Air, 3=Suction Press, 4=Cooling, 5=Heating)										
51	AR_TIME	AI_34	547	03.04	seconds	R	Anti-Recycle Time (Programmed)										
52	LIGHT_OUT	AI_35	548	03.04	F°	R	Leaving Chilled Liquid Temp Cutout										
53	LOW_AMB_OUT	AI_36	549	03.04	F°	R	Low Ambient Temperature Cutout										
54	SUCT_P_CO_HT	AI_37	550	03.04	PSIG	R	Low Suction Pressure Cutout Heating (HP Only)										
55	L_SUCT_P_CO	AI_38	551	03.04	PSIG	R	Low Suction Pressure Cutout (Cooling on HP units)										
56	H_DSCH_P_CO	AI_39	552	03.04	PSIG	R	High Discharge Pressure Cutout										
57	COOL_SETP	AI_40	553	03.04	F°	R	Setpoint										
58	SP_SETP_S1	AI_41	554	03.04	F°	R	Setpoint 1 (SP Control)										
59	CONTROL_RG	AI_42	555	03.04	F°	R	Cooling Range										
60	SP_CTL_RG_S1	AI_43	556	03.04	F°	R	Cooling Range 1 (SP Control)										
61	SP_SETP_S2	AI_44	557	03.04	F°	R	Setpoint 2 (SP Control)										
62	HEAT_SETP	AI_45	558	03.04	F°	R	Heating Setpoint (HP Only)										
63	SP_CTL_RG_S2	AI_46	559	03.04	F°	R	Cooling Range 2 (SP Control)										
64	HEAT_RANGE	AI_47	560	03.04	F°	R	Heating Range (HP Only)										
65	S1_DSCH_TEMP	AI_48	561	03.04	F°	R	Sys 1 Discharge Temperature (EEV Only)										
66	S1_DSCH_SHEAT	AI_49	562	03.04	F°	R	Sys 1 Discharge Superheat (EEV Only)										
67	S2_DSCH_TEMP	AI_50	563	03.04	F°	R	Sys 2 Discharge Temperature (EEV Only)										
68	S2_DSCH_SH	AI_51	564	03.04	F°	R	Sys 2 Discharge Superheat (EEV Only)										
69	LEAVING_HOT	AI_52	565	03.04	F°	R	Leaving Liquid Hot Temp (R-410a)										
70	RETURN_HOT	AI_53	566	03.04	F°	R	Return Liquid Hot Temp (R-410a)										
71																	
72																	
74	BINARY MONITOR ONLY POINTS																
75	S1_ALARM	BI_1	1282	01.02.03	0.1	R	Sys 1 Alarm										
76	S2_ALARM	BI_2	1283	01.02.03	0.1	R	Sys 2 Alarm										
77	EVAP_HTR	BI_3	1284	01.02.03	0.1	R	Evaporator Heater Status										
78	EVAP_PUMP	BI_4	1285	01.02.03	0.1	R	Evaporator Pump Status										
79	S1_C1_RUN	BI_5	1286	01.02.03	0.1	R	Sys 1 Comp 1 Run										
80	S2_C1_RUN	BI_6	1287	01.02.03	0.1	R	Sys 2 Comp 1 Run										
81	S1_LLSV	BI_7	1288	01.02.03	0.1	R	Sys 1 Liquid Line Solenoid Valve										
82	S1_MODE_SV	BI_8	1289	01.02.03	0.1	R	Sys 1 Mode Solenoid Valve (HP Only)										
83	S1_HGBV	BI_9	1290	01.02.03	0.1	R	Sys 1 Hot Gas Bypass Valve										
84	S1_BHS	BI_10	1291	01.02.03	0.1	R	Bivalent Heat Source (HP Only)										
85	S1_C2_RUN	BI_11	1292	01.02.03	0.1	R	Sys 1 Comp 2 Run										
86	S2_C2_RUN	BI_12	1293	01.02.03	0.1	R	Sys 2 Comp 2 Run										
87	S2_LLSV	BI_13	1294	01.02.03	0.1	R	Sys 2 Liquid Line Solenoid Valve										
88	S2_MODE_SV	BI_14	1295	01.02.03	0.1	R	Sys 2 Mode Solenoid Valve (HP Only)										
89	LEAD_SYS	BI_15	1296	01.02.03	0.1	R	Lead System (0 = Sys 1, 1 = Sys 2)										
90	S1_C3_RUN	BI_16	1297	01.02.03	0.1	R	Sys 1 Comp 3 Run										
91	S2_C3_RUN	BI_17	1298	01.02.03	0.1	R	Sys 2 Comp 3 Run										
92	CH_LIQ_TYPE	BI_18	1299	01.02.03	0.1	R	Chilled Liquid Type (0=Water, 1=Glycol)										
93	AMB_MODE	BI_19	1300	01.02.03	0.1	R	Ambient Control Mode (0=Std Amb, 1=Low Amb)										

TABLE 31 (cont'd) - BACNET AND MODBUS COMMUNICATIONS DATA MAP

ITEM REF NUM	BACnet NAME	BACnet Object/Inst ance	MODBUS ADDRESS	MODBUS Data Type Supported	ENG UNITS	READ WRITE	POINT DESCRIPTION	Point List Code									
								S=Standard; O=Optional; N=Not Available									
								1	2	3	4	5	6	7	8	9	10
94	CNTL_MODE	BI_20	1301	01.02.03	0, 1	R	Local/Remote Control Mode (0=Local, 1=Remote)										
95	DATA_UNIT	BI_21	1302	01.02.03	0, 1	R	Units (0=Imperial, 1=SI)										
96	AUTO_LL	BI_22	1303	01.02.03	0, 1	R	Lead/Lag Control Mode (0=Manual, 1=Auto)										

TABLE A

Code	Operational Codes
0	No Abnormal Condition
1	Unit Switch Off
2	System Switch Off
3	Lock-Out
4	Unit Fault
5	System Fault
6	Remote Shutdown
7	Daily Schedule Shutdown
8	No Run Permissive
9	No Cool Load
10	Anti-Coincidence Timer Active
11	Anti-Recycle Timer Active
12	Manual Override
13	Suction Limiting
14	Discharge Limiting
15	
16	Load Limiting
17	Compressor(s) Running
18	
19	
20	
21	
22	
23	
24	
25	
26	
27	
28	
29	
30	

TABLE B

Code	Fault Codes
0	No Fault
1	VAC Under Voltage
2	Low Ambient Temperature
3	High Ambient Temperature
4	Low Leaving Chilled Liquid Temp
5	High Discharge Pressure
6	High Differential Oil Pressure
7	Low Suction Pressure
8	High Motor Current
9	LLSV Not On
10	Low Battery Warning
11	High Oil Temperature
12	High Discharge Temperature
13	Improper Phase Rotation
14	Low Motor Current / MP / HPCO
15	Motor Current Unbalanced
16	Low Differential Oil Pressure
17	Ground Fault
18	MP/HPCO Fault
19	Low Evaporator Temperature
20	Incorrect Refrigerant Programmed
21	Power Failure, Manual Reset Required
22	Unit Motor Current
23	Low Superheat
24	Sensor Fault
25	
26	MP/HPCO Inhibit
27	
28	
29	
30	

NOTES

1	The IPU II based YCAL /YCUL Units are configured for Native BACnet MS/TP and Modbus RTU communications. The Microgateway product is not required for these 2 interfaces
2	
3	BACnet Object Types: 0= Analog In, 1 = Analog Out, 2= Analog Value, 3= Binary In, 4 = Binary Output, 5= Binary Value, 8= Device, 15 = Alarm Notification (0 -127 are reserved ASHRAE Objects)
4	WC= Inches of water column; CFM = Cubic Feet per Minute; FPM = Feet per Minute; PSI = Lbs per square inch; Pa = Pascals; kPa = Kilopascals; PPM = Part Per Million; k/kg = Kilograms per Kilogram
5	See the applicable Middle Market Chiller Operations Manual for more details
6	The YCWL uses the same firmware as a YCAL, it just ignores Fan Control
7	
8	
9	
10	


Yorktalk 2 Communications

Received Data (Control Data)

The unit receives eight data values from the MicroGateway or E-Link. The first four are analog values and the last four are digital values. These eight data values are used as control parameters when in REMOTE mode. When the unit is in LOCAL mode, these eight values are ignored. If the unit receives no valid YorkTalk 2 transmission for 5 minutes it will revert back to all local control values. *Table 32 “Yorktalk 2 Communications Data Map” lists the control parameters.* These values are found under feature 54 in the MicroGateway or E-Link.

Transmitted Data

After receiving a valid transmission from the MicroGateway or E-Link, the unit will transmit either operational data or history buffer data depending on the “History Buffer Request” on ENG PAGE 10. Data must be transmitted for every page under feature 54. If there is no value to be sent to a particular page, a zero will be sent. *Table 32 “Yorktalk 2 Communications Data Map” shows the data values and page listings for this unit.*

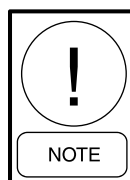

The latest point map information is listed on the Johnson Controls Equipment Integration website.

TABLE 32 - YORKTALK 2 COMMUNICATIONS DATA MAP

YCAL/YCWL/YLAA Middle Market w/ 2050, 2550										York Talk 2										MicroGateway / ELINK										Micro Board: 031-02050/02550									
Item	Ref.	Version	Date	YORK P N	Checksum	Baud	COMMENTS																																
1		C.MMC.03.02		031-02049-001	944D	4800	YCAL Micro Board 031-02050-xxx																																
2		C.MMC.03.01		031-02049-001	964B	4800	YCAL Micro Board 031-02050-xxx																																
3		C.MMC.03.00		031-02049-001	2226	4800	YCAL Micro Board 031-02050-xxx																																
4		C.MMC.13.xx		flash	xxxx	4800	YCAL Micro Board 031-02550-xxx, IPU 2 board.																																
5		C.MMC.13.xx		flash	xxxx	4800	YCWL (water cooled version) Micro Board 031-02550-xxx, IPU 2 board.																																
6		C.MMC.13.02		flash	xxxx	4800	Micro Board 031-02550-xxx . Fix native Modbus communications (SCR . Fix Café Metric functionality (SCR-766)																																
7																																							
8																																							
9																																							
10																																							
Use ASCII page column for interfaces utilizing an ASCII XL Translator or MicroGateway to communicate to a chiller LINC																																							
ENG PAGE REF	ASCII PAGE REF	GPIC Object Type	York Talk Point Type	ISN LINC Descriptive Text	York Talk Character Position	N2 Address	POINT LIST CODE: S = STANDARD O = OPTIONAL										N = NOT AVAILABLE										ENG PAGE REF												
							POINT LIST DESCRIPTION										1 2 3 4 5 6 7 8 9 10																						
P03	P01		A. Control			ADF 1	Setpoint										S S S S S										P03												
P04	P02		A. Control			ADF 2	Load Limit Stage (0, 1, 2)										S S S S S										P04												
P05	P03		A. Control			ADF 3	Heating Setpoint. (HP and YCWL HP)										S S S S S										P05												
P06	P04		A. Control			ADF 4	Mode (HP and YCWL HP only) (0=Panel, 1= Cooling, 2 = Heating)										O O O O O										P06												
P07	P05		D. Control			BD 1	Start/Stop Command										O O O O O										P07												
P08	P06		D. Control			BD 2											S S S S S										P08												
P09	P07		D. Control			BD 3																					P09												
P10	P08		D. Control			BD 4	History Buffer Request										S S S S S										P10												
P11	P09		A. Monitor		8 - 11	ADF 5	Leaving Chilled Liquid Temp										S S S S S										P11												
P12	P10		A. Monitor		12 - 15	ADF 6	Return Chilled Liquid Temp										S S S S S										P12												
P13	P11		A. Monitor		16 - 19	ADF 7	Leaving Hot Liquid Temp (R-410a) Heat Mode Only										O O O O O										P13												
P14	P12		A. Monitor		20 - 23	ADF 8	Discharge Air Temp (Cond Unit) Return Hot Liquid Temp (410a- Heat Mod										S S S S S										P14												
P15	P13		A. Monitor		24 - 27	ADF 9	Leaving Liquid Temp Hot (R-410a)										O O O O O										P15												
P16	P14		A. Monitor		28 - 31	ADF 10	Ambient Air Temperature										S S S S S										P16												
P17	P15		A. Monitor		32 - 35	ADF 11	Sys 1 Suction Superheat (EEV only)										O O O O O										P17												
P18	P16		A. Monitor		36 - 39	ADF 12	Sys 1 Run Time (seconds)										S S S S S										P18												
P19	P17		A. Monitor		40 - 43	ADF 13	Sys 1 Suction Pressure										S S S S S										P19												
P20	P18		A. Monitor		44 - 47	ADF 14	Sys 1 Discharge Pressure										S S S S S										P20												
P21	P19		A. Monitor		48 - 51	ADF 15	Sys 1 Cooler Inlet Refrigerant Temperature(R-407c Only)										S S S S S										P21												
P22	P20		A. Monitor		52 - 55	ADF 16																					P22												
P23	P21		A. Monitor		56 - 59	ADF 17	Sys 1 EEV Output % (EEV only)										O O O O O										P23												
P24	P22		A. Monitor		60 - 63	ADF 18	Sys 1 Anti- Recycle Timer										S S S S S										P24												
P25	P23		A. Monitor		64 - 67	ADF 19	Anti-Coincident Timer										S S S S S										P25												
P26	P24		A. Monitor		68 - 71	ADF 20	Sys Suction Temp (EEV only)										O O O O O										P26												
P27	P25		A. Monitor		72 - 75	ADF 21	Sys 2 Run Time (seconds)										S S S S S										P27												
P28	P26		A. Monitor		76 - 79	ADF 22	Sys 2 Suction Pressure										S S S S S										P28												
P29	P27		A. Monitor		80 - 83	ADF 23	Sys 2 Discharge Pressure										S S S S S										P29												
P30	P28		A. Monitor		84 - 87	ADF 24	Sys 2 Cooler Inlet Refrigerant Temperature (R-407c systems Only)										S S S S S										P30												
P31	P29		A. Monitor		88 - 91	ADF 25	Sys 2 Defrost Temperature (HP only)										O O O O O										P31												
P32	P30		A. Monitor		92 - 95	ADF 26	Sys 2 Suction Superheat (EEV only)										O O O O O										P32												
P33	P31		A. Monitor		96 - 99	ADF 27	Sys 2 Anti-Recycle Timer										S S S S S										P33												
P34	P32		A. Monitor		100 - 103	ADF 28	Sys 2 EEV Output % (EEV only)										O O O O O										P34												
P35	P33		A. Monitor		104 - 107	ADF 29	Number of Compressors										S S S S S										P35												
P36	P34		D. Monitor		108	BD 5	Sys 1 Alarm										S S S S S										P36												
P37	P35		D. Monitor		109	BD 6	Sys 2 Alarm										S S S S S										P37												
P38	P36		D. Monitor		110	BD 7	Evaporator Heater Status										S S S S S										P38												
P39	P37		D. Monitor		111	BD 8	Evaporator Pump Status										S S S S S										P39												
P40	P38		D. Monitor		112	BD 9	Sys 1 Compressor 1 Run										S S S S S										P40												
P41	P39		D. Monitor		113	BD 10	Sys 2 Compressor 1 Run										S S S S S										P41												
P42	P40		D. Monitor		114	BD 11	Sys 1 Liquid Line Solenoid Valve										S S S S S										P42												

TABLE 32 (cont'd) - YORKTALK 2 COMMUNICATIONS DATA MAP

ENG PAGE REF	ASCLL PAGE REF	GPIC Object Type	York Talk Point Type	ISN LINC Descriptive Text	York Talk Character Position	N2 Address	POINT LIST CODE: S = STANDARD O = OPTIONAL		N = NOT AVAILABLE										ENG PAGE REF
							POINT LIST DESCRIPTION		1	2	3	4	5	6	7	8	9	10	
P43	P41		D. Monitor		115	BD 12	Sys 1 Hot Gas Bypass Valve		S	S	S	S	S	S					P43
P44	P42		D. Monitor		116	BD 13	Sys 1 Compressor 2 Run		S	S	S	S	S	S					P44
P45	P43		D. Monitor		117	BD 14	Sys 2 Compressor 2 Run		S	S	S	S	S	S					P45
P46	P44		D. Monitor		118	BD 15	Sys 2 Liquid Line Solenoid Valve		S	S	S	S	S	S					P46
P47	P45		D. Monitor		119	BD 16	Lead System (0 = Sys 1, 1 = Sys 2)		S	S	S	S	S	S					P47
P48	P46		D. Monitor		120	BD 17	Sys 1 Compressor 3 Run		S	S	S	S	S	S					P48
P49	P47		D. Monitor		121	BD 18	Sys 2 Compressor 3 Run		S	S	S	S	S	S					P49
P50	P48		D. Monitor		122	BD 19	Chilled Liquid Type (0=Water, 1=Glycol)		S	S	S	S	S	S					P50
P51	P49		D. Monitor		123	BD 20	Ambient Control Mode (0=Std Amb, 1=Low Amb)		S	S	S	S	N						P51
P52	P50		D. Monitor		124	BD 21	Local/Remote Control Mode (0=Local, 1=Remote)		S	S	S	S	S						P52
P53	P51		D. Monitor		125	BD 22	Units (0=Imperial, 1=S)		S	S	S	S	S						P53
P54	P52		D. Monitor		126	BD 23	Lead/Lag Control Mode (0=Manual, 1=Auto)		S	S	S	S	S						P54
P55	P53		D. Monitor		127	BD 24	Sys 2 Hot Gas Bypass Valve		S	S	S	S	S						P55
P56	P54		Code Monitor		128	ADI 1	*Sys 1 Operational Code		S	S	S	S	S						P56
P57	P55		Code Monitor		129	ADI 2	*Sys 1 Fault Code		S	S	S	S	S						P57
P58	P56		Code Monitor		130	ADI 3	*Sys 2 Operational Code		S	S	S	S	S						P58
P59	P57		Code Monitor		131	ADI 4	*Sys 2 Fault Code		S	S	S	S	S						P59
P60	P58		Code Monitor		132	ADI 5			S	S	S	S	S						P60
P61	P59		Code Monitor		133	ADI 6	Sys 1 Condenser Fan Stage		S	S	S	S	S						P61
P62	P60		Code Monitor		134	ADI 7			S	S	S	S	S						P62
P63	P61		Code Monitor		135	ADI 8	Sys 2 Condenser Fan Stage		S	S	S	S	S						P63
P64	P62		Code Monitor		136	ADI 9													P64
P65	P63		Code Monitor		137	ADI 10	Unit Control Mode (0=Lv Wtr, 1=Ret Wtr, 2=Dis Air, 3=SP, 4=Cool, 5=Heat)		S	S	S	S	S						P65
P66	P64		A. Monitor		138 - 141	ADF 30	Anti-Recycle Time (Programmed)		S	S	S	S	S						P66
P67	P65		A. Monitor		142 - 145	ADF 31	Leaving Chilled Liquid Temp Cutout		S	S	S	S	S						P67
P68	P66		A. Monitor		146 - 149	ADF 32	Low Ambient Temperature Cutout		S	S	S	S	S						P68
P69	P67		A. Monitor		150 - 153	ADF 33	Low Suction Pressure Cutout (Heating HP Only)		S	S	S	S	S						P69
P70	P68		A. Monitor		154 - 157	ADF 34	Low Suction Pressure Cutout (Cooling HP only)		S	S	S	S	S						P70
P71	P69		A. Monitor		158 - 161	ADF 35	High Discharge Pressure Cutout		S	S	S	S	S						P71
P72	P70		A. Monitor		162 - 165	ADF 36	Setpoint (local)		S	S	S	S	S						P72
P73	P71		A. Monitor		166 - 169	ADF 37	Cooling Range		S	S	S	S	S						P73
P74	P72		A. Monitor		170 - 173	ADF 38	Setpoint 2 (SP Control), Heating Setpoint (HP and YCWL HP only)		O	O	O	O							P74
P75	P73		A. Monitor		174 - 177	ADF 39	Cool Range Setpoint 2 (SP Control), Heat Range (HP and YCWL HP only)		O	O	O	O							P75
P76	P74		A. Monitor		178 - 181	ADF 40	Sys 1 Discharge Temp (EEV only)		O	O	O	O							P76
P77	P75		A. Monitor		182 - 185	ADF 41	Sys 1 Discharge Superheat (EEV only)		O	O	O	O							P77
P78	P76		A. Monitor		186 - 189	ADF 42	Sys 2 Discharge Temp (EEV only)		O	O	O	O							P78
P79	P77		A. Monitor		190 - 193	ADF 43	Sys 2 Discharge Superheat (EEV only)		O	O	O	O							P79
P80	P78		D. Monitor		194	BD 25													P80
P81	P79		D. Monitor		195	BD 26													P81
P82	P80		D. Monitor		196	BD 27													P82
P83	P81		D. Monitor		197	BD 28													P83
P84	P82		D. Monitor		198	BD 29													P84

NOTE: The Appropriate Product Code Listing Summary Should Accompany Document

TABLE 32 (cont'd) - YORKTALK 2 COMMUNICATIONS DATA MAP

[illegible]

TEMPERATURE CONVERSION CHART

Temperature Conversion Chart -
Actual Temperatures

° F	=	° C	° C	=	° F
0		-17.8	-18		-0.4
4		-15.6	-16		3.2
8		-13.3	-14		6.8
12		-11.1	-12		10.4
16		-8.9	-10		14
20		-6.7	-8		17.6
24		-4.4	-6		21.2
28		-2.2	-4		24.8
32		0.0	-2		28.4
36		2.2	0		32
40		4.4	2		35.6
44		6.7	4		39.2
48		8.9	6		42.8
52		11.1	8		46.4
56		13.3	10		50
60		15.6	12		53.6
64		17.8	14		57.2
68		20.0	16		60.8
72		22.2	18		64.4
76		24.4	20		68
80		26.7	22		71.6
84		28.9	24		75.2
88		31.1	26		78.8
92		33.3	28		82.4
96		35.6	30		86
100		37.8	32		89.6
104		40.0	34		93.2
108		42.2	36		96.8
112		44.4	38		100.4
116		46.7	40		104
120		48.9	42		107.6
124		51.1	44		111.2
128		53.3	46		114.8
132		55.6	48		118.4
136		57.8	50		122
140		60.0	52		125.6
144		62.2	54		129.2
148		64.4	56		132.8
152		66.7	58		136.4
156		68.9	60		140
160		71.1	62		143.6
164		73.3	64		147.2
168		75.6	66		150.8
172		77.8	68		154.4
176		80.0	70		158
180		82.2	72		161.6
184		84.4	74		165.2
188		86.7	76		168.8
192		88.9	78		172.4
196		91.1	80		176
200		93.3	82		179.6
204		95.6	84		183.2
208		97.8	86		186.8
212		100.0	88		190.4
216		102.2	90		194
220		104.4	92		197.6
224		106.7	94		201.2
228		108.9	96		204.8
232		111.1	98		208.4
236		113.3	100		212
240		115.6	102		215.6
244		117.8	104		219.2

Temperature Conversion Chart -
Differential Temperatures

° F	=	° C	° C	=	° F
0		0	0		0
4		2.2	2		3.6
8		4.4	4		7.2
12		6.7	6		10.8
16		8.9	8		14.4
20		11.1	10		18
24		13.3	12		21.6
28		15.6	14		25.2
32		17.8	16		28.8
36		20	18		32.4
40		22.2	20		36
44		24.4	22		39.6
48		26.7	24		43.2
52		28.9	26		46.8
56		31.1	28		50.4
60		33.3	30		54

Pressure Conversion Chart -
Gauge or Differential

PSI	=	BAR	BAR	=	PSI
20		1.38	1.5		21.8
30		2.07	2		29
40		2.76	2.5		36.3
50		3.45	3		43.5
60		4.14	3.5		50.8
70		4.83	4		58
80		5.52	4.5		65.3
90		6.21	5		72.5
100		6.9	5.5		79.8
110		7.59	6		87
120		8.28	6.5		94.3
130		8.97	7		101.5
140		9.66	7.5		108.8
150		10.34	8		116
160		11.03	8.5		123.3
170		11.72	9		130.5
180		12.41	9.5		137.8
190		13.1	10		145
200		13.79	10.5		152.3
210		14.48	11		159.5
220		15.17	11.5		166.8
230		15.86	12		174
240		16.55	12.5		181.3
250		17.24	13		188.5
260		17.93	13.5		195.8
270		18.62	14		203
280		19.31	14.5		210.3
290		20	15		217.5
300		20.69	15.5		224.8
310		21.38	16		232
320		22.07	16.5		239.3
330		22.76	17		246.5
340		23.45	17.5		253.8
350		24.14	18		261
360		24.83	18.5		268.3
370		25.52	19		275.5
380		26.21	19.5		282.8
390		26.9	20		290
400		27.59	20.5		297.3

R410A PRESSURE TEMPERATURE CHART

PSIG	TEMP °F	PSIG	TEMP °F
0	-60	78	20
2	-58	80	21
4	-54	85	24
6	-50	90	26
8	-46	95	29
10	-42	100	32
12	-39	105	34
14	-36	110	36
16	-33	115	39
18	-30	120	41
20	-28	125	43
22	-26	130	45
24	-24	135	47
26	-20	140	49
28	-18	145	51
30	-16	150	53
32	-14	160	57
34	-12	170	60
36	-10	180	64
38	-8	190	67
40	-6	200	70
42	-4	210	73
44	-3	220	76
46	-2	225	78
48	0	235	80
50	1	245	83
52	3	255	85
54	4	265	88
56	6	275	90
58	7	285	92
60	8	295	95
62	10	305	97
64	11	325	101
66	13	355	108
68	14	375	112
70	15	405	118
72	16	500	134
74	17	600	149
76	19	700	159

NOTES

